



DOMETIC CORPORATION

1120 North Main Street, Elkhart, IN 46514


Please Visit: WWW.DOMETIC.COM

Literature number 90361

WATER HEATER INSTALLATION TRIM KIT

Installation Sheet

Revision A, 10/22/18

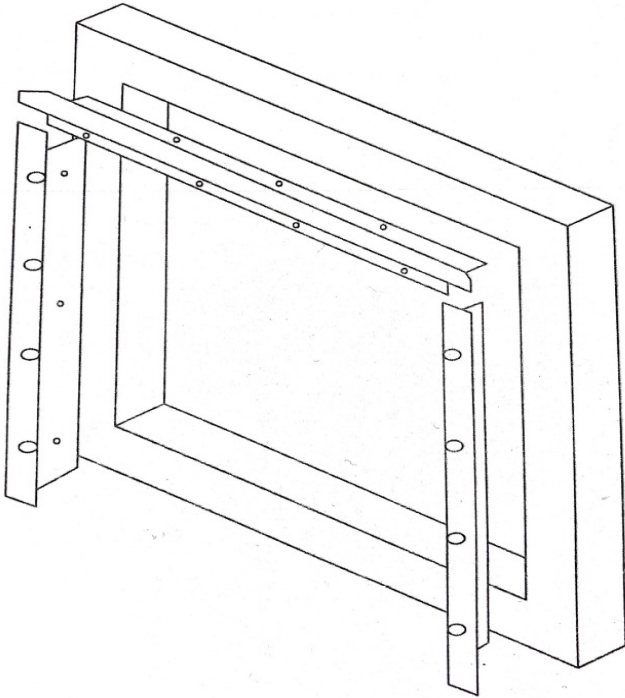

Water Heater Installation Trim Kit

This trim kit allows for replacement of a Suburban 10, 12 or 16 gallon water heater with the exterior dimensions of 16-7/32" wide by 16-7/32" high with an Dometic 10 gallon tradition water heater or an Dometic 10 gallon XT (16 gallon equivalent) water heater 16" wide x 15"1/2 high.

If you are replacing the existing Suburban water heater with an Atwood On-Demand water heater, you will not need to install this kit. The large door (part# 90258 Black, 90260 Polar White or 90261 New White) for On-Demand water heaters includes the appropriate flange kit for retrofit into the existing cutout without the need for this additional kit.

Installation Procedure:

1. Remove the previously installed water heater.
2. Prepare the area by cleaning and removing caulk or fasteners from the previous installation.
3. One at a time install the left, right and top trim pieces into the opening by orienting the pieces as pictured. Place the trim piece flat against the sidewall of the coach. Use three screws to attach each piece of the trim to the coach. These screws will be fastened to the inside wall of the cutout.
4. After attaching the trim to the coach, use a bead of caulk suitable for outdoor use to seal the seam between the coach wall and the trim kit.
5. Install your new water heater per the instructions in the heater's manual.

Suburban is a registered trademark of Airxcel