




DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 91879

DOOR LOCK KIT

Revision A, 10/30/18

DOOR LOCK KIT P/N MPD 91880 - Fits all Dometic Water Heaters

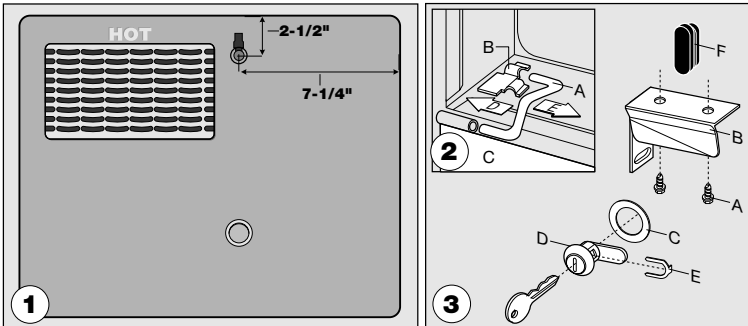

For complete water heater instructions consult MPD - 93755, 93756, 93758.

Removal of Access Door:

1. Unsnap hinge pin ②-A from clip ②-B.
2. Slide cover ②-C from opposite hinge pin.

Removal of Cam Lock & Bracket:

1. Remove hex head screw holding cam lock bracket to flue box.
2. Drill out two rivets holding cam lock bracket to drawn pan.

Installation of Locking Bracket:

1. Align holes in locking bracket with holes in drawn pan where the rivets were drilled out.
2. Secure locking bracket to drawn pan with self drilling screws-③-A provided.
3. Secure flue box to locking bracket-③-B with hex head screw.

Installation of Lock in Door:

1. Measure and drill out a 5/8" hole in door-①. Hole should be free of burrs.
2. Assemble washer-③-C to lock-③-D. Insert lock into 5/8" hole. Assemble lock washer-③-E to back of lock assembly.
3. Install rubber grommet-③-F in remaining rectangular slot.

Installation of Access Door to Unit:

1. Snap hinge pin-②-A into clip-②-B.
2. Slide cover-②-C onto hinge pin.
3. Slide hinge pin into cover, snapping into clip at same time-②-D.




DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 91879

DOOR LOCK KIT

Revision A, 10/30/18

DOOR LOCK KIT P/N MPD 91880 - Fits all Dometic Water Heaters

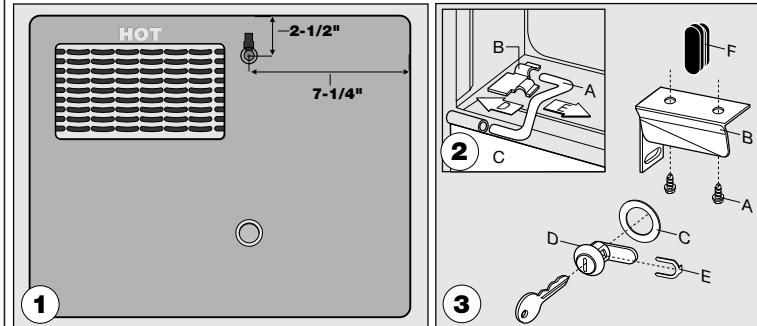

For complete water heater instructions consult MPD - 93755, 93756, 93758.

Removal of Access Door:

1. Unsnap hinge pin ②-A from clip ②-B.
2. Slide cover ②-C from opposite hinge pin.

Removal of Cam Lock & Bracket:

1. Remove hex head screw holding cam lock bracket to flue box.
2. Drill out two rivets holding cam lock bracket to drawn pan.

Installation of Locking Bracket:

1. Align holes in locking bracket with holes in drawn pan where the rivets were drilled out.
2. Secure locking bracket to drawn pan with self drilling screws-③-A provided.
3. Secure flue box to locking bracket-③-B with hex head screw.

Installation of Lock in Door:

1. Measure and drill out a 5/8" hole in door-①. Hole should be free of burrs.
2. Assemble washer-③-C to lock-③-D. Insert lock into 5/8" hole. Assemble lock washer-③-E to back of lock assembly.
3. Install rubber grommet-③-F in remaining rectangular slot.

Installation of Access Door to Unit:

1. Snap hinge pin-②-A into clip-②-B.
2. Slide cover-②-C onto hinge pin.
3. Slide hinge pin into cover, snapping into clip at same time-②-D.




DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 91879

DOOR LOCK KIT

Revision A, 10/30/18

DOOR LOCK KIT P/N MPD 91880 - Fits all Dometic Water Heaters

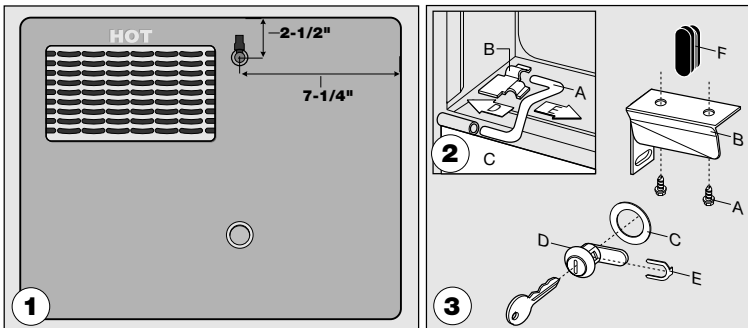

For complete water heater instructions consult MPD - 93755, 93756, 93758.

Removal of Access Door:

1. Unsnap hinge pin ②-A from clip ②-B.
2. Slide cover ②-C from opposite hinge pin.

Removal of Cam Lock & Bracket:

1. Remove hex head screw holding cam lock bracket to flue box.
2. Drill out two rivets holding cam lock bracket to drawn pan.

Installation of Locking Bracket:

1. Align holes in locking bracket with holes in drawn pan where the rivets were drilled out.
2. Secure locking bracket to drawn pan with self drilling screws-③-A provided.
3. Secure flue box to locking bracket-③-B with hex head screw.

Installation of Lock in Door:

1. Measure and drill out a 5/8" hole in door-①. Hole should be free of burrs.
2. Assemble washer-③-C to lock-③-D. Insert lock into 5/8" hole. Assemble lock washer-③-E to back of lock assembly.
3. Install rubber grommet-③-F in remaining rectangular slot.

Installation of Access Door to Unit:

1. Snap hinge pin-②-A into clip-②-B.
2. Slide cover-②-C onto hinge pin.
3. Slide hinge pin into cover, snapping into clip at same time-②-D.




DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 91879

DOOR LOCK KIT

Revision A, 10/30/18

DOOR LOCK KIT P/N MPD 91880 - Fits all Dometic Water Heaters

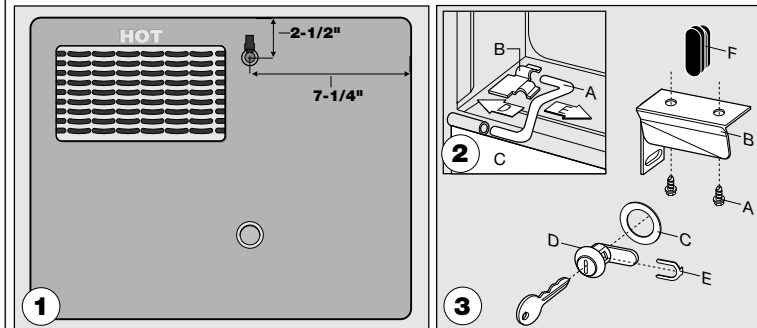

For complete water heater instructions consult MPD - 93755, 93756, 93758.

Removal of Access Door:

1. Unsnap hinge pin ②-A from clip ②-B.
2. Slide cover ②-C from opposite hinge pin.

Removal of Cam Lock & Bracket:

1. Remove hex head screw holding cam lock bracket to flue box.
2. Drill out two rivets holding cam lock bracket to drawn pan.

Installation of Locking Bracket:

1. Align holes in locking bracket with holes in drawn pan where the rivets were drilled out.
2. Secure locking bracket to drawn pan with self drilling screws-③-A provided.
3. Secure flue box to locking bracket-③-B with hex head screw.

Installation of Lock in Door:

1. Measure and drill out a 5/8" hole in door-①. Hole should be free of burrs.
2. Assemble washer-③-C to lock-③-D. Insert lock into 5/8" hole. Assemble lock washer-③-E to back of lock assembly.
3. Install rubber grommet-③-F in remaining rectangular slot.

Installation of Access Door to Unit:

1. Snap hinge pin-②-A into clip-②-B.
2. Slide cover-②-C onto hinge pin.
3. Slide hinge pin into cover, snapping into clip at same time-②-D.