



DOMETIC CORPORATION
1120 North Main Street, Elkhart, IN 46514
Please Visit: WWW.DOMETIC.COM




LITERATURE NUMBER **MPD 92691**

XT WATER HEATER
REPLACEMENT VALVE KIT
10 GALLON
PATENT PENDING


ENGLISH

•Installation

Revision B, 10/30/18

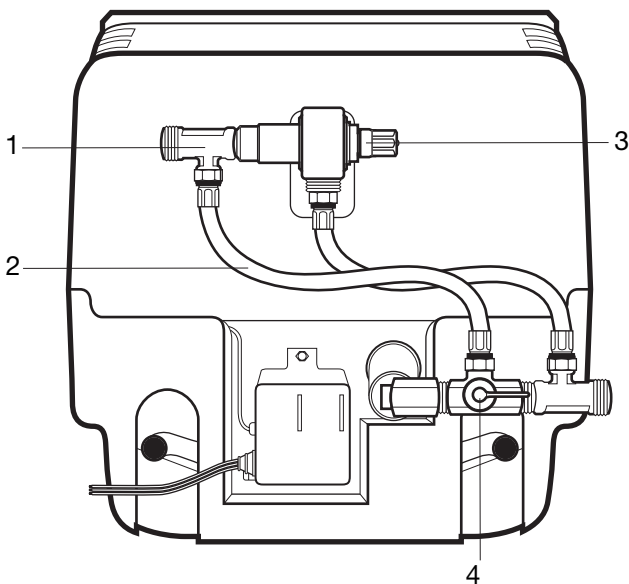

10 GALLON XT
2004-2005

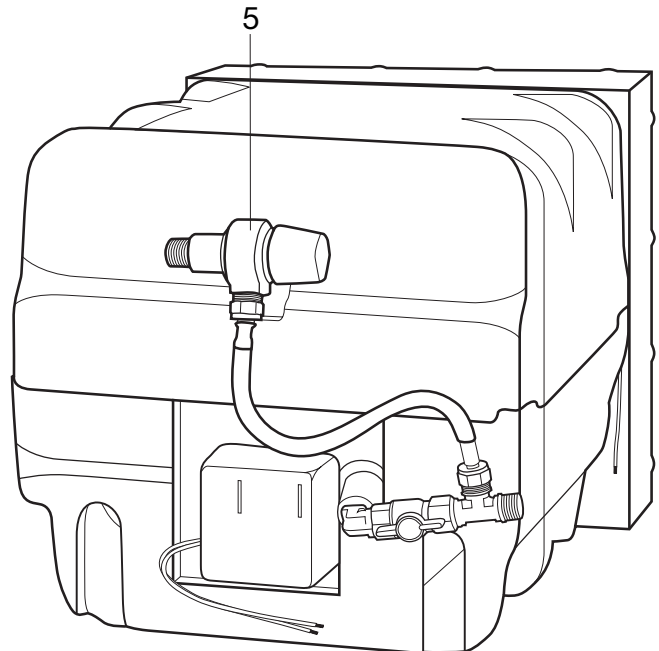

10 GALLON XT
KIT MPD 92690
NEW FOR 2005-2006

1. Remove water lines (1), flexible hoses (2), mixing valve (3) and inlet plumbing components (4).
2. Install new mixing valve (5) with teflon tape. Use three wraps and pipe thread sealer to leading threads and install to minimum 35 ft/lbs.
3. Install male/male 90 degree fitting with a minimum of three wraps of teflon tape, stopping at approximately 1 o'clock on last turn.
4. Assemble tee to ball valve using a minimum of three wraps of teflon tape.
5. Install valve/tee assembly to elbow using a minimum of three wraps of teflon tape.
6. Finish turn on completed elbow/valve/tee assembly to horizontal position.
7. Adjust tee and valve so valve handle operates and tee is pointing branch thread upward.
8. Install flexible hose following instructions on hose tag.
9. Reconnect water lines. Apply Valve Position Sticker (MPD 92828) on back near valve.
10. Pressurize system to maximum 50 psi and check all connections for leaks with leak detecting solution.