



1120 North Main Street • Elkhart, IN 46514
PHONE: 574-264-2131 • FAX: 574-206-9713
INTERNET: <http://www.atwoodmobile.com>

LITERATURE NUMBER **80658**

REPAIR KIT INSTRUCTIONS FOR 88555, 88600, 88007, & 88010 COUPLERS

ENGLISH

Installation • Operation • Maintenance



WARNING **PERSONAL INJURY / PRODUCT DAMAGE**

- Replace couplers that are worn or damaged, or not operating freely.



WARNING **PRODUCT DAMAGE**


- Couplers must be disengaged from hitch ball.
- Latch must be in closed position for repairs.

Use Kit 88051 for 88555 and 88600
2"

Use Kit 88061 for 88007 and 88010
2 5/16"

REMOVAL OF PARTS


1

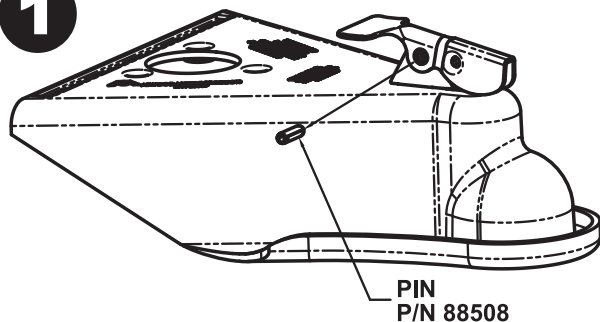

REMOVE PIN (P/N 88508)

Use small punch and hammer to remove pin.
Discard pin.


2

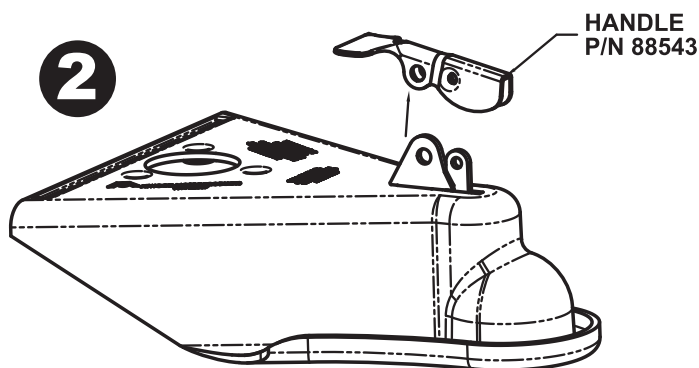

REMOVE HANDLE (P/N 88543)

Discard handle.


3

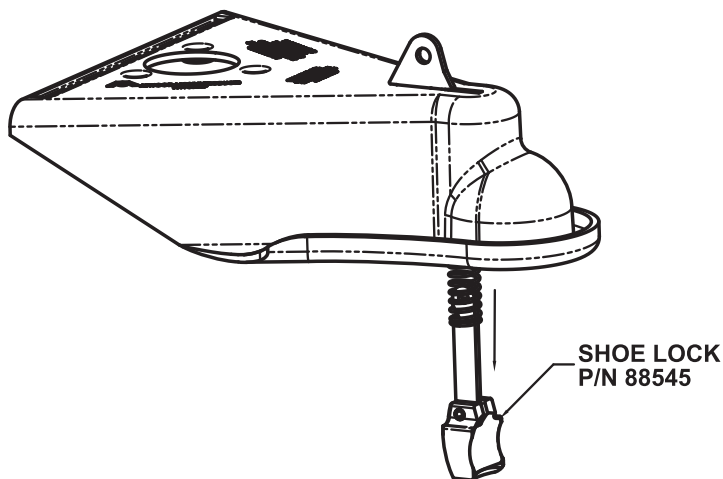

PULL SHOE LOCK (P/N 88545) ASSEMBLY THROUGH BOTTOM OF COUPLING.

Discard shoe lock and spring.

4

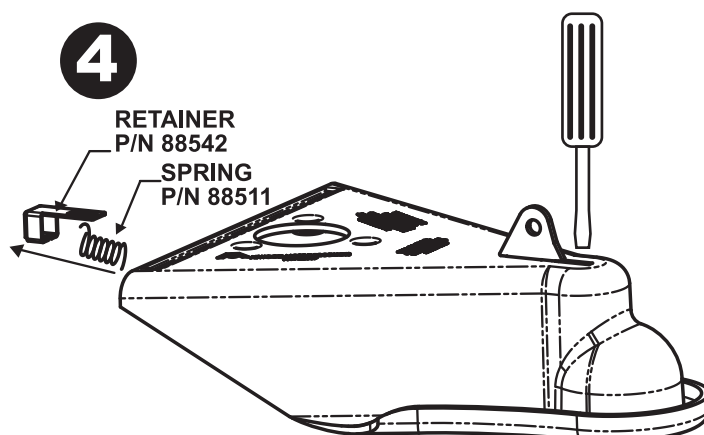


REMOVE SPRING (P/N 88511)

Push retainer forward from underneath coupler.
Insert a screw driver through slot
on top of coupler,
push back of retainer downward,
pull out through bottom of coupler.
Discard old parts.

INSTALLATION PROCEDURE

5

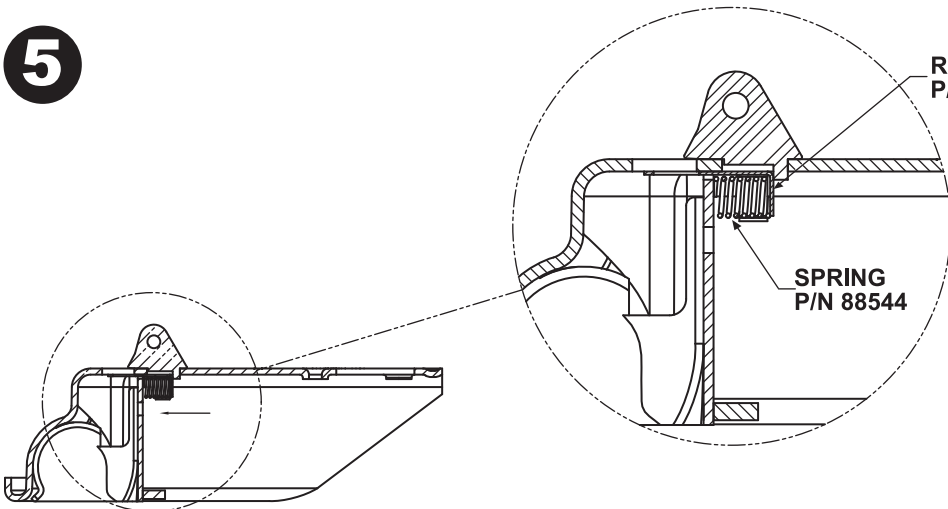


PLACE SPRING (P/N 88544) INTO RETAINER (P/N 88542).

Place retainer into slot on underside body, compress spring to allow for retainer to fit behind the coupler tab protruding through body. Hold retainer in place.

TIP: Practice without spring. Align in slot and move side to side.

6

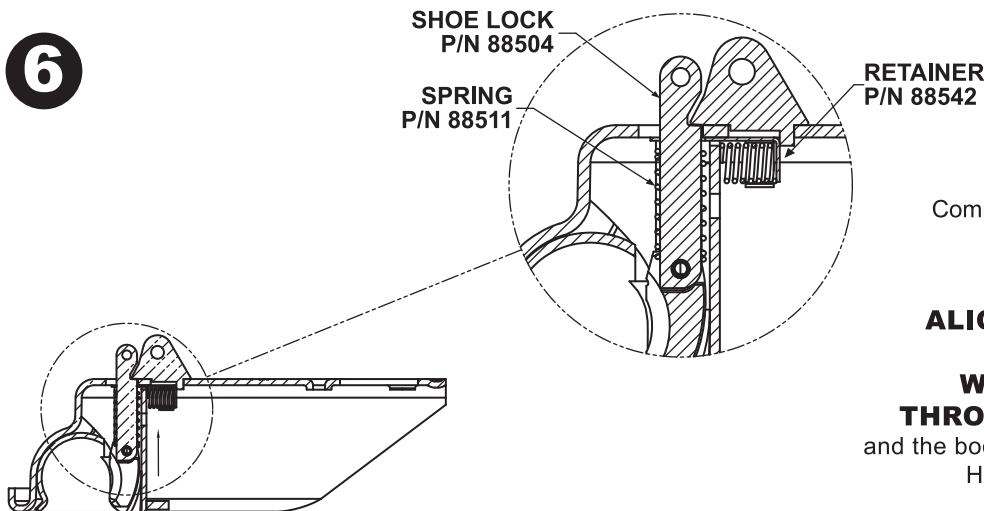


Compress spring as needed.

ALIGN SHOE LOCK ASSEMBLY (P/N 88545)

WITH SPRING (P/N 88511) THROUGH RETAINER (P/N 88542).

and the body slot protruding through top of the body. Hold shoe lock assembly in place.

7

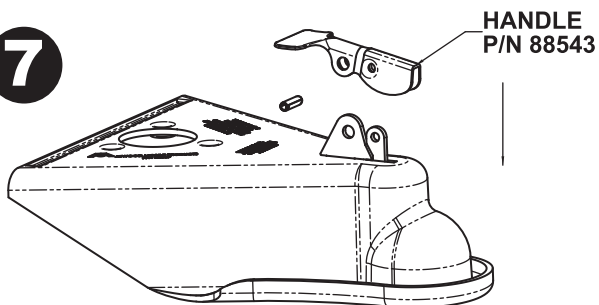


ALIGN HANDLE (P/N 88543) OVER SHOE.

Lock assembly and align the holes.

NOTE: Compress shoe lock assembly as needed. Use padlock to align holes. May need 2 people.

8

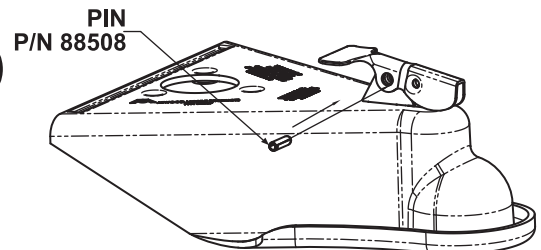


PUSH THE PIN (P/N 88508) THROUGH HANDLE AND SHOE LOCK ASSEMBLY UNTIL CENTERED ACROSS HANDLE.

Check coupler for proper latching on a proper diameter ball. Insert ball, close coupler.

NOTE: Start the pin in the handle. May need a 2nd person to help alignment.

9

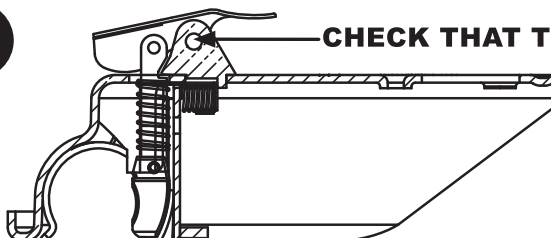

CHECK THAT THE COUPLER CAN BE LOCKED WITH A PADLOCK