



A&E TRIM LINE AWNING

MODELS:

934X07.001

934X08.001

934X09.001

934X10.001

934X11.001

934X12.001

934X13.001

USA
SERVICE OFFICE
The Dometic Corp.
509 So. Poplar St.
LaGrange, IN 46761

CANADA
Dometic Dist.
866 Lings Dr.
Cambridge, Ontario
CANADA N3H 2N7

INSTALLATION & OPERATING INSTRUCTIONS

MODELS

934X07.001

934X08.001

934X09.001

934X10.001

934X11.001

934X12.001

934X13.001

APPLICATION:


The A&E Trim Line Awning is designed and intended for mounting on pop-up tent trailers and pickup campers.

IMPORTANT: Read the entire installation procedure before starting the installation.

NOTE: The Dometic Corporation assumes no liability for damages or injury resulting from installation or operation of this product.

1. **A.** Install vinyl welt of awning bag into awning rail by inserting vinyl welt into one end of awning rail and sliding awning into position. (See FIG. 1.A)
- B.** If the awning is to be left mounted during travel, secure each end by drilling a 7/64" diameter hole and installing a #6 x 5/8" sheet metal screw in each end. (See FIG. 1.B)


NOTE: When unzipping bag or untying poles, be sure to hold poles so loose poles do not fall out of the bag.

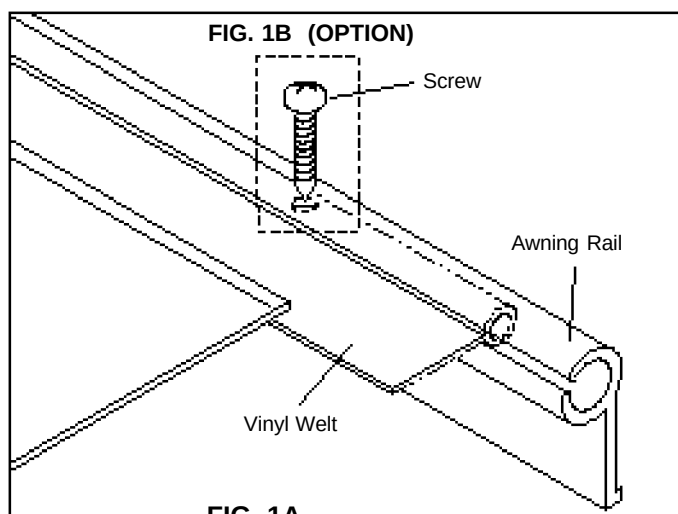

2. Unzip bag and untie and remove poles from bag.
3. Undo hook and loop fastener strap and unroll awning fabric.
4. Insert pin of rafter pole through the eye of the adjustable pole and through hole in the roller tube. Repeat for other side. (See FIG. 4)
5. Compress the rafter poles and place the end of the rafters against the side of the camper, under the edge of the awning fabric. The ends of the bag will be held up by the rafters. (See FIG. 6)
6. Take the strip of adhesive backed hook and loop fastener from the kit bag and cut it into four equal pieces. Two of the pieces should be used to attach the back flap of the bag to the underside of the awning.
7. The other two hook and loop fastener pieces should be used to attach the edge of the awning fabric to the rafters. (See FIG. 7)
8. To raise awning, twist lower adjustable pole while holding upper pole and raise awning to desired height. Twist lower pole to lock in position. (See FIG. 8). **NOTE:** If application requires longer adjustable poles, order Kit No. 3104264.001 from your Dealer.
- NOTE:** The wire tie-down loops are provided in the adjustable poles if you desire to tie the awning down to tent stakes (provided in the hardware bag).
9. To close awning, reverse Steps 2 through 8. **NOTE:** During rain, awning should be closed or one end lowered to allow water to run off.
10. After rolling up the awning fabric, use hook and loop fastener strap to hold awning in place while storing the poles. Zip one end of the bag 1/3 closed and slide the poles into that end of the bag. Now tie the free end of the poles with the end tie strap. Now unzip the bag and tie the other end strap. Zip the bag closed.

NOTE: If the awning is installed above the door, an A&E Door Roller Kit (Part No. 930004) may be installed to prevent damage to fabric.

For longer awning life and better performance, use only genuine A&E awning care products, available at finer RV retailers.

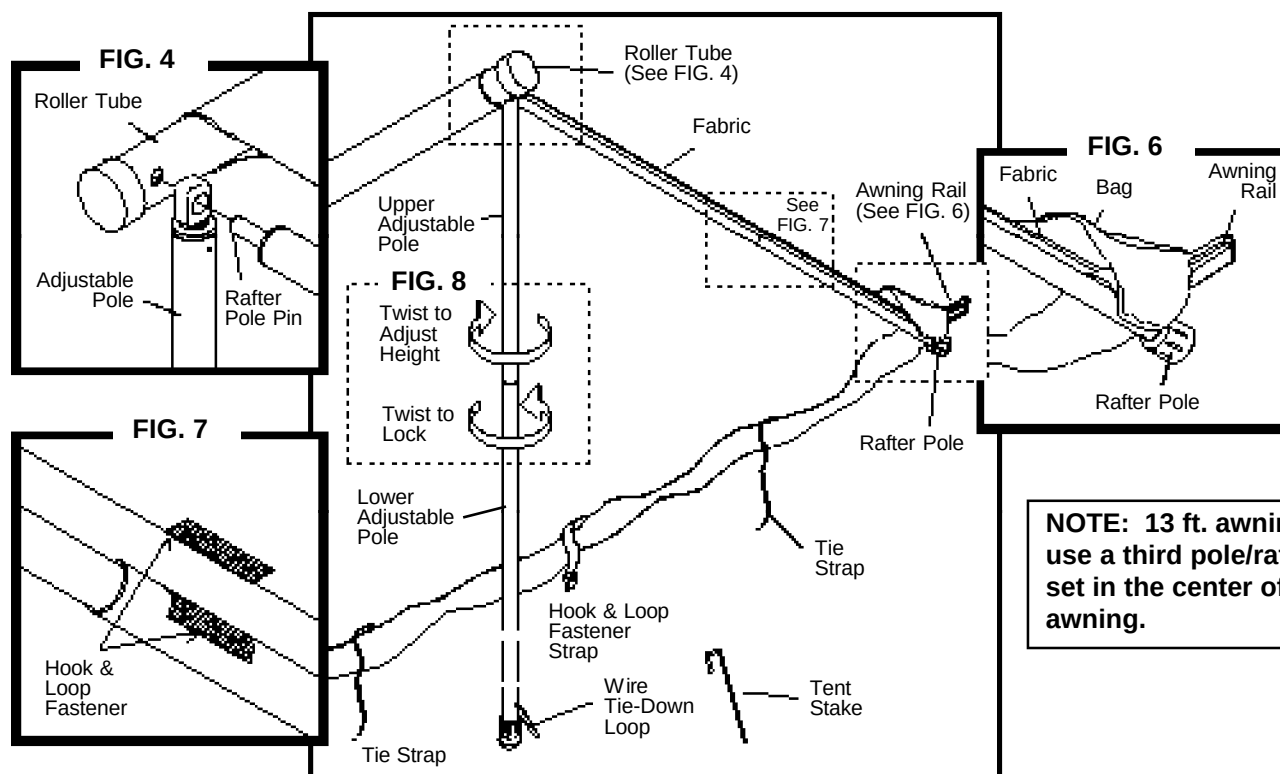

NOTE: 13 ft. awnings use a third pole/rafter set in the center of the awning.