


TRIMLINE SCREEN ROOM SKIRT KIT PART NO. 947200.XXX

The following modifications will allow for a custom fit of the A&E Trimline Screen Room to most Pop-Up Campers

INSTRUCTIONS

Tools Required: Scissors or Knife, Tape Measure

1. Set up the A&E Trimline Awning by following the instructions included with the awning.
2. Apply the adhesive-backed Velcro fastener to the rafter poles and roller tube as directed in the Screen Room Instructions.
3. Attach the Screen Room to the roller tube and rafter poles. **DO NOT** install snaps to vehicle sidewall at this time.

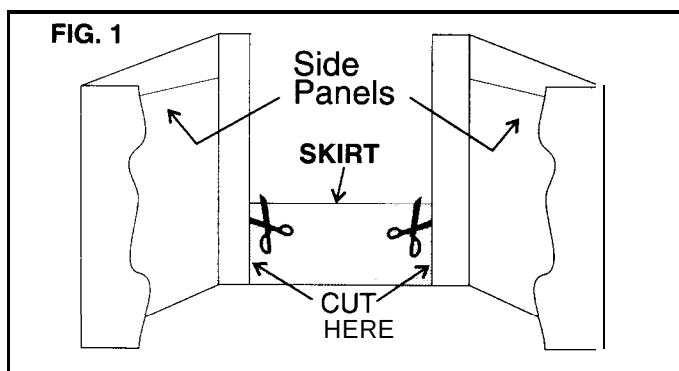

4. Using a sharp knife or scissors, cut the existing skirt from the Screen Room by cutting along the seam where it is joined to the side panel. (FIG. 1)
5. Using the appropriate adhesive-backed Velcro fastener supplied, secure strips on the side panel that will align with the Velcro fastener sewn into the camper sidewall at the lifter mechanism flaps. Attach so that the side panel can be secured between the camper sidewall and lifter mechanism flaps. (FIG. 2)

NOTE: Both hook and loop sides of the adhesive-backed Velcro are supplied with this Kit. Use the appropriate Velcro to sufficiently attach the Screen Room to the camper.

6. Repeat the above procedure for the other side.
7. Next, align snaps to secure the lower portion of the Screen Room side panel to the lower sidewall of the camper. Install snaps per Screen Room Instructions.

8. Secure the upper portion of the side panel to the roof section in the following manner: Accordion fold the side panel to take up extra material. Then locate snap and use Velcro fasteners to secure fold to side wall.
 9. Locate the skirt attachment to either the longer edge of sidewall or the underside of camper using the snaps provided. Next, attach remaining adhesive-backed Velcro fastener to the ends of the Screen Room side panel (where the previous skirt was cut off). Attach Velcro fasteners to secure skirt to Screen Room.
10. Conversion strips are also supplied with this Kit to connect Hook Style Velcro sewn into the camper tent. See FIG. 3.

