

AUTOMATIC CRADLE SUPPORT INSTALLATION


NOTE: Read this entire installation procedure before starting. The Dometic Corporation assumes no liability for damages or injuries resulting from installation or operation of this product.

1. STANDARD INSTALLATION

- A. With awning closed, position the cradle assembly at the center of the awning* so that it has a minimum of 3" of unobstructed clearance below the awning rail.
- B. Mark position of bracket on side of vehicle.
- C. Reposition cradle assembly 1/4" above marks. At this position, pre-drill with #7 or 3/16" drill bit.
- D. Secure bracket using two (2) #14 x 1-1/2" hex head screws provided.

* When using two cradle supports, divide the awning length into three equal parts.

NOTE: To prevent leakage, use a small dab of silicone sealant on each screw where a hole has been drilled.

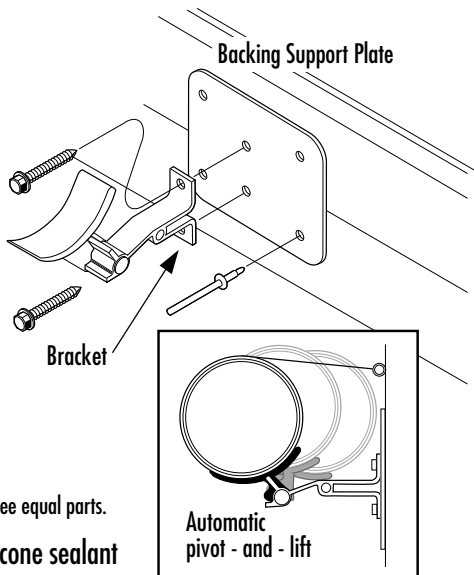

2. USE OF BACKING SUPPORT PLATE (for installations where there is not sufficient support for the bracket)

- A. Using the support plate as a template, mark and drill four 3/16" dia. holes through the vehicle side.
- B. Secure the plate using the 3/16" dia. oscar rivets provided.
- C. Install the bracket directly onto the plate.

A product of The Dometic Corporation, LaGrange IN 46761

It's Right... It's the Real A&E!