

COMMON SENSE FASTENER KIT

Part No. 3106384.005

KIT CONTAINS:


- (25) Eyelets
- (25) Washers
- (25) Turnbuckle Fasteners

TOOLS REQUIRED:


- Hammer
- Punch (Part No. 3106388.006)
- Silicone
- Drill & 5/32" Drill Bit

1. INSTALLING EYELETS


- A. Locate the new eyelets approximately 1 inch under existing snaps and mark with a pencil.
- B. Use a hammer and punch (Dometic Part No. 3106388.006) to cut holes at the marks made in Step A. Use a piece of soft wood, such as pine, under the fabric to keep from dulling the punch. Hit punch sharply with a hammer to cut fabric. (See FIG. 1)

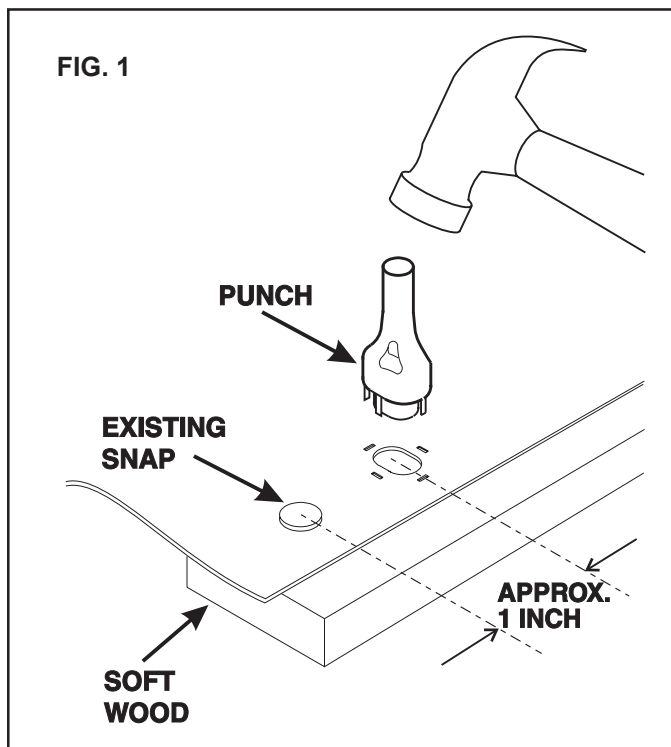

- C. Install the eyelet over the hole and place a washer on the backside of fabric. (See FIG. 2)

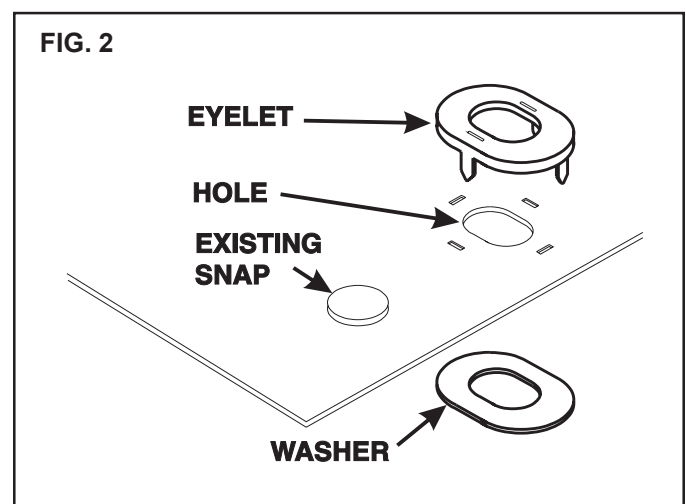


- D. Bend legs of the eyelet over washer using a hammer or pliers. (See FIG. 3)

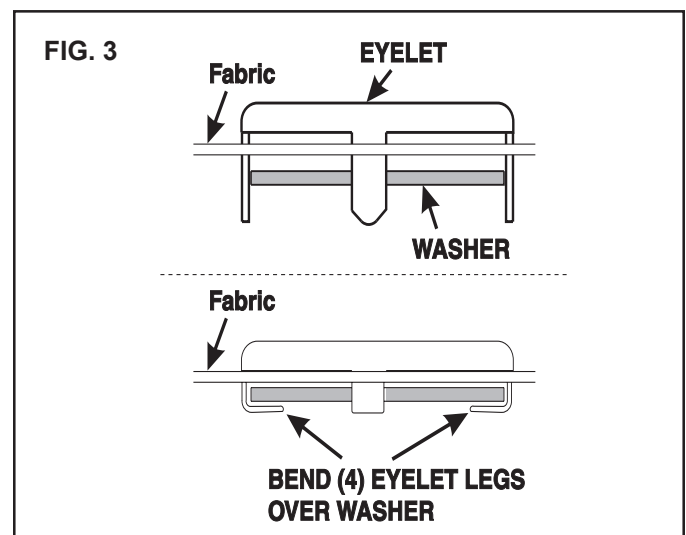

- E. Repeat Steps A through D for the other snap locations.

2. INSTALLING TURNBUCKLE FASTENERS

- A. Hang Room per the Installation Instructions supplied with the Patty O' Room.
- B. Mark Patty O' Room eyelet locations on sidewall of the vehicle.
- C. At the marks, drill a hole using a 5/32" drill bit. Screw the turnbuckle fastener into the hole. Use silicone to prevent water leakage. (See FIG. 4)

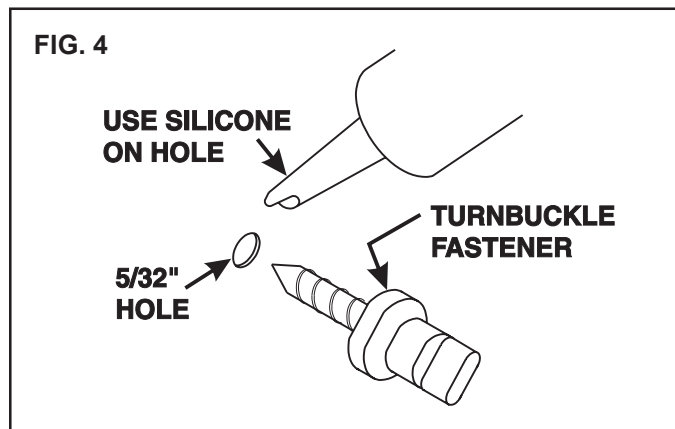

- D. Repeat Steps A through C at all eyelet locations.

3. INSTALLING FABRIC OVER FASTENERS

- A. Push eyelet in fabric over turnbuckle.
- B. Twist the turnbuckle fastener 1/4-turn to hold fabric.

