





"FLUSH MOUNT" SIDE VENT

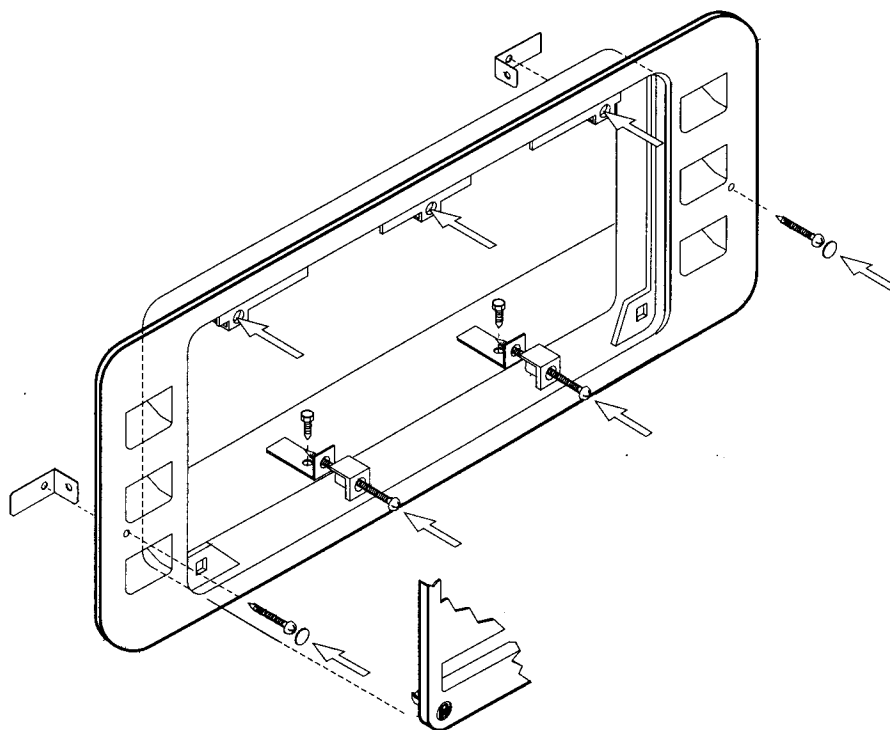

1. Install frame as shown at seven points.
2. Opening size is the same as for current metal side vent.
3. Two styles of brackets are included. Use the style which best suits the application.
4. Use #10 screws; length required is determined by the thickness of vehicle wall.
5. After sealant is applied, position the frame into the cutout area.
6. Tighten screws until firm. **DO NOT overtighten or distortion will take place.**
7. Insert door and lock with quarter-turn fasteners on each side.

Alternate Application of "Flush Mount" Side Vent in Framed Cutout

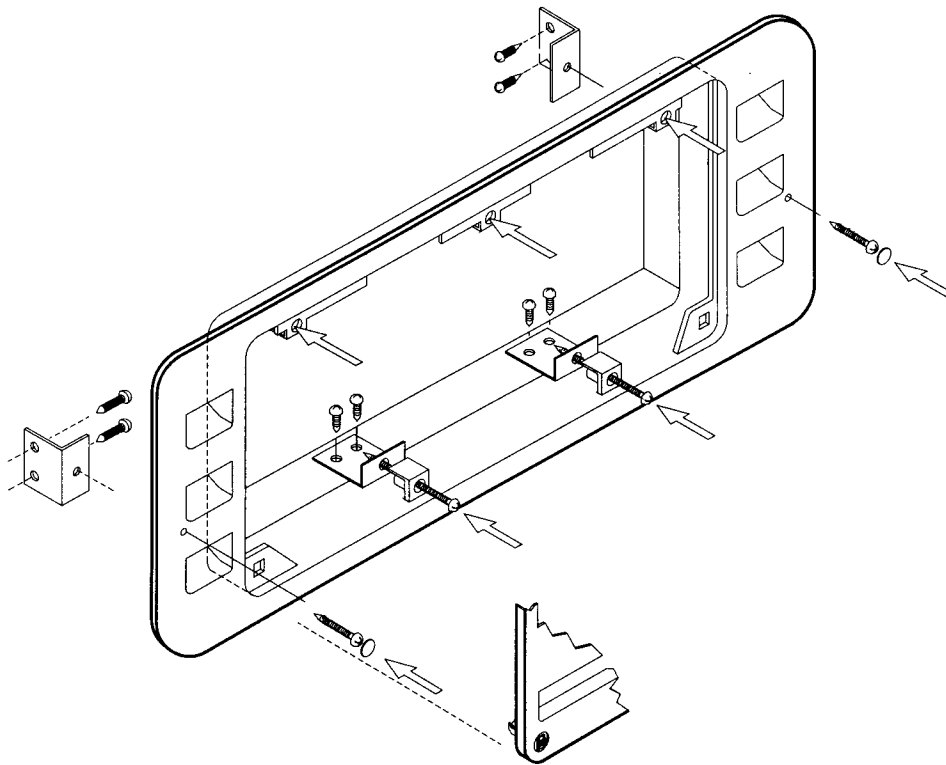

1. Opening size is the same as for current metal side vent.
2. Remove the door from the frame.
3. Using #8 screws, mount the brackets to the vent frame as shown.
4. After sealant is applied, position the frame into the cutout area.
5. Locate the brackets on the cutout framing and fasten each with two (2) #8 screws.
6. Tighten all bracket screws evenly. **DO NOT overtighten or distortion will take place.**
7. Insert door and lock with quarter-turn fasteners on each side.