

OPTIMA CRADLE REPAIR KIT

PART NO. 3103693.002

THIS KIT CONTAINS:

- (1) Top Cradle
- (1) Top Bracket/Pad Assembly
- (2) 1/4" x 2-1/2" Hex Head Bolts
- (2) 1/4" – 20 Lock Nuts
- (3) #14 x 1-1/2" Phillips Screws


⚠ WARNING

This Manual should be read and understood before installation, adjustment, service or maintenance is performed. This unit must be installed and serviced by a qualified serviceman. Modification of this appliance can be extremely hazardous and could result in personal injury or property damage.

INSTALLATION INSTRUCTIONS


STEP 1:

Remove rivets from old cradle pad by drilling out with a 3/16" drill bit. (See FIG. 1)

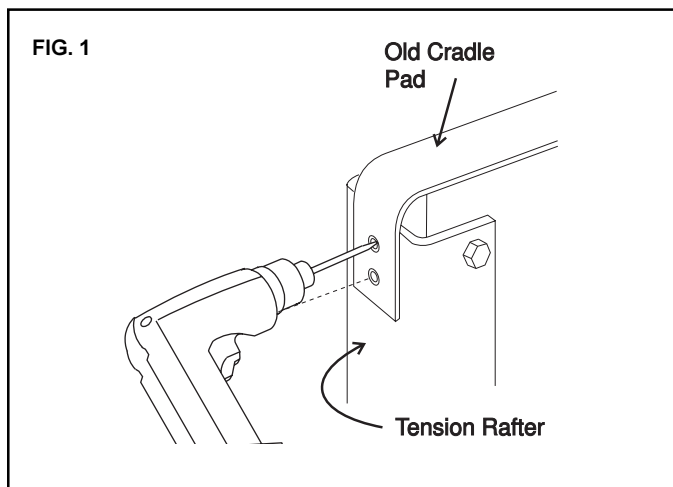


STEP 2:

Unbolt the Optima Tension Rafter from the top cradle. Unpin the Optima from the bottom bracket and set the Optima aside. (See FIG. 2)

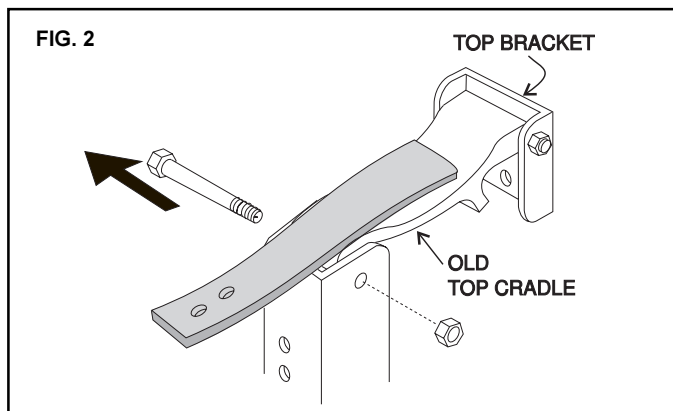


STEP 3:

Unbolt the cradle from the top bracket. Remove the screws holding the top bracket to the vehicle wall, and remove the top bracket. Discard the old parts. (See FIG. 3)

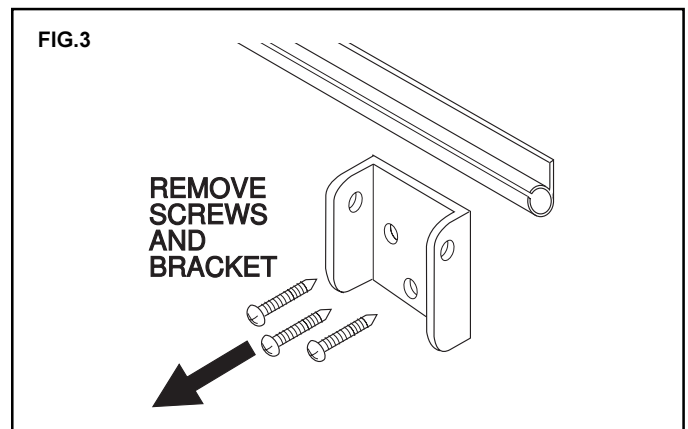


STEP 4:

Attach the supplied top bracket/pad assembly to the wall as shown in FIG. 4. **Make sure the pad is pointing up.** Caulk the screw holes.

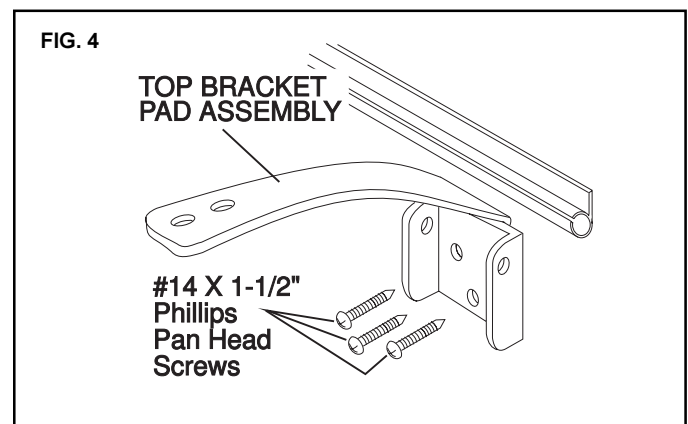


STEP 5:

Attach the supplied cradle to the top bracket. (See FIG. 5)

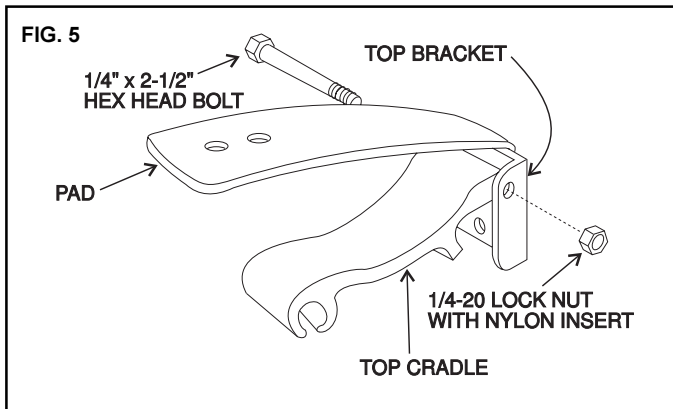**STEP 6:**

Reattach the Optima Tension Rafter to the bottom bracket, and bolt the top of the unit to the cradle. **DO NOT over-tighten the bolts.** (See FIG. 6)

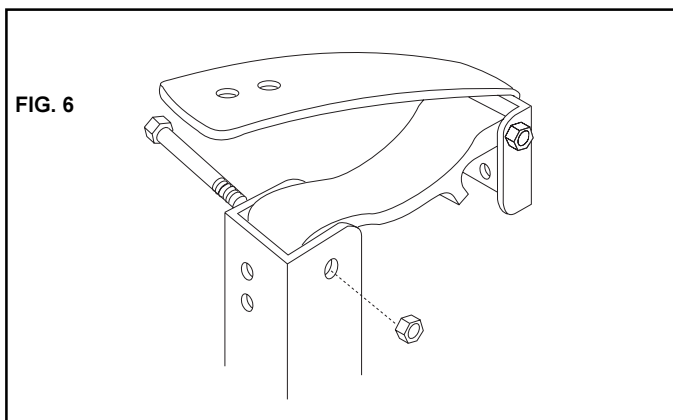**STEP 7:**

Attach the pad to the front of the Optima Tension Rafter by pushing the panel fasteners into the holes from which you removed the rivets in Step 1. (See FIG. 7)

