

# RVP/COLEMAN SHROUD ADAPTOR

## INSTALLATION INSTRUCTIONS

### PART NO. 3107185.005

**This Kit for use in conjunction with Dometic Service Shroud Assemblies:**

|             |             |
|-------------|-------------|
| 3103144.006 | Shell White |
| 3103145.003 | Beige       |
| 3103146.001 | Dark Gray   |
| 3103147.009 | Polar White |
| 3103148.007 | Light Gray  |

**This Kit is for use with RVP, Inc. (Coleman) Model Series 7333-xxxxx and 7335-xxxxx.**

**This Kit Contains:**

|     |             |                                     |
|-----|-------------|-------------------------------------|
| (2) | 3107181.004 | Side Extensions                     |
| (2) | 3107182.002 | Rear Close-Off Plates               |
| (4) | 3103855.023 | #10 - 16 x .62 Self-Drilling Screws |
| (4) | 3100587.009 | Ethafoam Block                      |
| (1) | 3107183.000 | Installation Instructions           |

## INSTALLATION INSTRUCTIONS

- Step 1:** Remove and discard the current shroud on unit.
- Step 2:** Remove (2) front-lower screws from both sides of the air conditioner (2 per side). (FIG. 1)
- Step 3:** Attach "Z" style brackets to each side.
- Line up front holes of bracket at location where screws were removed in Step 2. (FIG. 1)
  - Use the screws removed in Step 2 to attach brackets. (FIG. 1)
  - Drive self-drilling screws, found in the parts bag, into the remaining two holes in the bracket (2 per side). (FIG. 1)
- Step 4:** Install two foam blocks (one on top of the other) as follows:
- On lower, center-front return air cover as shown in FIG. 1.
  - On center-rear condenser cover as shown in FIG. 1.
- Step 5:** Place the Dometic Service Shroud on top of the air conditioner. (FIG. 2)
- Use the #10 x 3/4" screws provided with service shroud to screw fast to "Z" brackets previously installed. (5 screws both sides required) (FIG. 2)
- Step 6:** Install rear close-off plates as follows:
- Remove (2) screws located at lower back corners of air conditioners. (FIG. 3)

- Attach bottom of close-off plate at these locations using screws removed in Step 6A. (FIG. 3)
- Attach top of close-off plate using (2) #10 x 1/2" screws supplied in shroud kit. (FIG. 3)
- Attach lower back of shroud to close-off plates using (2) #10 x 1/2" screws provided in shroud kit. (FIG. 3) This completes the installation.

**NOTE:** Unit installed height will increase from 13 inches to 14.25 inches with the use of this Kit.

**FIG. 3**

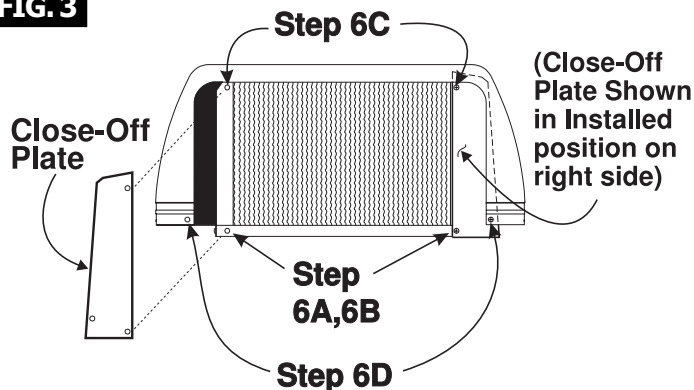


**FIG. 1**

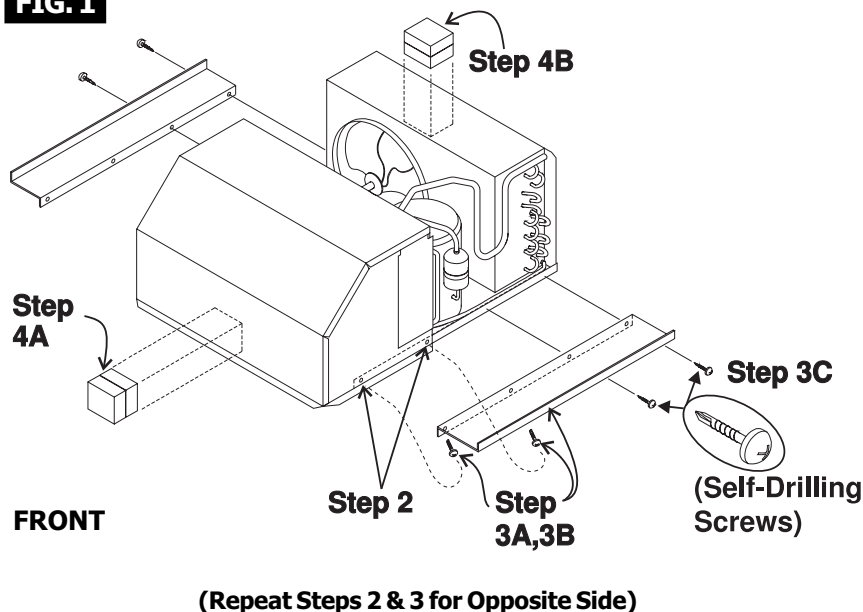


**FIG. 2**

