

REPLACEMENT INSTRUCTIONS FOR SLIDE TOPPER AWNINGS WITH 2.5" ROLLER TUBES

- 3108706.155 Kit, Torsion RH
- 3108706.163 Kit, Torsion LH

A. GENERAL INSTRUCTIONS

The torsion contained in the kit has a new end bracket that is 1-1/2" longer. The new bracket will be installed on the opposite torsion. This will keep the roller tube parallel with the roofline on the slide out. The new height allows installation of the Slide Topper Lock Kit, which will prevent the unrolling of the awning. Please refer to enclosed instructions for installation of the Slide Topper Lock Kit.

WARNING


Service to the fabric roller tube assembly (FRTA) should be performed **ONLY** by a qualified service person.

Read and understand all instructions before starting the installation of this kit.

B. BRACKET REMOVAL AND REPLACEMENT

The Slide Topper awning must be removed from the coach. Refer to the "INSTRUCTIONS FOR THE REPLACEMENT OF SLIDE TOPPER AWNING/Torsion Assembly, Section B." included in this kit.

1. Use a small punch to drive the 1/8" pin out of the bracket hole on the torsion assembly. Remove bracket from torsion rod. See FIG. 1

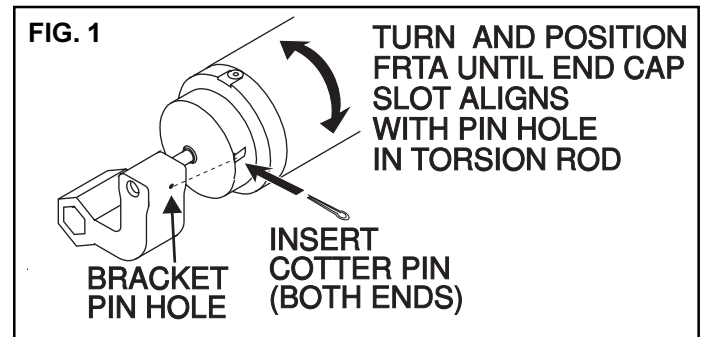

2. Slide the new bracket on the torsion rod and drive the new roll pin into the bracket hole and through the torsion rod. See FIG. 1
3. Replace the awning on the coach (See "INSTRUCTIONS FOR THE REPLACEMENT OF SLIDE TOPPER AWNING/Torsion Assembly, Section I") and install the Slide Topper Lock Kit included in this kit.