



INSTALLATION INSTRUCTIONS

FOR BUILT-IN MOUNTING KIT 3108134.010W AND 3108134.010B

FOR USE WITH MODEL DMW10W & DMW10B DOMETIC MICROWAVE OVENS

This Kit Consists of:

Kit No.	Item	Use With
3108134.010W (White)	Trim Frame/3 Screws	DMW10W
3108134.010B (Black)	Trim Frame/3 Screws	DMW10B

A. ELECTRICAL REQUIREMENTS

- Observe all governing codes and ordinances.
- A 120 volt, 60 Hz. AC only, 15 or 20 amp fused electrical supply is required (time delay fuse is recommended)
- It is recommended that a separate circuit serving only this appliance be provided.

Important: The appliance must be disconnected from the source of supply before attempting the installation of this Kit. The Kit is intended for use only with above designated model.

⚠ WARNING

Disconnect 115 volt AC. Failure to follow these instructions could create a shock hazard causing death or severe personal injury.

B. GROUNDING INSTRUCTIONS


⚠ WARNING

This product is equipped with a 3-wire (grounded) system for protection against shock hazard. Make sure this unit is wired into a properly grounded 115 volt AC circuit and the polarity is correct. Failure to do so could result in death, personal injury or damage to the equipment.

For your personal safety, this appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current. This product is equipped with a polarized 3-prong grounding plug.

It must be plugged into a correct polarized mating 3-prong grounding type wall receptacle, properly installed and grounded in accordance with the National Electrical Code and Local Codes and Ordinances. See FIG. 1.

FIG. 1

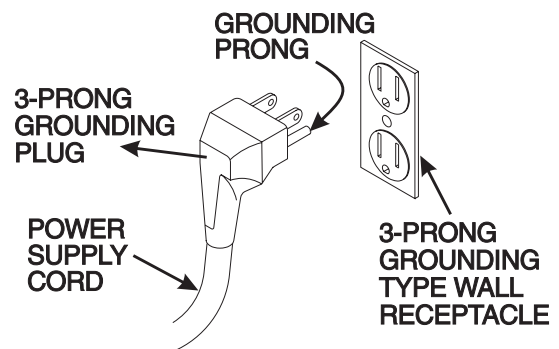


⚠ WARNING

Do not cut or remove the grounding prong from this plug. Removing grounding prong could cause electrical shock and lead to serious injury or death.

If mating wall receptacle is not available or if you are not sure if the wall receptacle is properly grounded and polarized, have it checked by a qualified electrician. It is the responsibility and obligation of the customer to have a properly grounded and correctly polarized 3-prong wall receptacle installed by a qualified electrician. See Figure 1. Consult a qualified electrician if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. See Figure 2 for location of electrical outlet inside the opening at the rear.

Figure 2

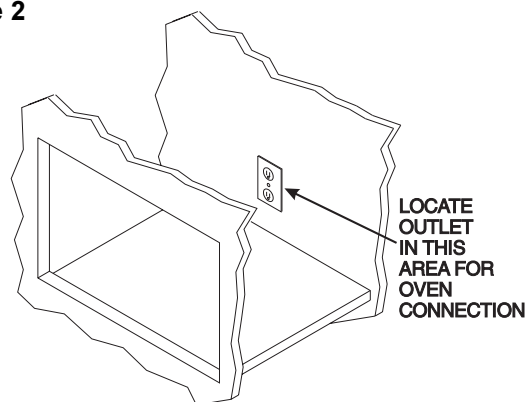


C. INSTALLATION PROCEDURE

CABINET OPENING	
MODEL	DIMENSIONS
DMW10W	21.10" wide x 14.53" high
DMW10B	

1. See Figure 3. All corners should be square. The floor of the microwave must be level and capable of supporting 100 pounds.

Figure 3

		W	x	H	x	D
1.	Set Size	20.87"		12.40"		15.51"
2.	Opening Size	21.10"		14.53"		
3.	Cabinet Size	21.10"		14.53"		16.02"
	(Dash Line)					

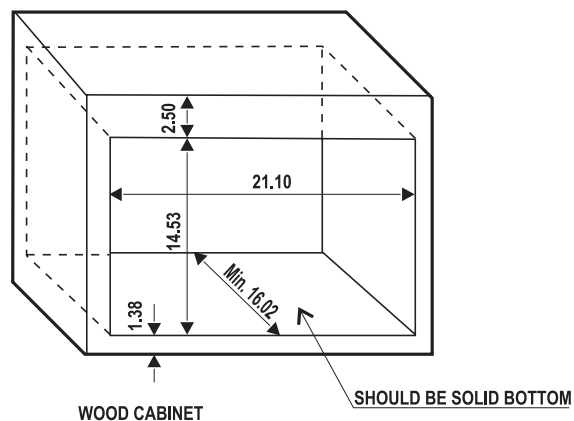

2. Mount the trim frame on the outer case using five 12mm screws supplied with microwave (two #8 screws not supplied, can be added if desired). Then mount the duct on the outer case using two 12mm screws. (See Figure 4)
3. Put the microwave oven into the cabinet.
4. Screw the upper and lower trim onto the cabinet using four screws (not supplied). (See Figure 5)

Figure 4

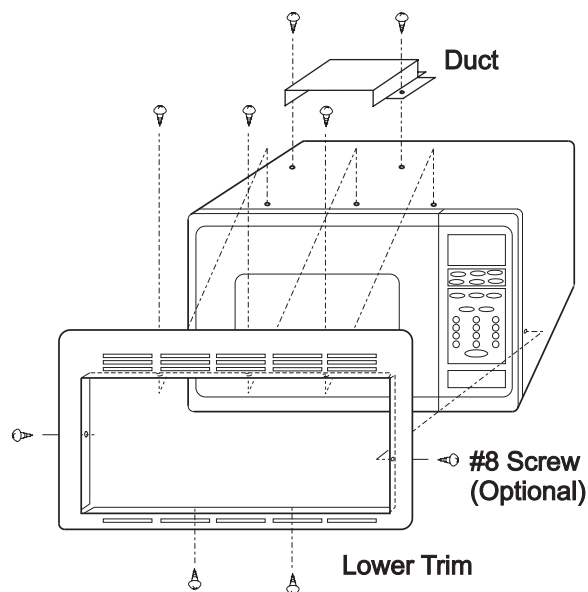


Figure 5

