

3108708.310 TWO STEP ALIGNMENT KIT

THIS KIT CONTAINS:

4 ea. 3105830.073 Plugs
1 ea. 3108839.006 Instructions

TOOLS REQUIRED:

1/4" Drill Bit Scratch Awl
Electric Drill Step Ladder
Ruler

! WARNING

These instructions must be read and understood before installation of this kit. This kit must be installed by a Dometic Service Center or a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.


A. GENERAL INSTRUCTIONS

Installation of the 3105830.073 plug will automatically center the arms during closing of the awning. This will allow the arms to fold properly into the back channel.

B. PROCEDURE


1. The installation of the kit requires that the awning be unrolled.
2. The first requirement is to locate the position to drill the 1/4" holes. See FIG. 1
3. Measure from the end of both the top and bottom arms 5" from the back channel bearing and on the **same side as the gas strut (left side of arm assembly)**. See FIG. 1

FIG. 1

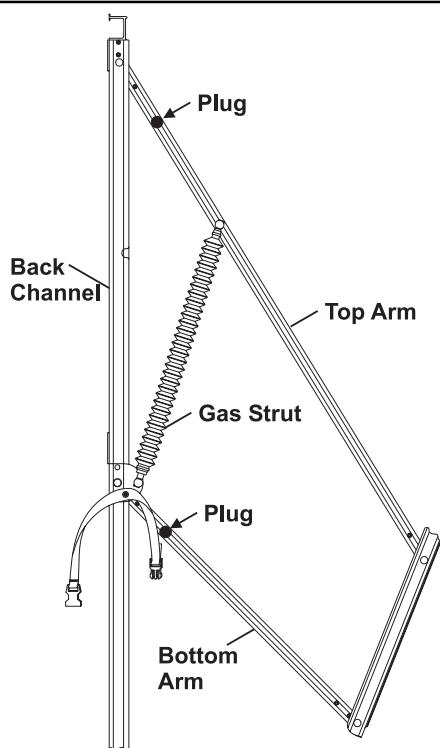

4. Use the scratch awl to mark the location of where to drill the 1/4" hole on the top and bottom arms. See FIG. 1
5. Drill the 1/4" hole in the side of the top and bottom arm.
6. Push the plug tightly into hole. See FIG. 2
7. Repeat the operation on the other arm assembly.

FIG. 2

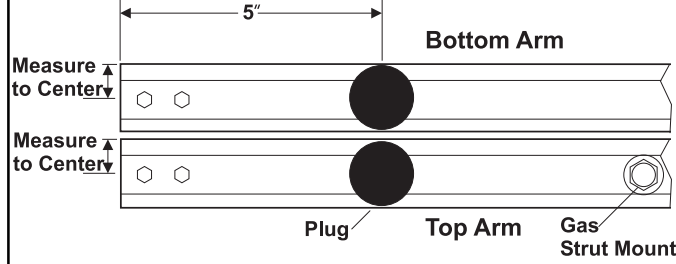

8. Open and close the awning several times to check operation.