




RECORD THIS UNIT INFORMATION FOR
FUTURE REFERENCE:

Model Number _____
Serial Number _____
Date Purchased _____

TRIM LINE

RV SCREEN ROOM

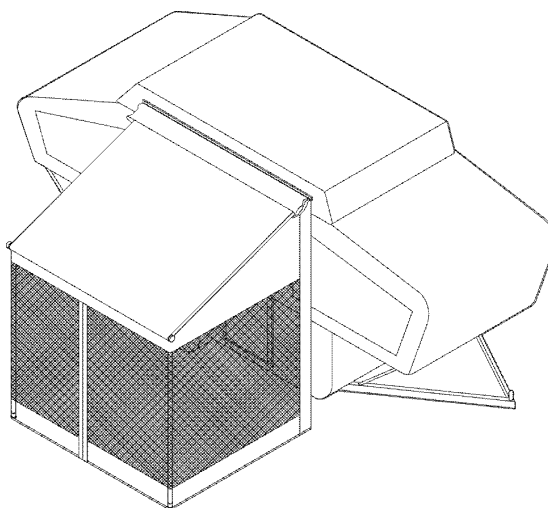

USA

SERVICE OFFICE
Dometic, LLC
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA

Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

For Service Center
Assistance Call:
800-544-4881

! WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

! AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

INSTALLATION INSTRUCTIONS

TRIM LINE
SCREEN ROOM
9472XX.014
9472XX.015

REVISION:

Form No. 3109614.010 2/09
(Replaces 3109614.010)
(French 3109618.006)
©2009 Dometic, LLC
LaGrange, IN 46761 U.S.A.

Important: These Instructions
must stay with unit.
Owner read carefully.

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating instructions.

UNDERSTAND SIGNAL WORDS

A signal word, **WARNING** OR **CAUTION** is used with the safety-alert symbol. They give the level of risk for potential injury.

⚠ WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION used without the safety alert symbol indicates, a potentially hazardous situation which, if not avoided, may result in property damage.

Read and follow all safety information and instructions.

GENERAL INFORMATION

⚠ WARNING

These instructions must be read and understood before installation of this kit. This kit must be installed by a Dometic Service Center or a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

Important: Read all of the following steps before beginning installation.

The Dometic, LLC reserves the right to modify appearances and specifications without notice.

TRIM LINE SCREEN ROOM INSTALLATION

APPLICATION:

The A&E Trim Line Screen Room is available in sizes to correspond with the various sizes of Trim Line Awnings.

TOOLS REQUIRED FOR INSTALLATION:

Pencil	1/8 Drill Bit
Measuring Tape	Center Punch
Phillips Screwdriver	Hammer/Mallet
Drill	(for Hook Stakes)

INSTALLATION

During installation, care must be taken not to scrape and damage the panel and skirt.

1. In order to correctly match the Screen Room to the right size Trim Line Awning, you must know the length of the awning. See FIG. 1A.

The A&E Trim Line Screen Room consists of (1) continuous panel for the front/sides and a rear skirt. See FIG. 1B.


The above-mentioned panel and skirt are secured to the vehicle, the awning and to the ground by means of zippers, hook and loop fasteners, twist fasteners and hook stakes (provided). See FIG. 1C.

Note: The inner and outer sides of all panels can be checked by looking at the fastener strips. The fastener strip on the front is on the outside.


2. Set up awning for installation of Trim Line Screen Room.

FIG. 1A**SELECTING THE CORRECT SIZE**

LENGTH
(AWNING SIZE)

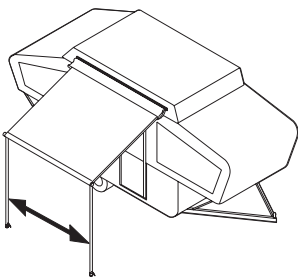**FIG. 1B**

FRONT & SIDE
PANELS ARE ONE PIECE

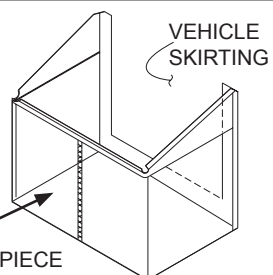**FIG. 1C**

3. To facilitate accurate installation, vehicle should be parked
Open awning and install front support and side rafter pole as shown in FIG. 2

FIG. 2


SIDE VIEW

AWNING FABRIC

SIDE RAFTER POLE

FRONT SUPPORT


SIDE OF VEHICLE

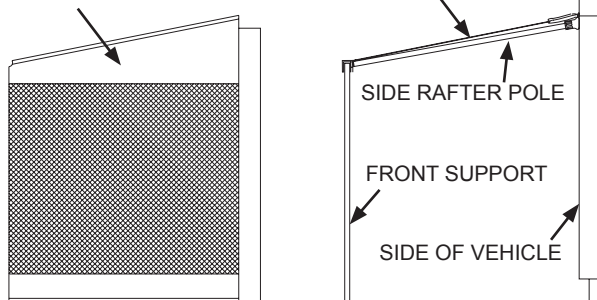

4. After awning is set up, remove screen room from storage bag and line up in position with awning as shown in FIG. 3.

FIG. 3

Zippers Sewn on
Bottom of Awning
Fabric and Under
Valance

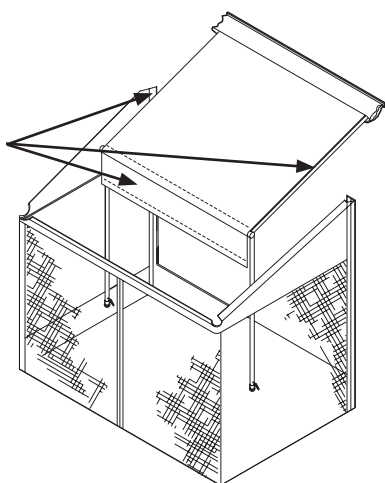

5. Fasten front of screen room to Trim Line bag awning by joining zippers. Start at awning front and fasten side panels to bottom side of awning. When attaching screen room to awning at bag, pull bag down and away from awning, making sure to fasten completely.
6. Flaps at rear of side panel on screen room are to fasten to tent canvas at lifter mechanism. Pull tent canvas flap away from hook & flap strips. Secure screen room flap to tent canvas using hook & loop fasteners sewn into both. Secure tent flap to screen room flap as shown in FIG. 6.

FIG. 4

LIFTER MECHANISM


TENT CANVAS

HOOK

TENT
LIFTER
FLAP

SCREEN
ROOM

LOOP

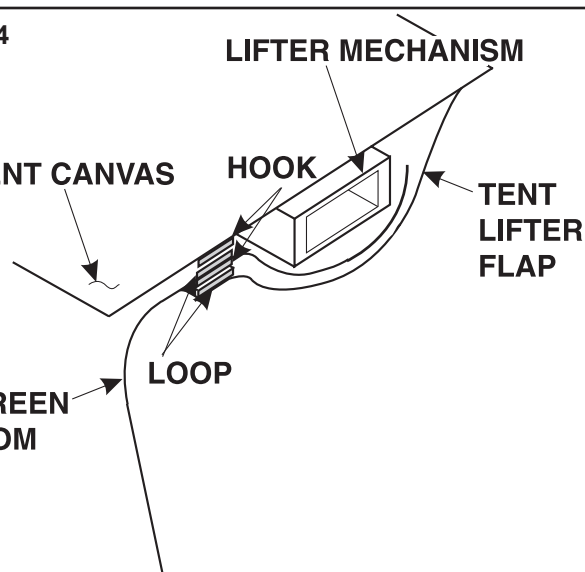


7. If camper does not have covers for lifter mechanism, fold screen room flap around lifter as shown in FIG. 5.

FIG. 5

TENT CANVAS

HOOK

LOOP

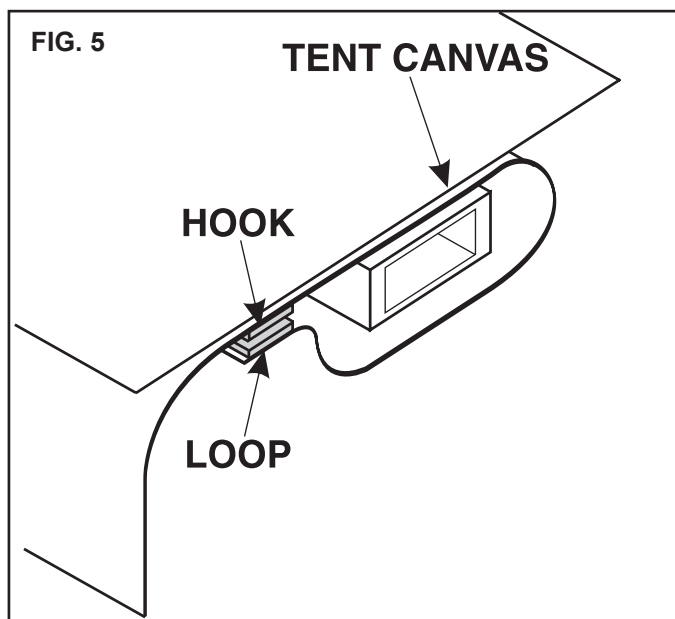


8. Align skirt at floor and wall of camper. Locate positions of twist fasteners and mark with pencil. Drill 1/8" holes and install twist fasteners.
9. Attach skirt to camper using twist fasteners just installed. If needed, locate wheel skirt over wheel well and install using hook & loop fastener strips and twist fasteners.
10. Secure bottom of panels by driving the hook stakes into the ground through the appropriate grommet. (See FIG. 6)
11. Attach skirt to Screen Room with hook and loop fasteners sewn into room and skirt (see FIG. 6)

STORING TRIM LINE SCREEN ROOM

A convenient storage bag is provided to store the Screen Room.

Screen Room should be dry before storing.

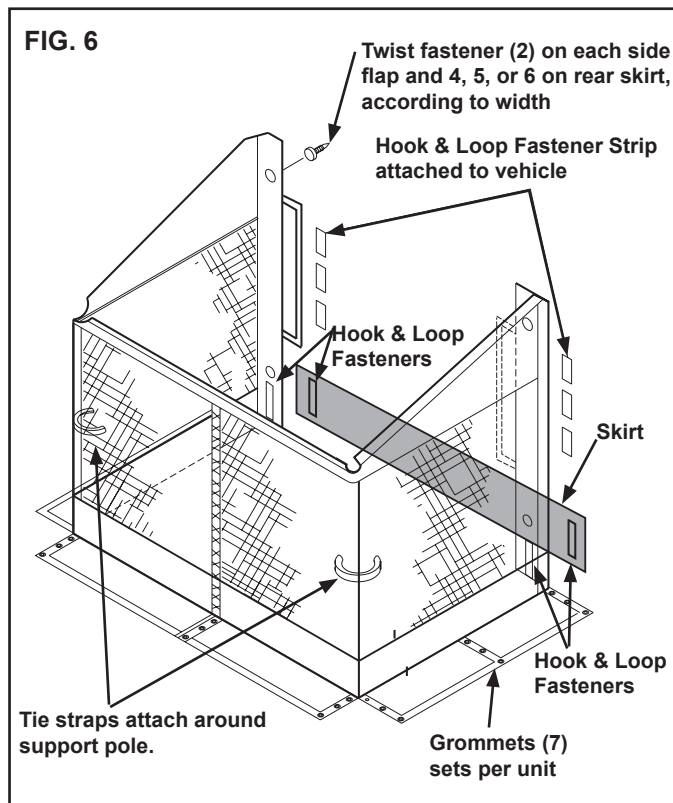

WHEEL COVER MOUNTING INSTRUCTIONS

1. Place the wheel cover in position to cover the wheel opening and mark the locations of the twist fasteners.
2. With a 1/8" drill bit, pilot drill a shallow hole at each marked location and install a twist fastener (provided in plastic bag).
3. Install the wheel cover and secure by turning fastener one quarter turn.
4. Take the 3 inch pieces of hook and loop strip; remove peel strip and stick them onto the screen room skirting opposite the hook and loop strips on the wheel cover (see FIG. 7).

