

Installation Instructions

Kit, One & Two Step Awning Stand Off Bracket

Part No. 3108710.199

This Kit Contains:


- 2 - 3109730.006 Top 1/2" standoff bracket
- 2 - 3109506.109 Bottom 1/2" standoff bracket
- 6 - 3108708.094 1/2" Foam Spacer
- 1 - 3109783.005 Installation Instructions

Important: Read and understand all of the following steps before beginning installation.

This kit will properly space the hardware 1/2" away from the sidewall when clearance is needed for trim, windows, etc. Follow the Installation Instructions provided with the hardware and add the following steps for stand off bracket installation.

1. Before installing hardware, place the 6 self adhesive styrofoam spacers on back channel as shown in FIG. 1. Place middle spacer directly behind strut bracket. If windows or other items do not allow positioning as shown, place middle spacer as close as possible.
2. While installing the top mounting bracket, place one standoff bracket behind the top mounting bracket as shown in FIG. 1. Repeat for other side.
3. The two additional stand off brackets will be put into position prior to installing the bottom mounting brackets. See FIG. 1.

FIG. 1

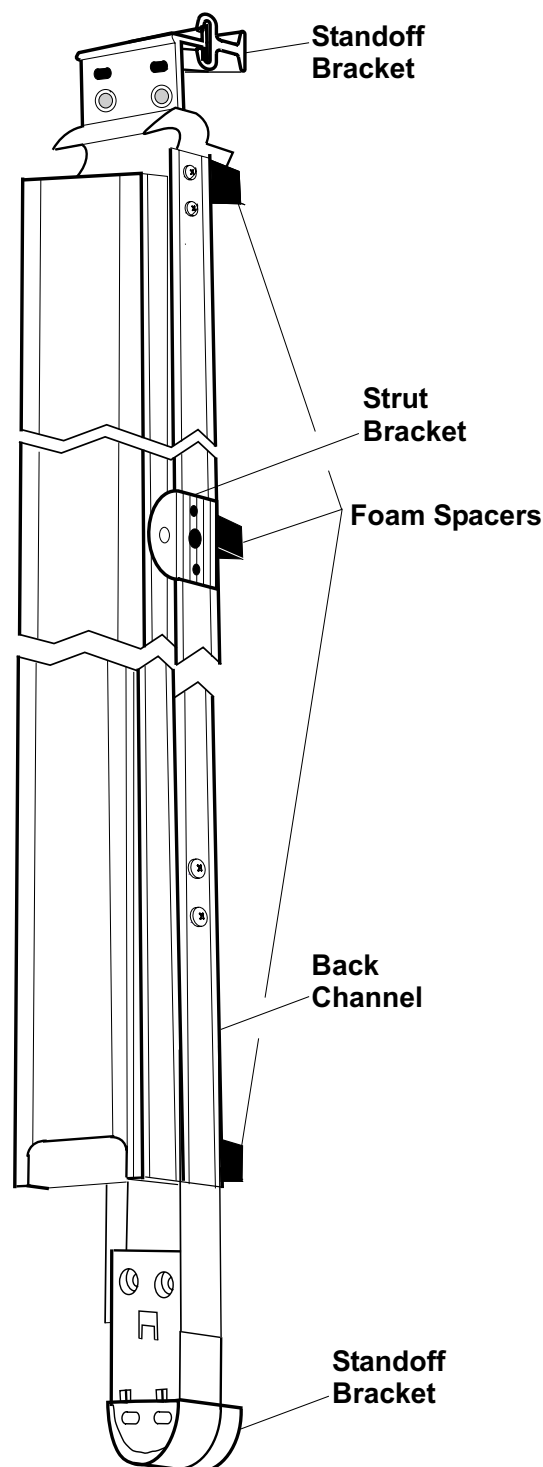

REVISION

Form No. 3109783.013 1/02
(replaces 3109783.005)
©2002 Dometic Corporation
LaGrange, IN 46761