

General Information

This Kit will convert 8551001 Basement WeatherPro Hardware to 8551003 5th Wheel WeatherPro Hardware.

⚠ WARNING

Do not attempt to install this conversion kit if hardware is installed on RV. These instructions are for new un-installed hardware. Failure to follow these instructions could cause serious personal injury or property damage.

Read and understand all of the following instructions before installing this kit.

This kit contains:

- | | |
|--------------------|---------------------------|
| (8) 3307879.001 | Screw, #10-32 x .50" Torx |
| (4) 3104499.003 | Screw, #14 x 10 1.50" |
| (4) 3307608.004(X) | Bracket, Side Mount |
| (2) 3307877.005(X) | Cover, Top Bracket |
| (1) 3308048.002 | Installation Instructions |

⚠ WARNING

Do not remove nylon ties wrapped around the hardware arms. The arm assemblies are pressurized and will spring open. Failure to follow these instructions could cause serious personal injury or property damage.

Installation Procedure

1. Remove the four (4) screws securing the top mounting bracket to the back channel. Lift the top bracket up and out of back channel. See FIG. 1.
2. Place the top bracket cover in position inside back channel as shown in FIG. 2. Open side of cover goes towards the rear of channel.
3. Attach each bracket with two (2) #10-32 x .50" screws supplied. See FIG. 2. Line up holes in bracket with the holes in the back channel and drive screws into the cover. Each back channel gets two (2) brackets.
4. Repeat steps 1-3 on other arm.
5. To install hardware follow procedure for installing 8551003 5th Wheel hardware in Installation Instructions furnished with hardware.

FIG. 1

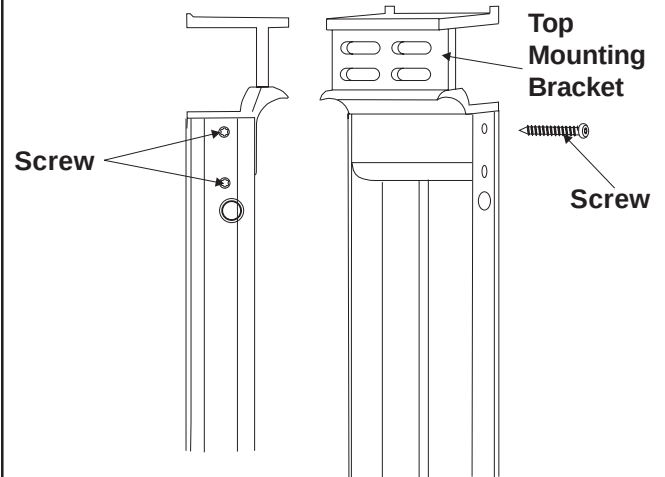


FIG. 2

