

INSTALLATION INSTRUCTIONS

FOR 3308645.005 DECORATIVE END CAP KIT


Tools Required:	Kit Contains:
Electric Drill	(1) 3308777.006 RH Plastic End Cap
1/8" Drill Bit	(1) 3308777.014 LH Plastic End Cap
Screw Drivers	(1) 3308779.002 RH Mounting Bracket
Ruler	(1) 3308779.010 LH Mounting Bracket
Marking Pencil	(6) Screws
Tube of Silicon Sealant	(6) Washers
	(8) Screws
	(1) 3308843.014 Instructions

INSTALLATION INSTRUCTIONS


- The Decorative End Caps require a open area 6" by 10" on each end of the awning case.
- Place RH Mounting Bracket 1/8" below top of awning case and 3/16" from the RH end plate.
- Use mounting bracket as a template and mark the 3 screw locations on the coach side wall. Be careful not to move the bracket when location of holes is marked.

Note: The electrical outlet box cover must be recessed flush with the side wall of the coach. It must be a minimum of 1-1/8" away from the RH end plate, but not more than 1-1/4" maximum. It must be 3-1/8" down from the top of the awning case.

- Drill 3 pilot holes with the 1/8" drill bit and electric drill.
- Fill hole with silicon sealant.
- Place the bracket on the side wall and secure with the 3 screws and washers. Route the motor cable behind the awning case and into the notch in the mounting bracket. Apply silicon sealant around motor cable and attach to the outlet box.
- Place the plastic end cap on the bracket, secure in place with the 4 push rivets (2 in the top and 2 in the bottom).
- Repeat on left end of awning. Omitting steps for outlet box and motor cable.

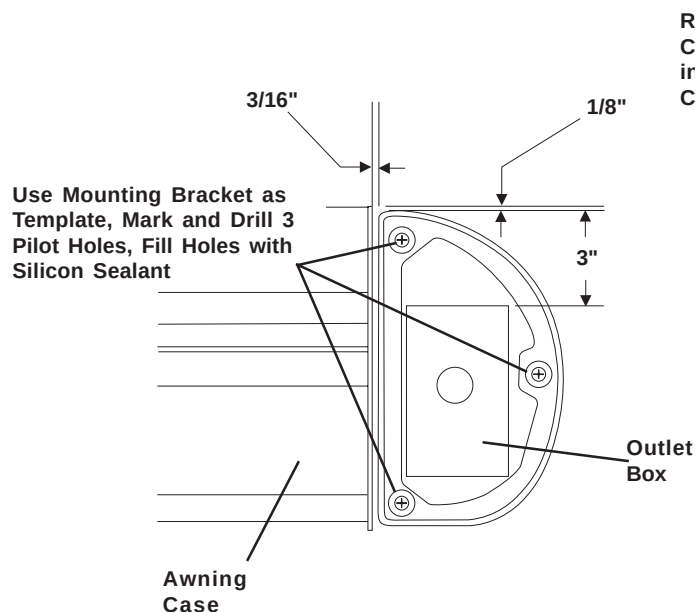

Route Motor Cable Behind Awning Case and Through Slot In Mounting Bracket, Seal Around Motor Cable And Attach To Outlet Box

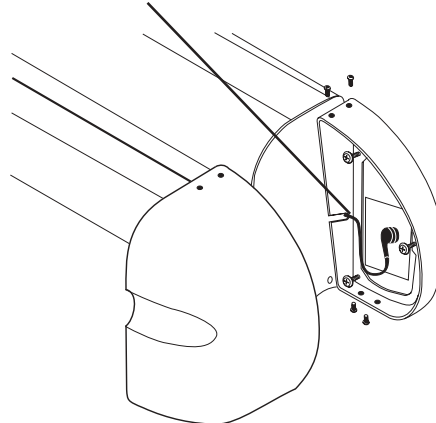

Place Plastic End Cap On Bracket And Secure With 4 Push Rivets

REVISION:

Form No. 3308843.014 8/04
 (Replaces 3308843.006)
 (French 3308844.012)
 ©2004 Dometic Corporation
 LaGrange, IN 46761