



RECORD THIS UNIT INFORMATION FOR
FUTURE REFERENCE:

Model Number _____

Date Purchased _____

KOMFORT ROLLO BLINDS

SERVICE OFFICE:

USA

Dometic, LLC
2320 Industrial Pkwy
Elkhart, IN 46516
574-294-2511

CANADA

Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

For Service Center
Assistance Call:
800-544-4881

WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

INSTALLATION & OPERATING INSTRUCTIONS

DOM1338XXXX

Installation and operation instructions Komfortollo

Before installing the Komfortollo, please read carefully the installation instructions!

Prerequisite for a correct installation of the Komfortollo is a flat inner wall surface. The area where the Komfortollo is to be installed has to be selected in such a way, that the function of adjacent components (door, cupboards etc.) is not impaired in any way.

The dimensions and the wall thickness of the Komfortollo are made as per order and delivered ready to install. Check the Komfortollo after delivery if there is no damage or missing parts.


For the installation you need the following tools:

- Phillips screwdriver or cordless screwdriver with cross recess,
- 8 pieces lens head wood screw 3.5 x 35mm
- drill Ø 5/64" [2mm] to drill holes in order to fasten screws (depending on material of surface)
CAUTION: do not drill through the vehicle wall!
- possibly a second person is necessary (big blinds)

Installation on aluminium framed window:

Remove the fastening screws of the stays on the window frame and put it aside for later installation.

1

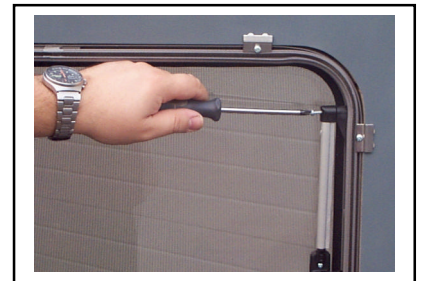

Put the Komfortollo with the fly net on the top in such a way on the window frame, that the surrounding band of the Komfortollo slides into the surrounding wide slit of the aluminium frame and the Komfortollo fits evenly all around.

2



Fix the Komfortollo with a 3.5 x 35mm screw on the left and the right side of the top corner. If necessary mark the positions of the drill holes and drill Ø 5/16" [2mm] x 3/8" [10mm] deep.

CAUTION: do not drill trough the vehicle wall!

Check the position of the Komfortollo on the aluminium framed window and screw the drills in the corners to the wall. Avoid tensions of the frame of the Komfortollo.

3




Close the screw holes with the enclosed cover caps.

4



Screw the stays with their fastening screws on the window frame again.

5

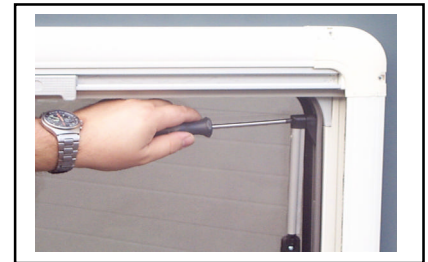

Instructions for use:

By moving the end rod of the blind a fully variable adjustment is possible. An integrated cord brake holds independently each possible position of the blind.

By using the fly net pull the end rod of the blind either up or pull the end rod of the fly net down (grasp the end rod in the middle) until the push button of the blind snaps into the end rod of the fly net.

The end rods can now move in any position.

Press the catch rocker to open the blind and guide the fly net with the hand up in its originally position. Do not let the fly net recoil.

6



Care instructions:

Only use mild soap suds to clean the Komfortrollo frame and the blinds.

To get an easy sliding of the end rods inside the lateral straps, use a little bit of silicone spray regularly on these area. Do not use too much silicone spray!

Do not leave the blind closed for a longer period of time, as this could lead to material fatigue. If the vehicle remains in a longer period of standstill we recommend to close the blind in such a position that the single honeycombs are slightly stretched and the honeycomb system can be ventilated on both sides (preventive measure against mildew).