



HOME CASSETTE FABRIC REPLACEMENT

USA

SERVICE OFFICE
Dometic, LLC
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA

Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

**For Service Center
Assistance Call:**
800-544-4881

SERVICE INSTRUCTIONS

Model
110XXYY.X00#

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating instructions.

UNDERSTAND SIGNAL WORDS

A signal word, **WARNING** OR **CAUTION** is used with the safety-alert symbol. They give the level of risk for potential injury.

⚠ WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION used without the safety alert symbol indicates, a potentially hazardous situation which, if not avoided, may result in property damage.

Read and follow all safety information and instructions.

GENERAL INFORMATION

⚠ WARNING

These instructions must be read and understood before installation of this kit. This kit must be installed by a Dometic Service Center or a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

Important: Read all of the following steps before beginning the fabric replacement.


Dometic, LLC reserves the right to modify appearances and specifications without notice.

Tools Required:


- Ratchet & 10mm Socket
- Phillips Screw Driver

FABRIC REPLACEMENT


1. Remove screws on top cover. Located on the right and left hand sides.

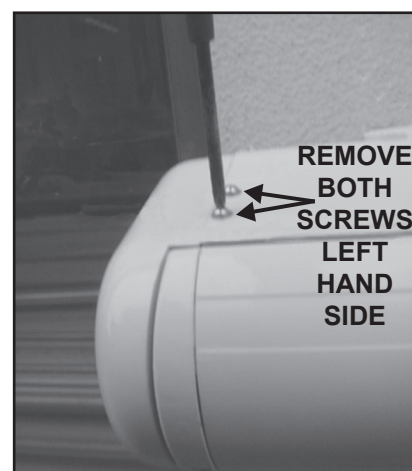


2. Extend awning a few inches.

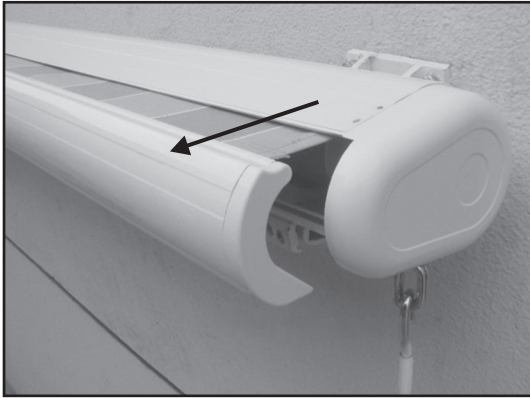


3. Open top cover .

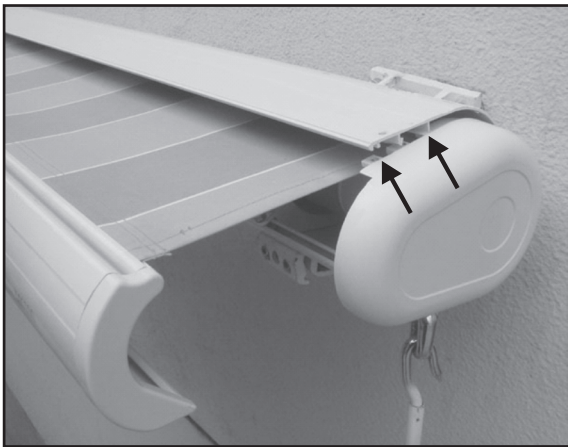


4. Remove top cover from awning.

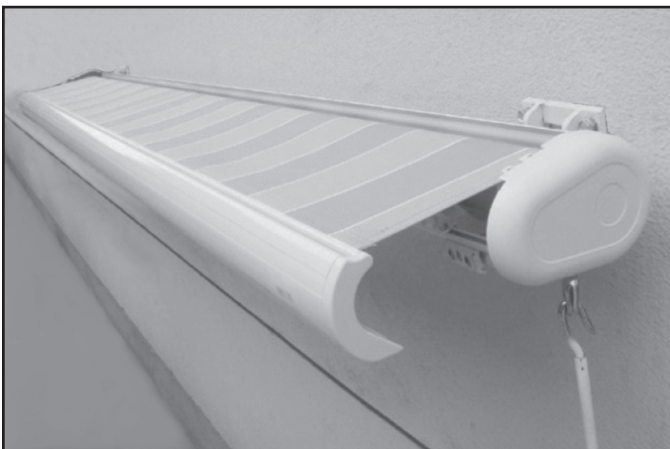


5. Fully extend awning.

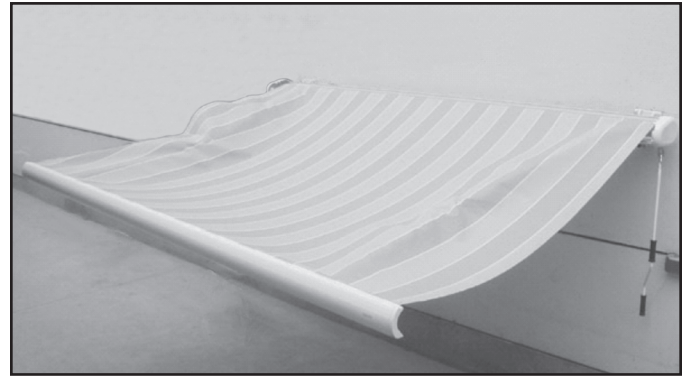


6. The following operations should be performed on the end opposite the motor. Remove plastic screw cover. Then, using a 10mm socket, remove the end cap screw.

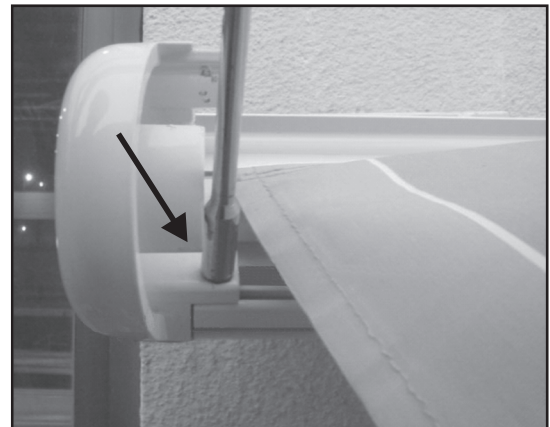


7. Remove end cap cover from awning.

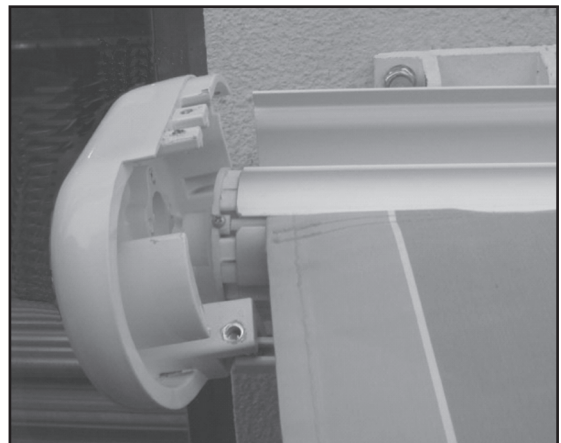


8. Loosen front bar screw at end opposite motor.

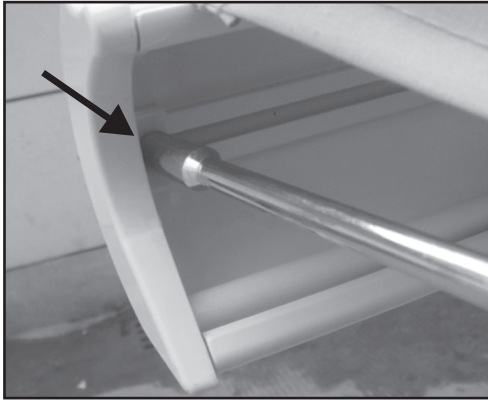


9. Remove the side cover of the front bar.

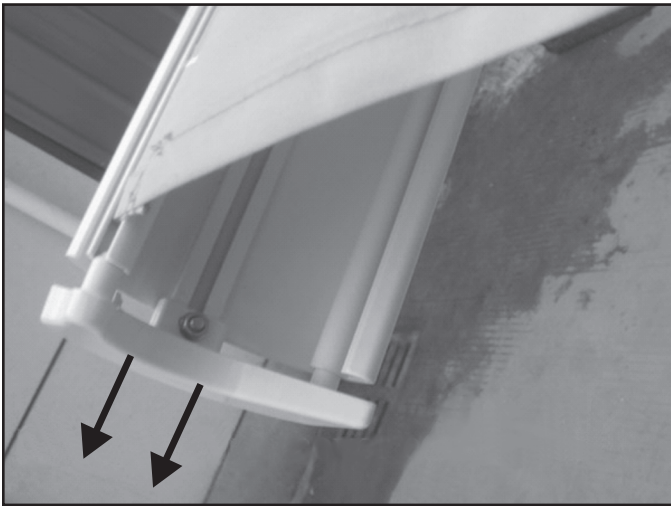

10. Remove screw in awning rail holding fabric in place. Mark fabric edge location to help align new fabric.

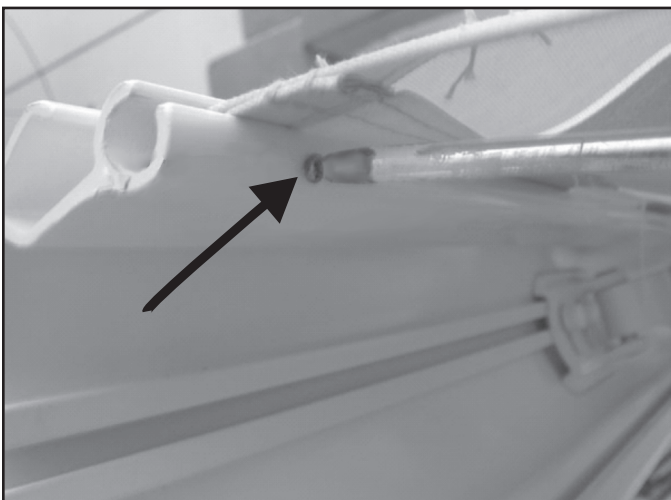

11. On opposite side remove fabric screw.

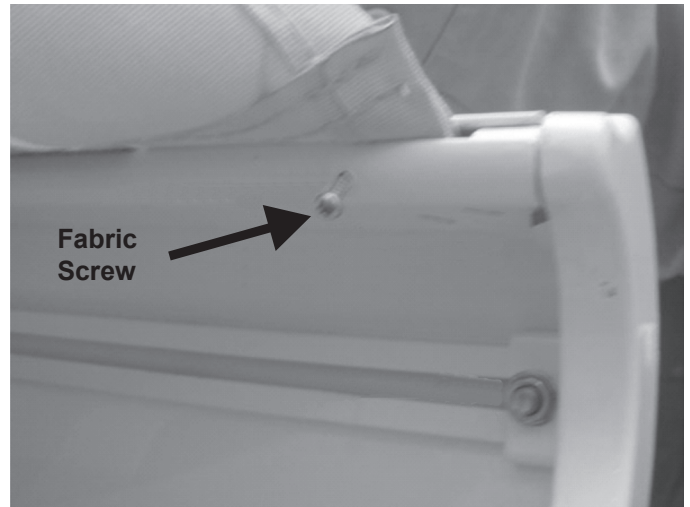

12. Pull fabric out of front bar channel and awning rail.



13. The replacement fabric can now be installed. Follow these steps in reverse order to install the fabric.

