




ROCKER SWITCH KIT

3314611.001

WIRING INSTRUCTIONS FOR ROCKER SWITCH KIT

 Wire colors noted within this document are industry standard. Some RV manufacturers use different colors. Refer to RV manufacturer's wiring schematics.

-  1. Wire switch to 12 Vdc power supply.
- NOTICE.** Install a (15 A) fuse (installer supplied) at fuse panel for positive (+) 12 Vdc power supply (**RED** wire) to switch. Otherwise, damage to unit could occur.
 - Route (2) wires (**RED & BLACK**; installer supplied) from 12 Vdc power supply to switch.
 - Terminate both wires with 1/4" female insulated terminals.
 - Connect positive (+) **RED** wire to bottom left (retract) switch terminal.
 - Connect negative (-) **BLACK** wire to bottom right (retract) switch terminal.

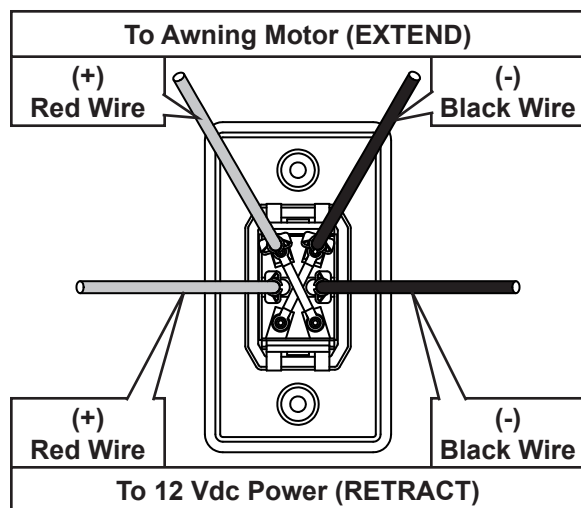

2. Wire switch to motorized arm assembly.
- Route (2) more wires (**RED & BLACK**; installer supplied) from switch to right side (motorized) arm assembly.

 To avoid voltage drop, follow wire length guide listed in "Table 1".

- Terminate switch end of wires with 1/4" female insulated terminals.
- Connect positive (+) **RED** wire to top left (extend) switch terminal.
- Connect negative (-) **BLACK** wire to top right (extend) switch terminal.
- Connect other end of wires (**RED** to **RED** and **BLACK** to **BLACK**) to motorized arm assembly using properly sized, UL certified butt splice connectors (installer supplied).

 Refer to the crimp tool manufacturer for crimping instructions.

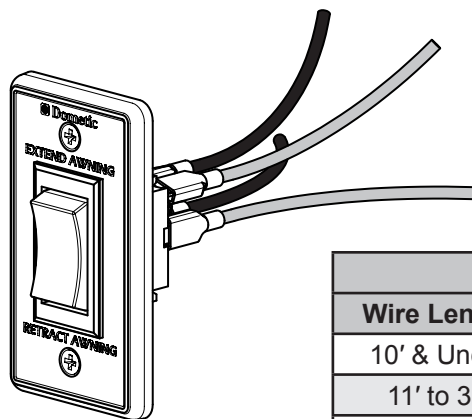


Table 1

Wire Length	Wire Size
10' & Under	14 Gauge
11' to 30'	12 Gauge
Over 30'	10 Gauge

3314650.015

REVISION

Form No. 3314650.015 03/12
(Replaces 3314650.000)
(French 3314651.013)
©2012 Dometic, LLC
LaGrange, IN 46761

USA
SERVICE OFFICE
Dometic, LLC
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA
Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

For Service Center Assistance Call:
800-544-4881



Read these instructions carefully. These instructions MUST stay with this product.