



RECORD THIS UNIT INFORMATION FOR
FUTURE REFERENCE:

Model Number _____

Date Purchased _____

C7 FRAMELESS WINDOW

SERVICE OFFICE:

USA

Dometic, LLC
2320 Industrial Pkwy
Elkhart, IN 46516
574-294-2511

CANADA

Dometic, LLC
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

For Service Center
Assistance Call:
800-544-4881

! WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

! AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

INSTALLATION INSTRUCTIONS

DOMC7XXXX

Installation instructions for C7 Window



Determine and mark the window cut out and hinge profile position according to technical data outline. To avoid scratching the exterior plate, the area outside the marked section should be covered with tape before cutting. Perform the cutting using appropriate tool (fret saw or router).



Apply butyl-sealing tape under the hinge rail. (e.g. Bostik, Type ISR 70-03 or similar)



Screw on hinge profile with flat head spax-screw 3.0x20, galvanised or rustproof.



Deburr and clean cutting surface in window section.

Carefully bring on rubber seal all around (sealant on the outside), beginning in the middle on the bottom of the window section.

Press on well all around, possibly using the aid of a roller.

Make sure that the sealing hose does not create wrinkles in the corner areas!




Note: Rubber must be appropriate for the wall thickness!



Cut protruding sealant parallel in the section ca. 5mm longer, put under pressure and press on evenly.



Fasten sealant all around with clamps or similar (especially on the corners and on the joint).

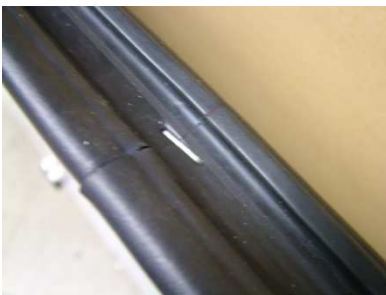

Feed in the filler profile circumferentially using a single roller starting at the top. If needed, use a lubricant, e.g. soft soap and water.



Hanging the glazing into the hinge rail:

Bring the glazing towards the hinge profile diagonally from above (ca. 110° angle), hang it in and carefully pivot it downwards.

! Attention ! The hinge may not clamp downwards when pivoting.



Determine the position of the counter bracket in relation to the bottom and side locking latches and screw on with round headed screw 3,5x25 similar DIN7981. The distance between the edge of the pane and the outer wall should be ca. 3mm.



Push together stays completely when window is closed. Position stays (upper benchmark of the stay) in the middle of the filler profile and screw in using a round headed screw 3,5x50 similar DIN7981.