




Fiat Ducato 250 (2006 →)
Peugeot Boxer (2006 →)
Citroen Jumper (2006 →)
Mercedes Viano (2003 →)
Mercedes V (2014 →)

Mercedes Sprinter W906 (2006 →)
VW Crafter (2006 →)
VW T5 (2003 →)
Renault Master II (1997 – 2010)
Renault Master III (2010 →)


Ford Transit Custom (2012 →)
Ford Transit (2006 – 2013)
Ford Transit (2014 →)
Iveco Daily IV (2006 – 2011)
Iveco Daily V (2012 →)




1

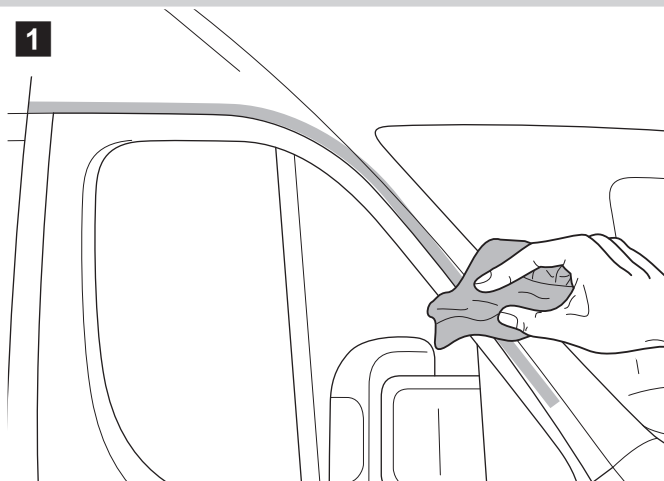

2

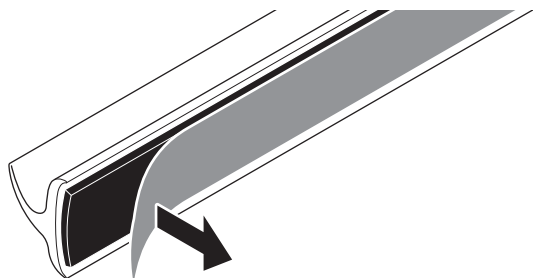

3

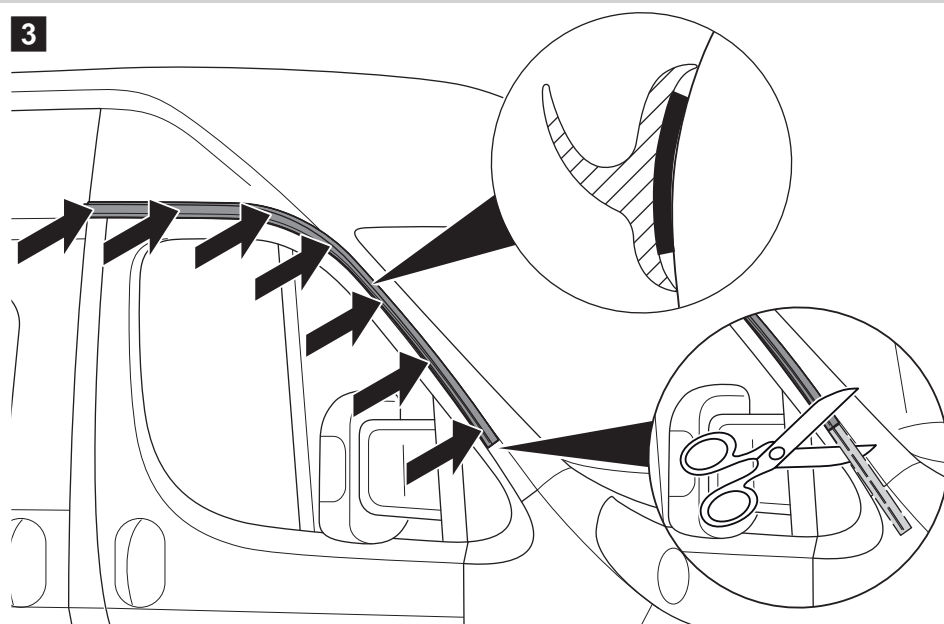

EN: The adhesion surface must be clean and free of grease!

DE: Klebefläche muss sauber und fettfrei sein!

FR: Le verso collant doit être propre et dépourvu de graisse !

ES: ¡La superficie adhesiva debe estar limpia y sin grasa!

PT: A superfície a ser colada tem de estar limpa e sem gordura!

IT: La superficie di contatto deve essere pulita e senza residui di grasso!

NL: Kleefoppervlak moet schoon en vetvrij zijn!

DA: Klæbefliden skal være ren og fri for fedt!

SV: Klisterytan måste vara ren och fri från fett!

NO: Limflaten må være ren og fri for fett!

FI: Liimapinnan täytyy olla puhdas ja rasvaton!

RU: Склеиваемую поверхность необходимо очистить и обезжирить!

PL: Powierzchnia klejenia musi być czysta i odtłuszczona!

SK: Lepiaca plocha musí byť čistá a odmastená!

CS: Lepená plocha musí být čistá a zbavená mastnoty!

HU: A ragasztási felületnek tisztának és zsírmentesnek kell lennie!

