

DOMETIC **AWNINGS** **ACCESSORIES**

EN SlideTopper Adapter Bracket Service Kit Instructions

USA & CANADA
 Service Office
 Dometic Corporation
 5155 Verdant Drive
 Elkhart, IN 46516

Service Center & Dealer
Locations
 Visit: www.dometic.com

Kit Contents (Part #3317670)

Adapter Bracket (Qty. 2)	M3 x 0.5 Screws with Thread Locker (Qty. 8)
Close-ended Covers (Qty. 4)	

1 Explanation of Symbols and Safety Instructions

This manual has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

 **This is the safety alert symbol.** It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

 Indicates additional information that is **not** related to physical injury.

2 Compatibility

This adapter bracket is compatible with the following Dometic SlideTopper models:

SlideTopper Models


98000	98400	98410
98001	98401	

3 Installation

This section describes the procedure for assembling the adapter bracket onto an existing prep bracket.

 The images used in this document are for reference purposes only.


1. Confirm the contents of the service kit are present.

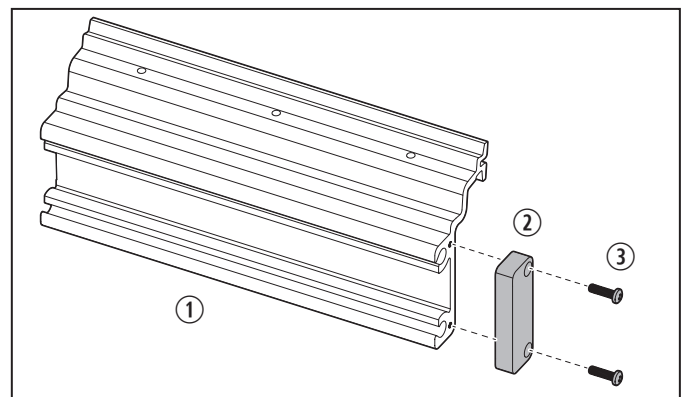

- 1 Attach the Open-ended Cover

- ① Adapter Bracket
- ② Close-ended Cover
- ③ M3 x 0.5 Screws


2. Attach one of the close-ended covers to the outside edge of the adapter bracket using the screws provided.

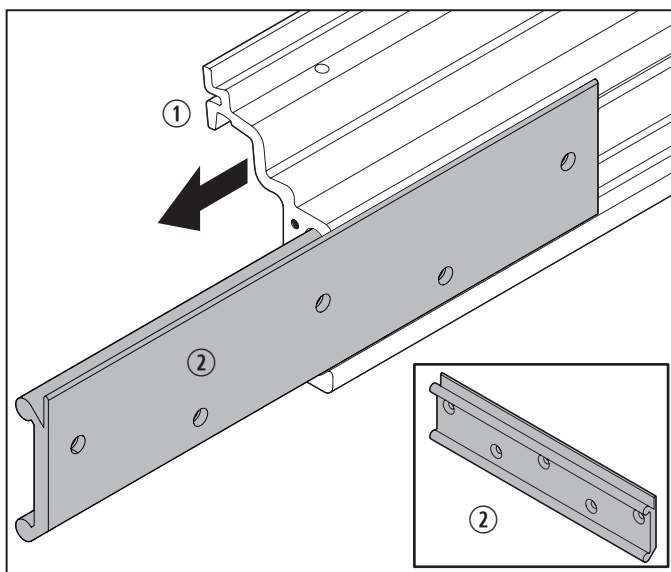

2 Attach the Adapter Bracket

- ① Adapter Bracket ② Prep Bracket

3. At the non-covered end, align the grooves in the adapter bracket with the prep bracket.
4. Slide the adapter bracket fully onto the prep bracket.

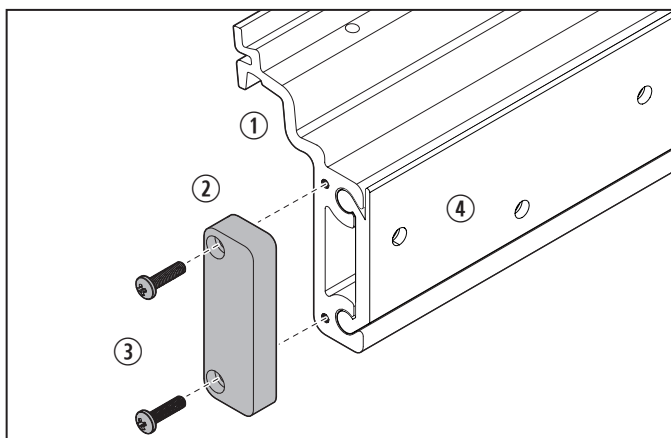

3 Attach the Close-ended Cover

- ① Adapter Bracket ③ M3 x 0.5 Screws
② Close-ended Cover ④ Prep Bracket

5. Attach the other close-ended cover to the inside edge of the adapter bracket using the screws provided.
6. Follow steps 1–5 to attach the second adapter bracket to the other end of the prep bracket.
7. Refer to your SlideTopper model installation manual for safety messaging and instructions on attaching the adapter bracket to the awning.