



•**HINT**• For pics of the completed installation, visit -
FRONTRUNNEROUTFITTERS.COM

INSTALL TIME: 25 minutes

1 GET ORGANIZED

you will need:

- ☐ A 13mm wrench
- ☐ A 10mm wrench
- ☐ A power drill
- ☐ A 5/16" drill bit, 15/64" drill bit
- ☐ An Axe with wooden or other type handle that can be drilled through.
- ☐ A white out pen or other marking tool for black rooftop
- ☐ A measuring tape

Here's what you're looking at:


- Axe blade cover
- 2 M6 Nyloc nuts
- 1 M8 x 70 mm long bolt
- 2 M6 small washer
- 1 M8 wing nut
- 1 M8 large washer
- 2 M6 x 25 mm long bolts

** You will be drilling a hole through the roof rack and your axe. So take your time and read the directions carefully and think twice about the exact placement of this accessory!

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER SUCH AS A QUALIFIED GARAGE OR AUTO BODY SHOP.

2 MARK, DRILL, BOLT.

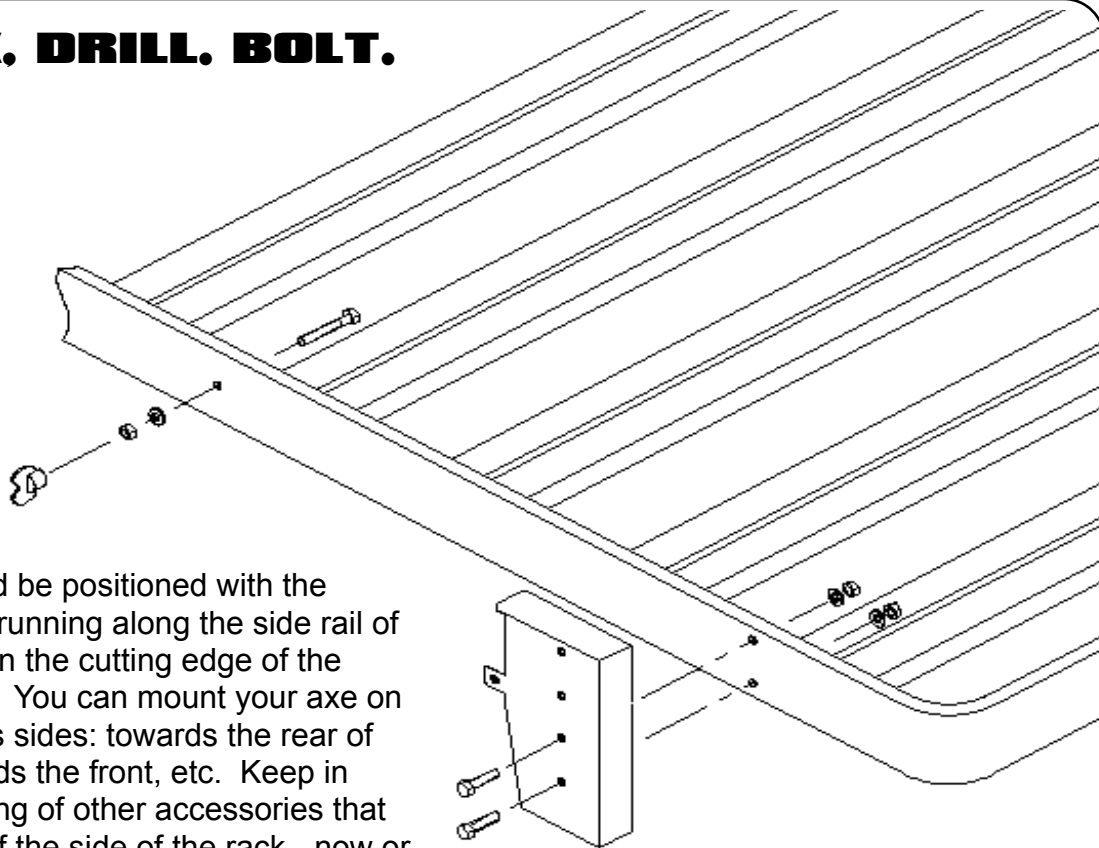

1) The axe should be positioned with the handle horizontal running along the side rail of your rack. Position the cutting edge of the blade pointing up. You can mount your axe on either of the rack's sides: towards the rear of the vehicle, towards the front, etc. Keep in mind the positioning of other accessories that you may mount off the side of the rack - now or in the future.

2) Dry fit the axe blade cover and mark the rack through the 2 holes. This is where you will drill the holes for your 6mm bolts.

3) With your 15/64" bit, drill the two holes and mount the axe blade cover using the 2 6mm bolts, washers and nuts as per the diagram above.

4) Approximately 3.5-4" from the end of the axe handle, use your marker and mark the position where you will attach the axe handle to the rack.

5) Use the 5/16" bit and drill a hole through your axe handle for the 8mm bolt.

6) Dry fit the axe in the blade cover and position the handle along the rail. Use the hole in the handle to mark the position for the 8mm bolt hole.

7) Using the 5/16" bit, drill a hole through your rack.

8) Insert the bolt from the back of the rack and bolt into place with the washer and nut on the outside as shown in the diagram above. as show in the illustration above.

9) Slide your axe into the blade cover and the handle over the bolt. Using the wing nut, secure the handle in place.

10) You can use a small padlock to lock your axe in place.

THE FINE PRINT: For the safety of the rack system and your vehicle, please obey all traffic laws and adjust speed accordingly to the load being carried and the conditions of the road. Cargo will affect the vehicles handling. You'll get many years of enjoyment out of your Front Runner Accessory if you use common load carrying sense.

©2010 Front Runner Outfitters, Inc. version 2-10