


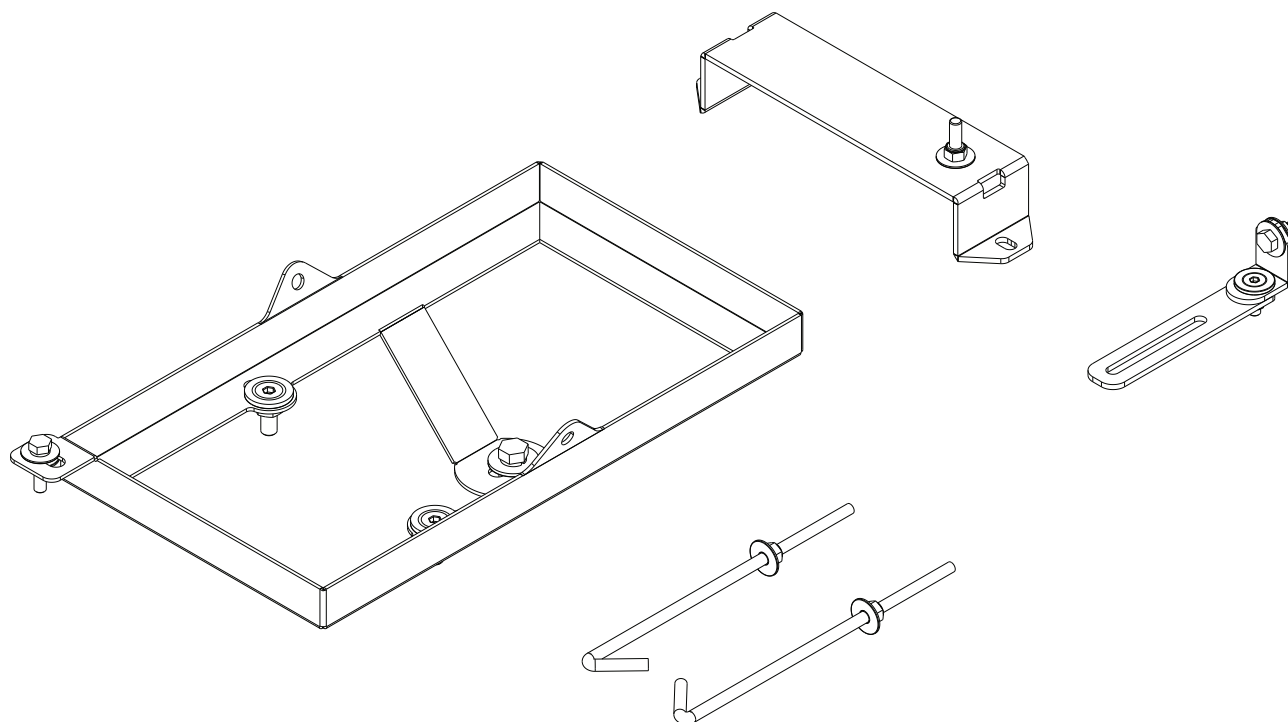

### READ ME !

Thank you for purchasing a Front Runner Toyota Prado 120 105Amp Battery Bracket.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

### IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

**NOTE:** Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

# 1

## GET ORGANIZED

### IN THE BOX

|    |     |                           |
|----|-----|---------------------------|
| 1  | 2 X | M8 x 25 Countersink Screw |
| 2  | 2 X | M12 Flat Washe            |
| 3  | 1 X | M6 x 25 Hex Bolt          |
| 4  | 3 X | M6 Spring Washer          |
| 5  | 8 X | M6 x 19 x 1SS Flat Washer |
| 6  | 6 X | M6 Nyloc Nut              |
| 7  | 3 X | M8 Hex Nut                |
| 8  | 1 X | Clamp Bracket             |
| 9  | 1 X | M8 x 25 Hex Bolt          |
| 10 | 1 X | M8 Spring Washer          |
| 11 | 1 X | M8 x 25 x 2 Flat Washer   |
| 12 | 1 X | Battery Tray              |
| 13 | 2 X | M6 Hook Bolt              |
| 14 | 1 X | Slotted Clamp Arm         |
| 15 | 1 X | M6 x 16 Hex Bolt          |
| 16 | 1 X | M6 x 20 Hex Bolt          |
| 17 | 1 X | M10 Flat Washer           |
| 18 | 1 X | 90 Side Car Bracket       |

### TOOLS NEEDED


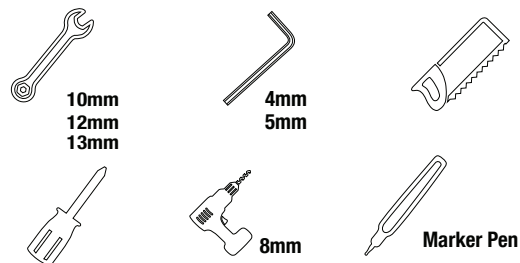


FIGURE 1.1



2.1

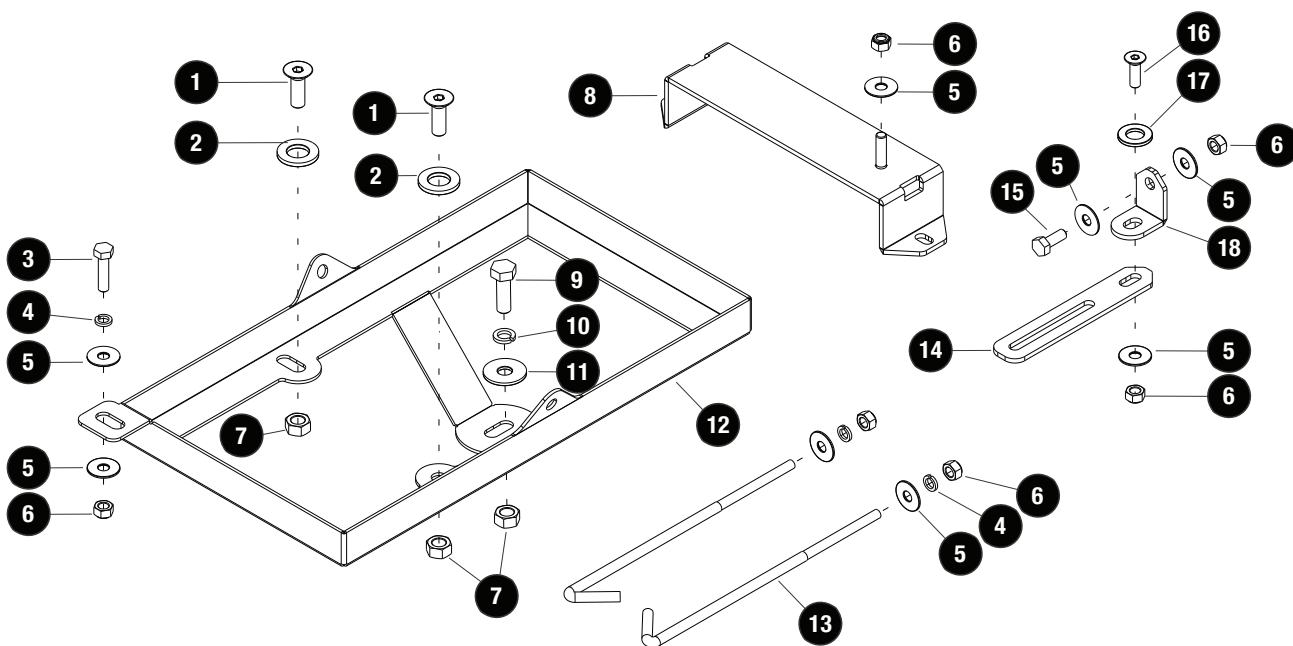


Loosen Power Steering bottle from the mounting bracket. Remove Mounting Bracket.  
The Power Steering bottle will be moved to new position as shown later.

2.2



Remove the following bracket next to the bracket shown in 2.1.

2.3

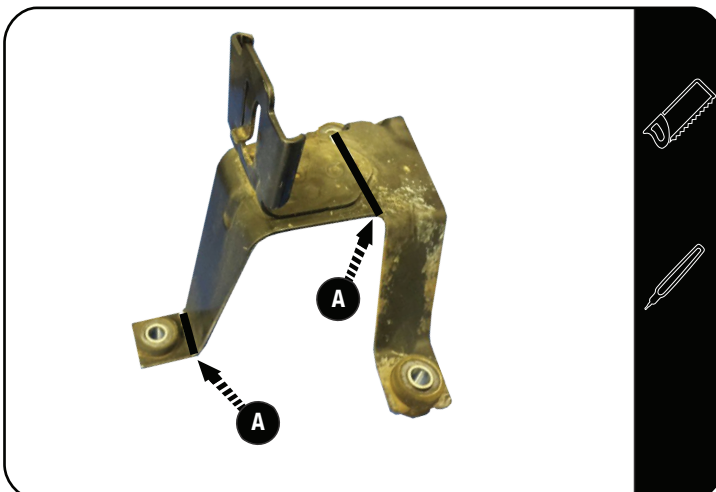

Cut the Power Steering Bracket on the two indicated marks in 2.3.

2.3



⌛ Bend the Power Steering bracket 80 degrees 25mm from the cut line. Drill a 8mm hole as indicated "B" in 2.3.

2.4



⌛ Bolt the newly modified Power Steering bracket to new position as shown in 2.5 using the fixings removed in 2.1.

2.5



⌛ Refit power steering bottle. Loosen pipe and refit as shown.

2.6




Loosen shown wire in 2.7 and move out of the way to desired area.

2.7



Loosen aircon pipe and move out of the way.

3.1

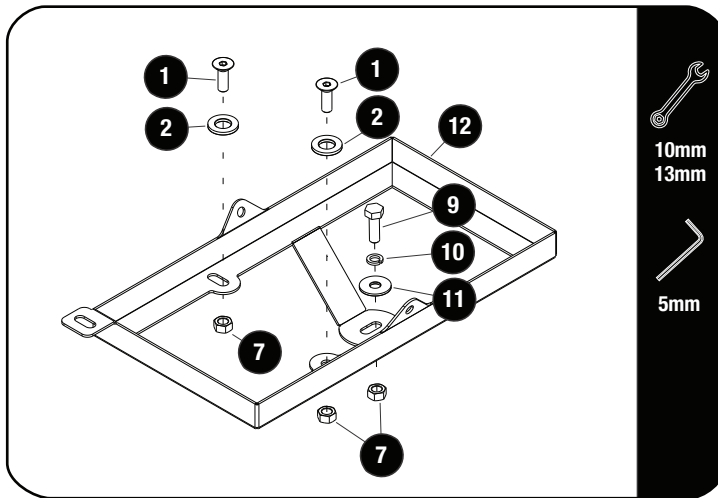


Loosely fasten the Battery Tray (Item 12) using two M8 x 25 Button Head, two M12 Flat Washer, M8 x 25 Hex Bolt, M8 Spring Washer, M8 x 25 x 2 Flat Washer and three M8 hex Nuts (Item 1, 2, 9, 10, 11 & 12) to the existing holes in the engine bay.

3.2



Make sure pipes and wires are out of the way before fully tightening.

3.3

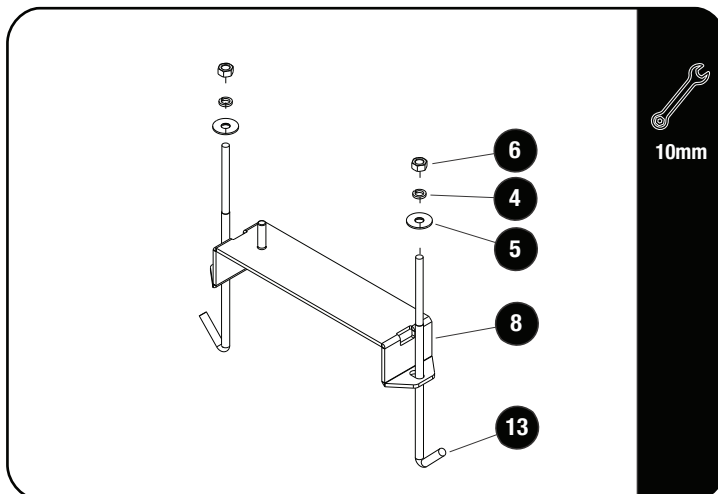

Place the battery into the Battery Tray and mount the Clamp Bracket (Item 8) using two M6 Hook Bolts, two M6 x 19 x 1 Flat Washer, two M6 Spring Washers and two M6 Nyloc Nuts (Item 13, 5, 4 & 6).

**3**

## **FINISH**

Congratulations! You did it. Take a step back and admire your work!

**4**

## **INSTALL OTHER VEHICLE AND RACK ACCESSORIES**

Now's the time to visit your favorite Front Runner Dealer in person or online.

**Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam**

**Share your adventures on:**

