




FRONT RUNNER
VEHICLE OUTFITTERS

ROCK SLIDERS

FORD RANGER T6 (2011-CURRENT)

ENG

BPFR002

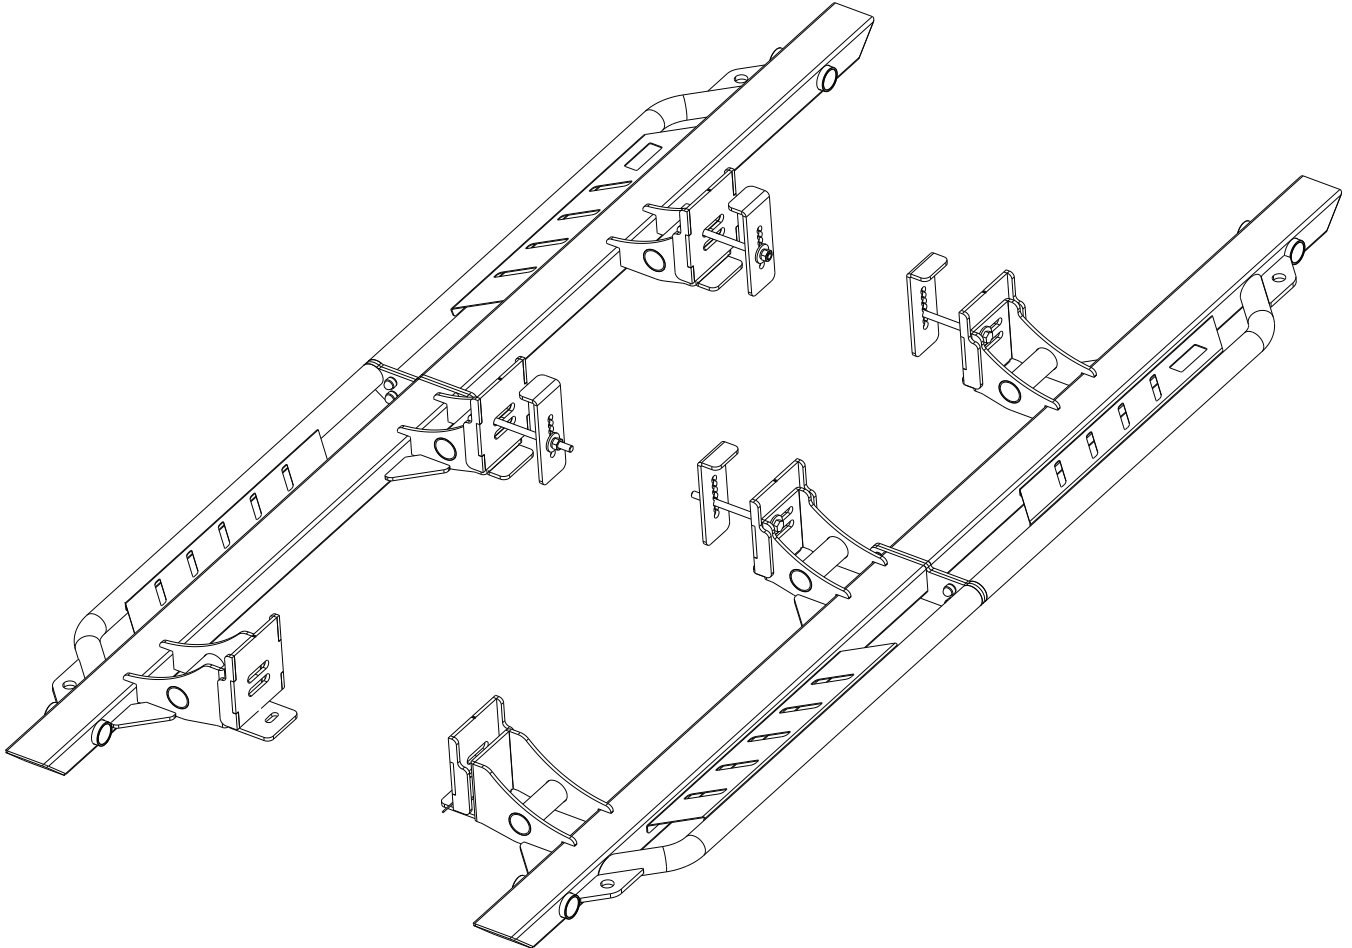

READ ME !

Thank you for purchasing Front Runner Rock Sliders.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

FRONT RUNNER CAN NOT RECOMMEND A MAXIMUM LOAD CARRYING CAPACITY. PLEASE REFER TO YOUR VEHICLE MANUFACTURER'S RECOMMENDATIONS. IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED


IN THE BOX

1	1 X	Rock Slider RH Front
2	1 X	Rock Slider RH Rear
3	1 X	Rock Slider LH Front
4	1 X	Rock Slider LH Rear
5	4 X	L-Shape Mount Plate
6	2 X	M10 x 130 Hex Bolt
7	8 X	M10 x 30 x 3 Flat Washer
8	4 X	M10 Spring Washer
9	4 X	M10 Hex Nut
10	2 X	M10 x 150 Hex Bolt
11	2 X	M8 Channel Nut
12	2 X	M8 x 40 Hex Bolt
13	16 X	M8 Nut Cap
14	8 X	M8 Nyloc Nut
15	16 X	M8 x 16 x 1.6SS Flat Washer
16	8 X	M8 x 25 Hex Bolt
17	2 X	M8 Spring Washer
18	2 X	M8 x 25 x 2 Flat Washer
19	6 X	Backing Bracket


TOOLS NEEDED



FIGURE 1.1

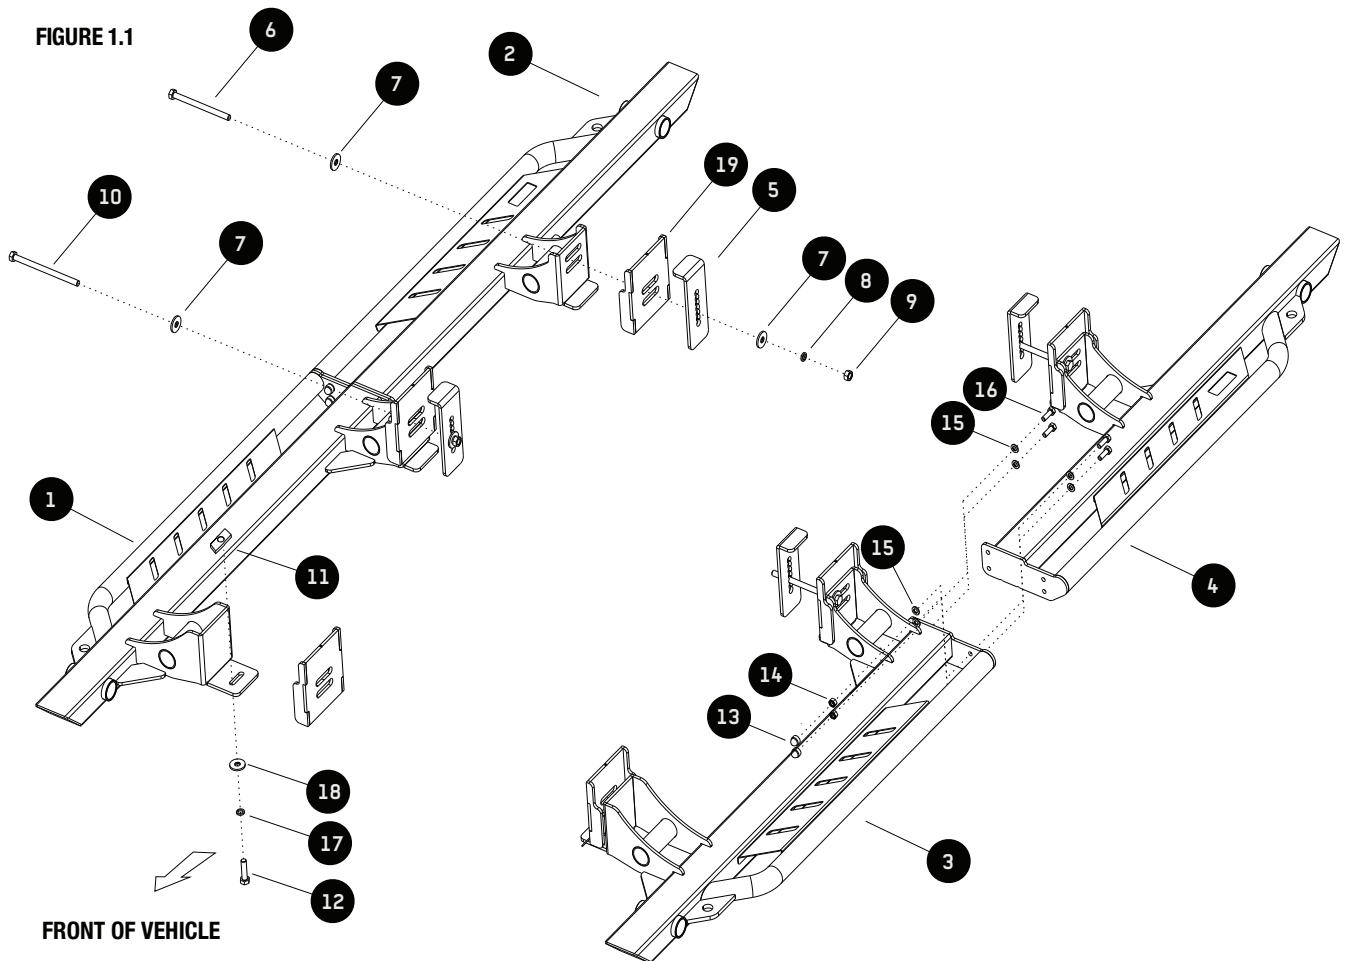

2.1

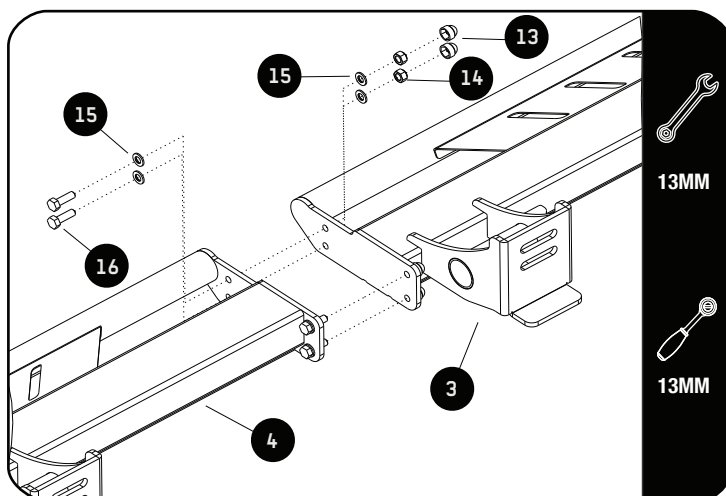


If your vehicle has factory fitted side steps, you will need to remove them before fitting your Front Runner Rock Sliders.



Start by assembling both LH and RH Rock Sliders (Items 1, 2, 3 & 4) using M8 x 25 Hex Bolts, M8 x 16 x 1.6SS Flat Washers and M8 Nyloc Nuts (Items 14, 15 & 16) as shown.

After fully tightening, place M8 Nut Caps (Item 13) over all nut and bolt heads.

2.2

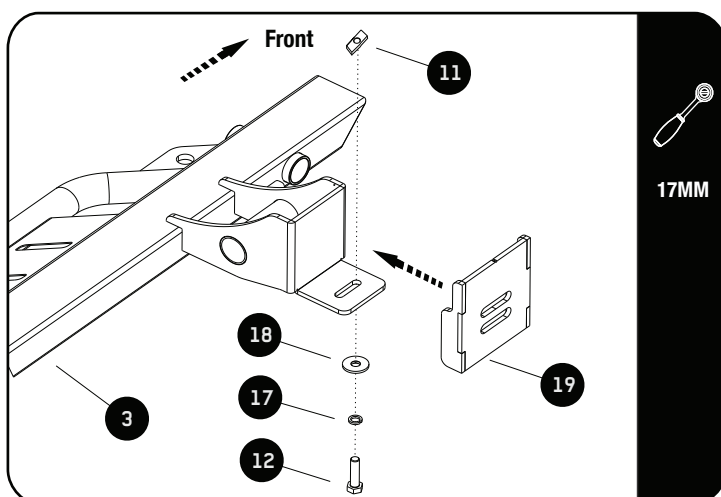


Position the front of the Rock Sliders 50mm from the edge of the front wheel arch. Use the vehicle's jack to keep the assembled Rock Slider in position.

Place a Backing Bracket (Item 19) between each of the mounting brackets of the Rock Sliders and the chassis.

Align the slot in the front mounting bracket with the hole in the chassis. Slide a M8 Channel Nut (Item 11) into the closest opening in the chassis and align it with the hole and slot. Secure the front mounting bracket to the chassis using the Channel Nut (Item 11), M8 x 40 Hex Bolt, M8 x 25 x 2 Flat Washer and M8 SS Spring Washer (Items 12, 17, & 18) as shown.

Do not fully tighten yet.

2.3

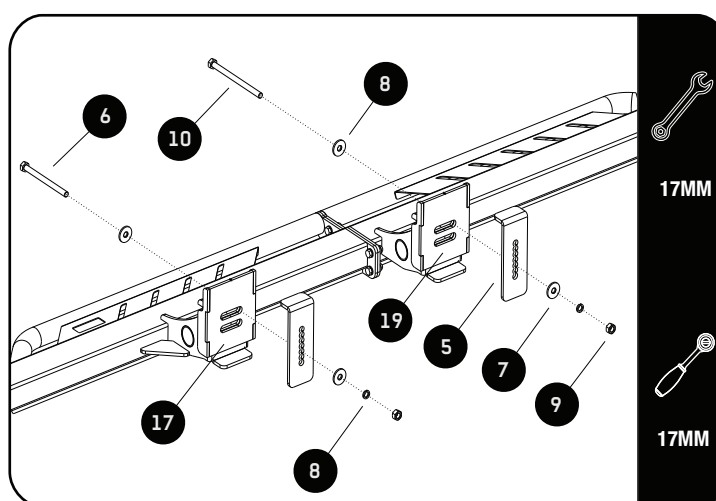

Using the L-Shape Mounting Plate (Item 5) and M10 x 130 Hex Bolt, M10 x 30 Flat Washer, M10 SS Spring Washer and M10 Hex Nut (Items 6, 7, 8 & 9), secure the rear mounting bracket.

Secure the middle mounting bracket by using the L-Shape Mounting Plate (Item 5) and M10 x 150mm Hex Bolt, M10 x 30 Flat Washer, M10 SS Spring Washer and M10 Hex Nut (Items 7, 8, 9 & 10).

Repeat Step 2.2 and 2.3 on both sides of the vehicle.

Fully Tighten all the fasteners.

3

COMPLETION

3.1

Congratulations! You did it. Take a step back and admire your work!

4

Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    