


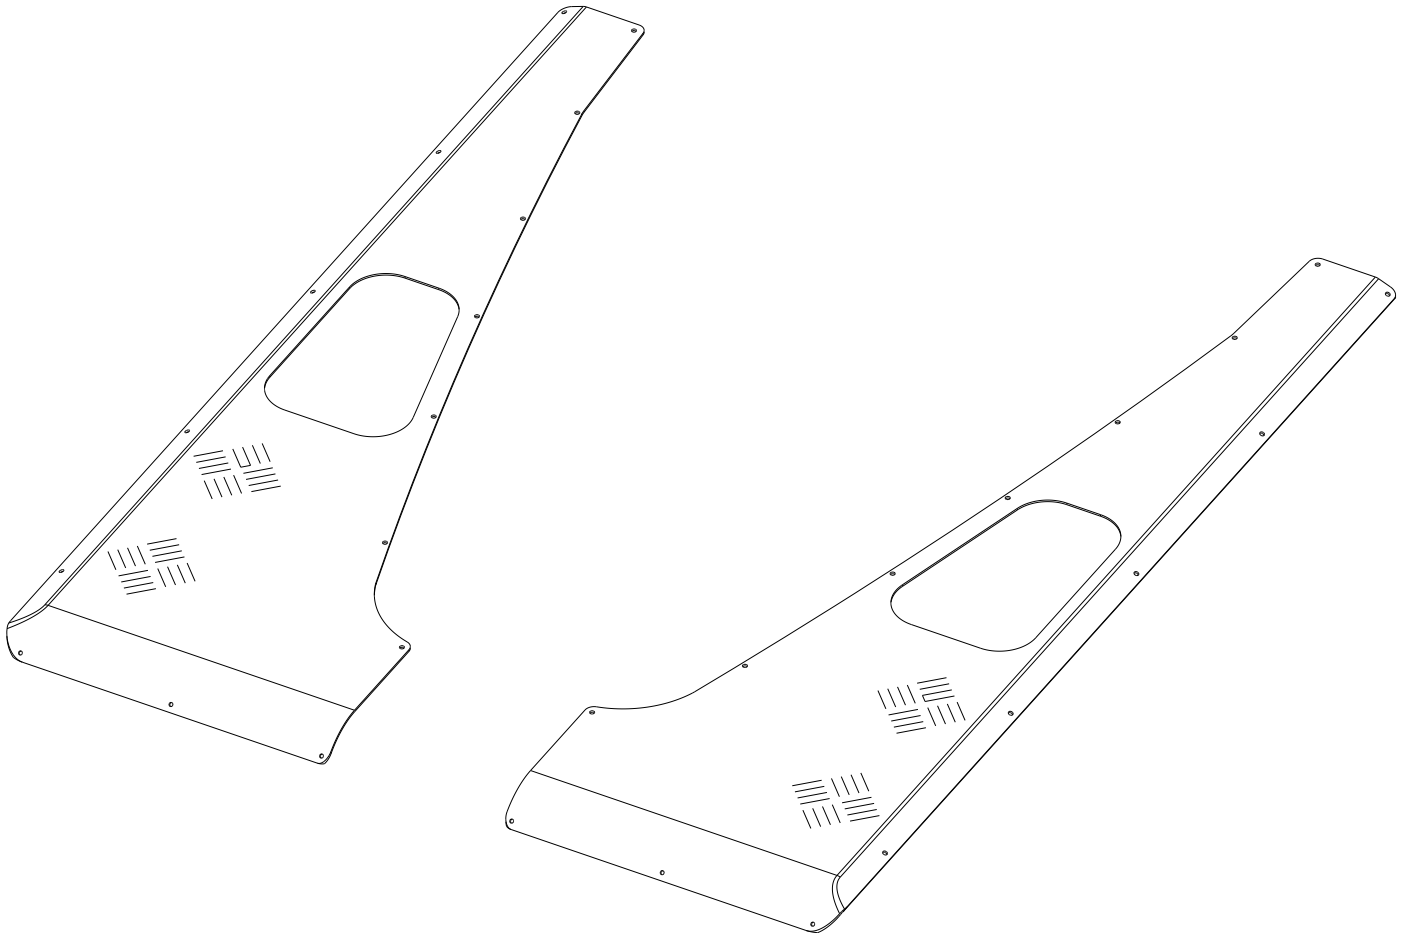

READ ME ! ⚠

Thank you for purchasing a Land Rover Defender 90/110 (1983-2016) Fender Protector / Black
Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.
Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.
Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	1 X	Fender Top Driver side
2	2 X	Fender Top Passenger side
3	30 X	M4 x 10 Pop Rivit


TOOLS NEEDED

5mm
43mm Hole saw

FIGURE 1.1

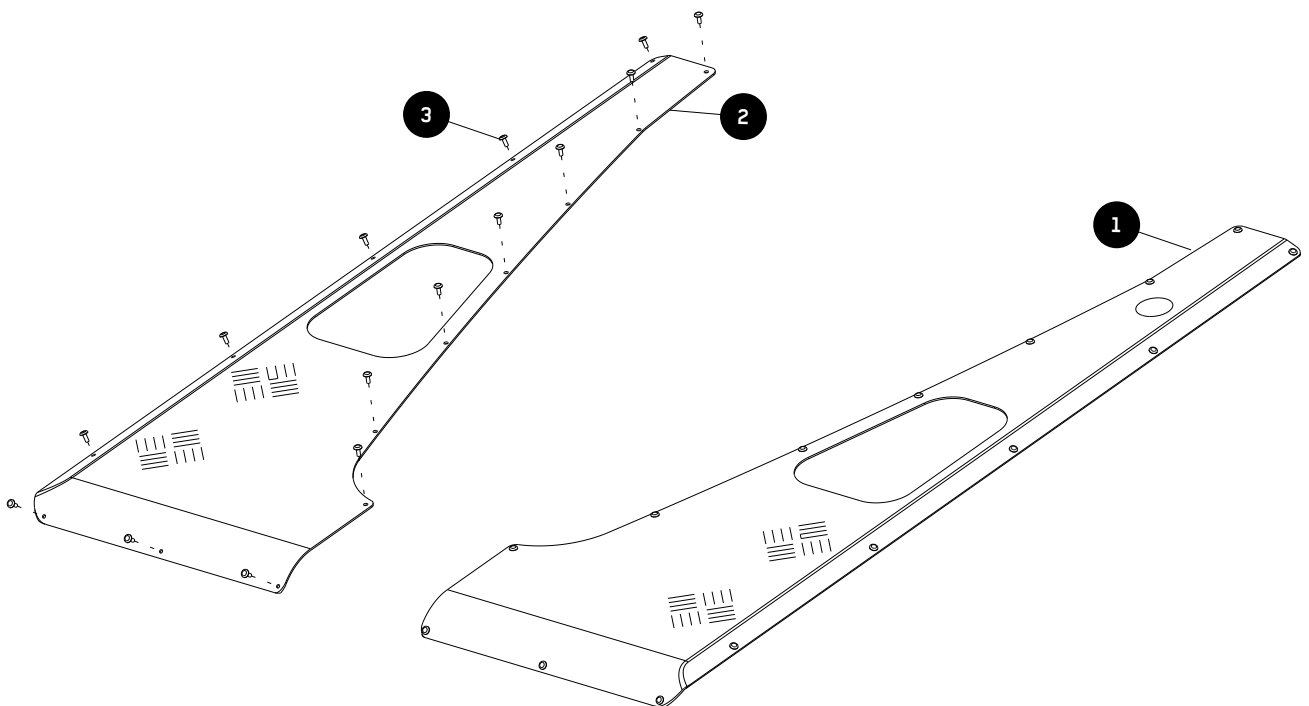


2.1

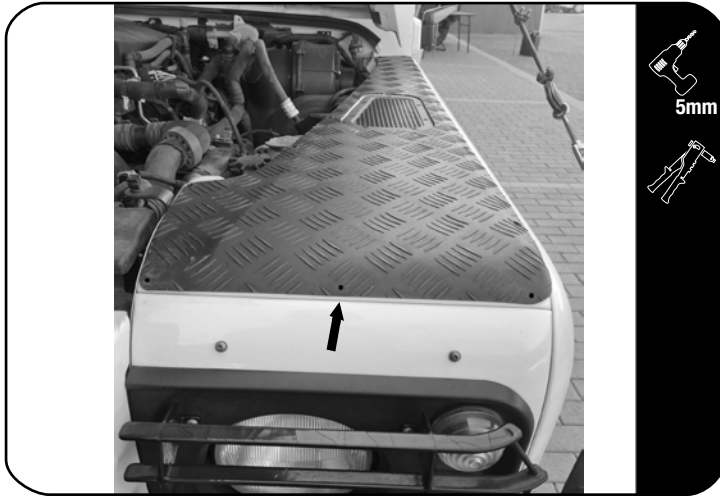


Line up the Passenger side Fender Top as shown and mark the Centre hole.
Remove the Fender Top and drill the Marked hole with a 5mm drill bit.

2.2

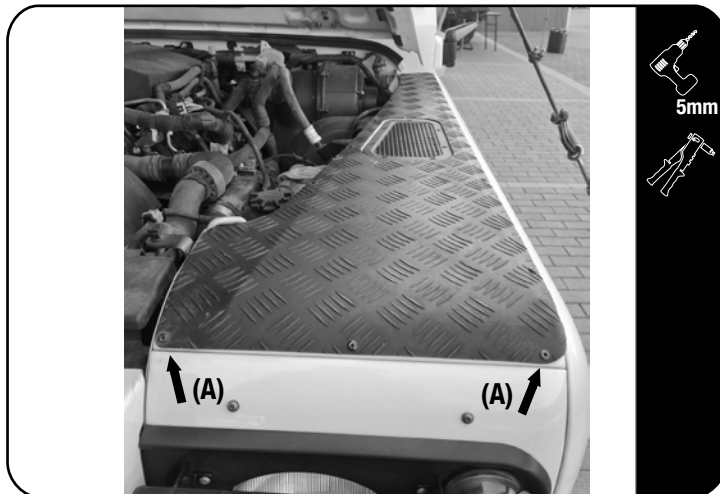

Place the Fender Top back into place and Pop Rivet the centre hole that was drilled in 2.1
Make sure tha the Fender Top runs parallel to the line of the fender.
Drill the 2 outer holes marked (A) and Pop Rivit the 2 holes drilled.
Drill the remainder 12 holes and Pop Rivit.

2.3

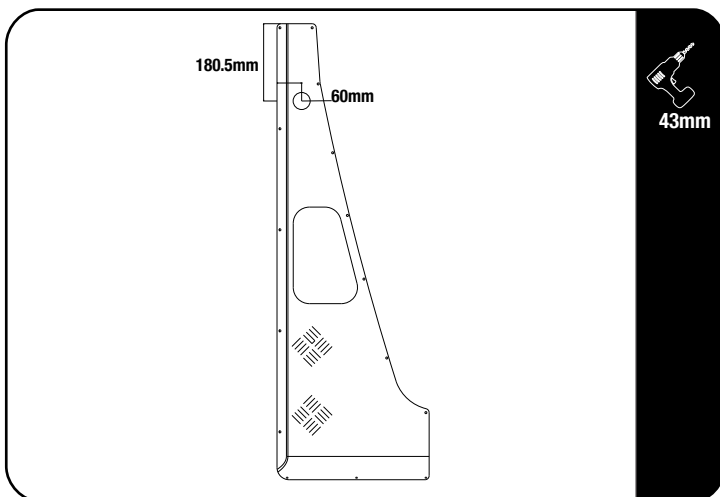

NOTE: Only for Vehicles with Antenna on Driver side if no Antenna move to STEP 2.4




Measure 180.5mm from the top of the Fender top and 60mm from the outer edge as shown and make a mark.
Use a 43mm Hole saw to drill the hole for the antenna to fit.

2


FIT AND SECURE

2.4

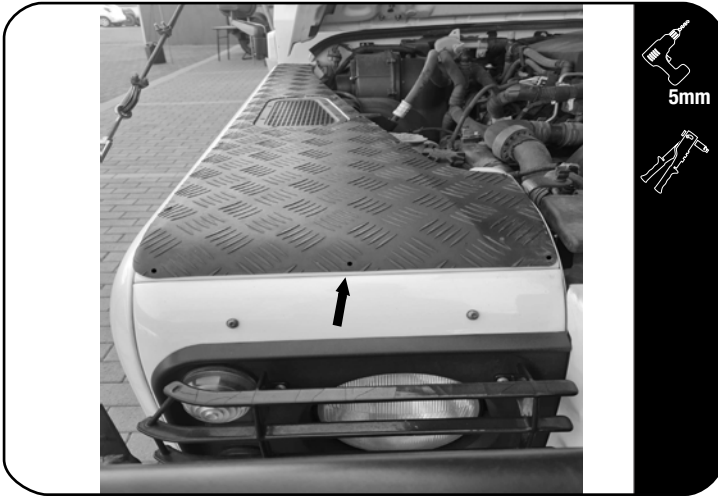

Line up the Driver side Fender Top as shown and mark the Centre hole.
Remove the Fender Top and drill the Marked hole with a 5mm drill bit.

2.5

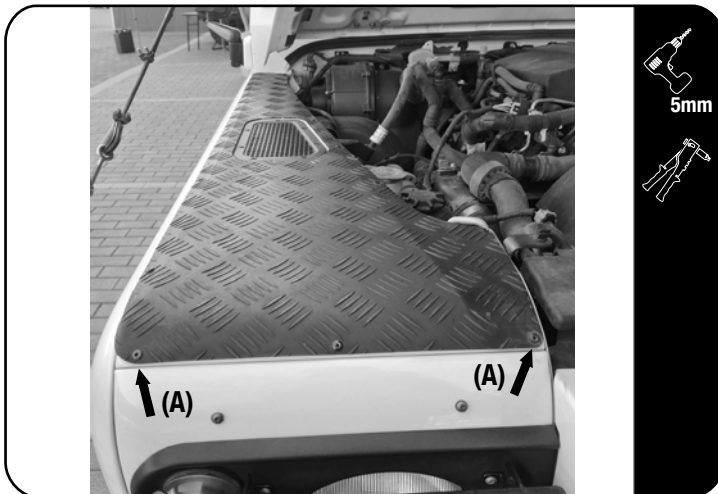

Place the Fender Top back into place and Pop Rivet the centre hole that was drilled in 2.4
Make sure tha the Fender Top runs parallel to the line of the fender.
Drill the 2 outer holes marked (A) and Pop Rivit the 2 holes drilled.
Drill the remainder holes and Pop Rivit.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FindAnywhere #KeepSearching

Share your adventures on:

