




FRONT RUNNER
VEHICLE OUTFITTERS

ROCK SLIDERS

MITSUBISHI PAJERO SPORT (QE SERIES)

ENG

BPMP003

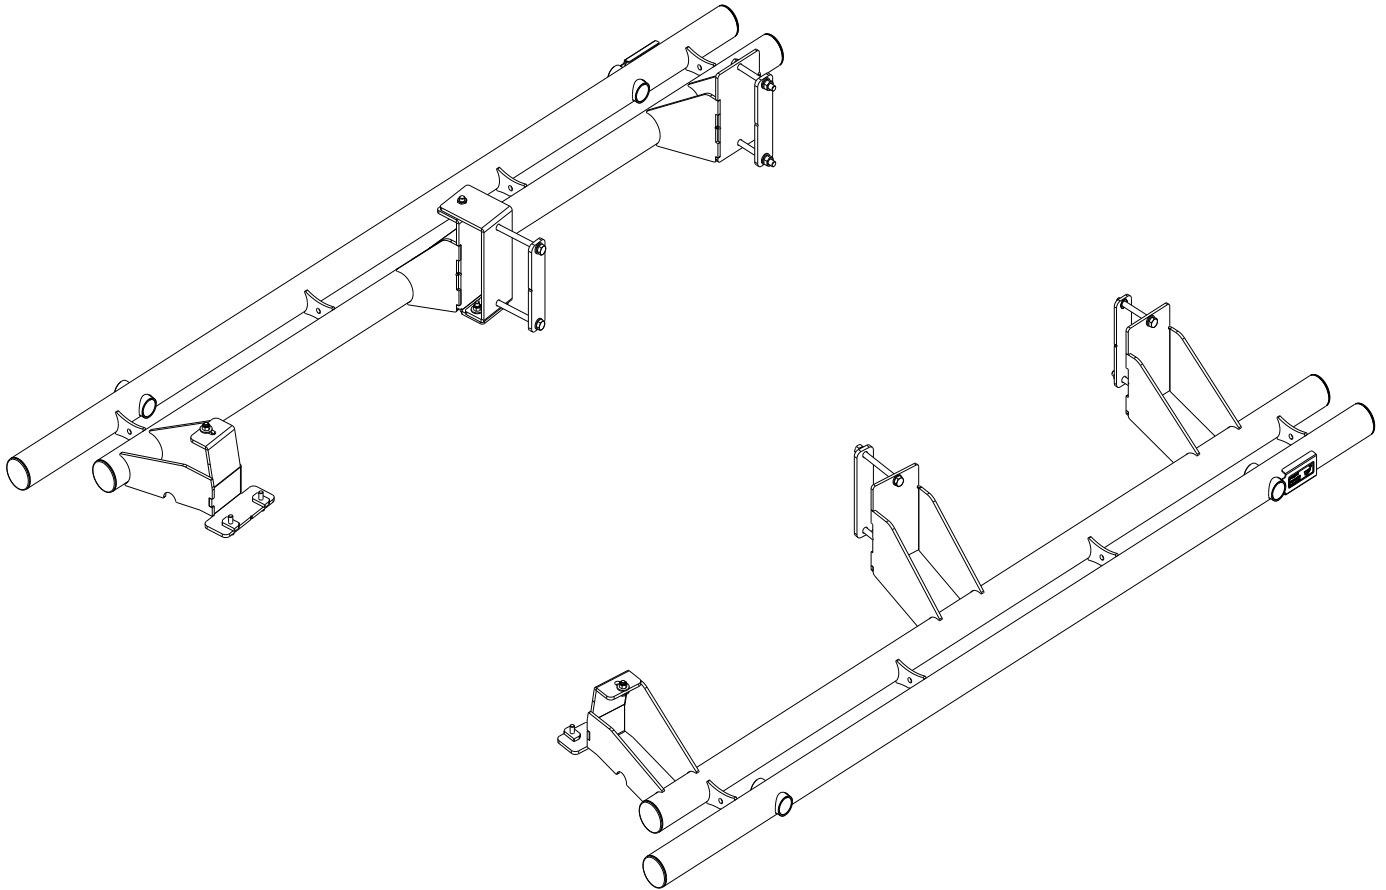

READ ME !

Thank you for purchasing a Front Runner Mitsubishi Pajero Sport (QE Series) Rock Sliders..

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.
Please call us if you have any questions about the installation of this product.

IMPORTANT WARNING!

FRONT RUNNER CAN NOT RECOMMEND A MAXIMUM LOAD CARRYING CAPACITY. PLEASE REFER TO YOUR VEHICLE MANUFACTURER'S RECOMMENDATIONS. IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED


IN THE BOX

1	2 X	Rock Slider - 1LH + 1RH
2	3 X	M10 x 100 Hex Bolt
3	15 X	M10 x 21 x 1.2SS Flat Washer
4	3 X	Bolt Plate
5	9 X	M10 Spring Washer
6	6 X	M10 Hex Nut
7	1 X	Welded Bolt Plate
8	1 X	M10 x 90 Hex Bolt
9	4 X	M8 Nyloc Nut
10	1 X	Middle RH Welded Bolt Plate
11	4 X	M10 x 120 Hex Bolt
12	12 X	M8 x 25 x 2 Flat Washer
13	2 X	M8 x 25 Hex Bolt
14	6 X	M8 x 30 Hex Bolt
15	4 X	M8 Channel Nut On Wire
16	4 X	M8 Spring Washer
17	1 X	M10 x 25 Hex Bolt


TOOLS NEEDED



FIGURE 1.1

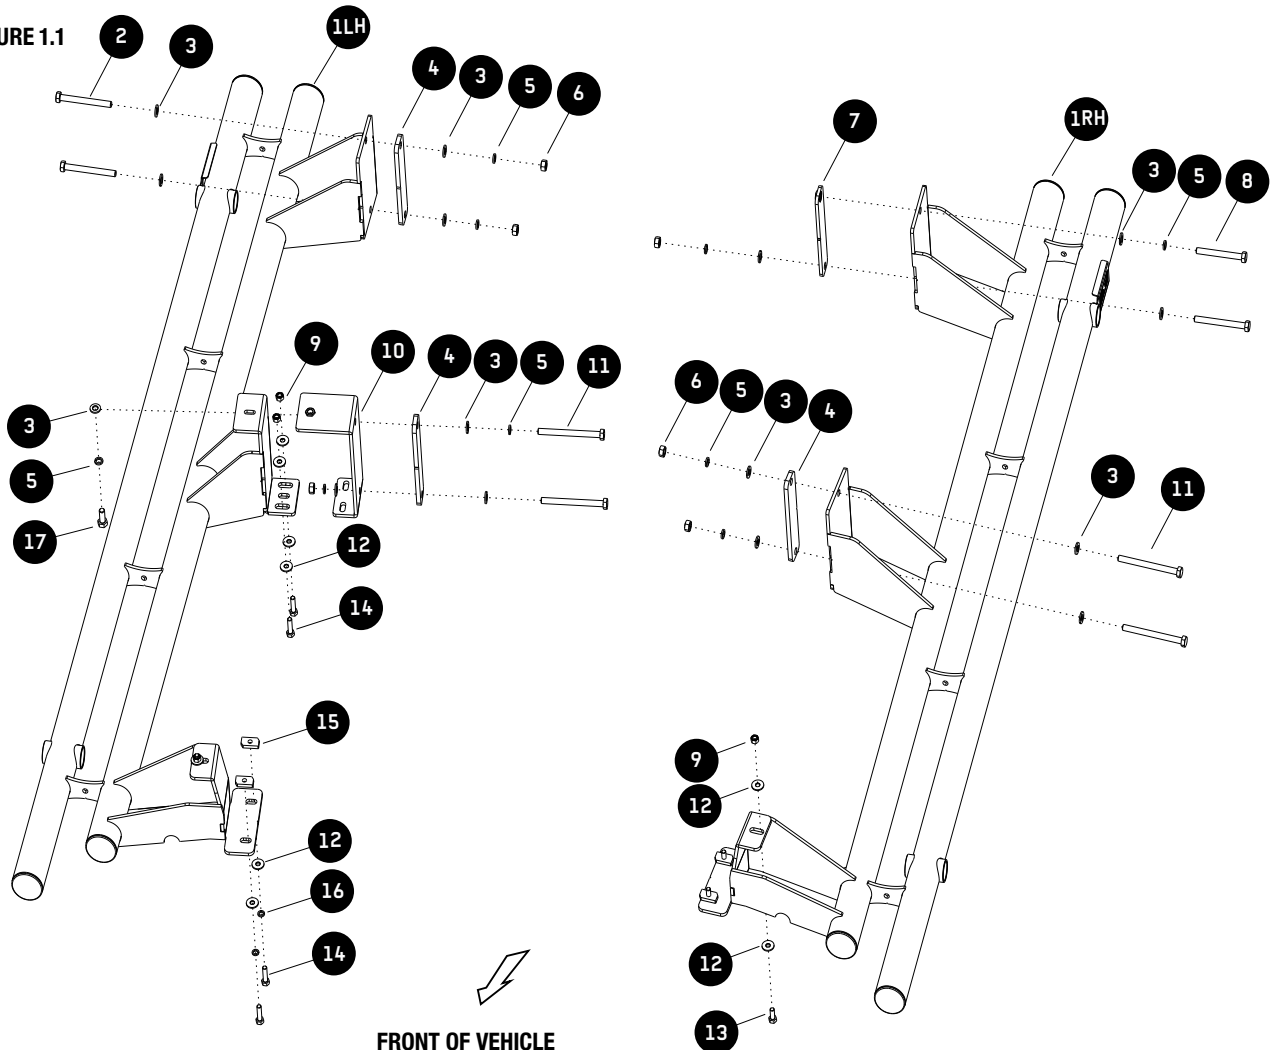


2.1

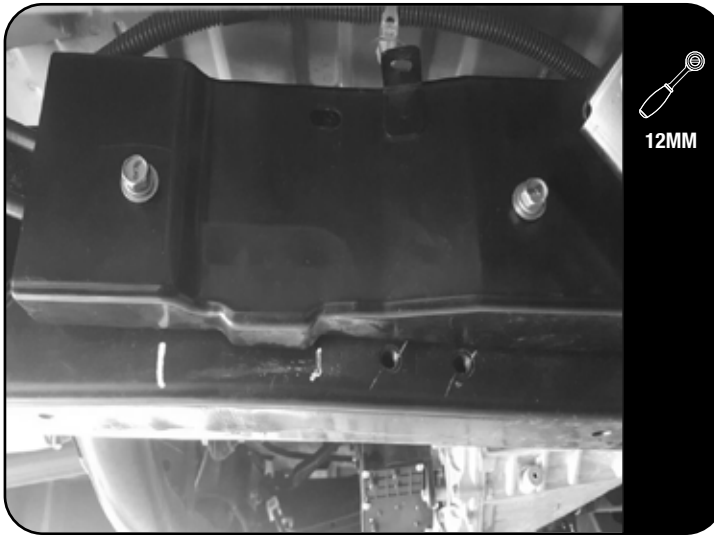

Looking at the right hand side of the vehicle, loosen and remove the hand brake cable cover and bracket.

You will refit this after you installed the rock sliders.

2.2

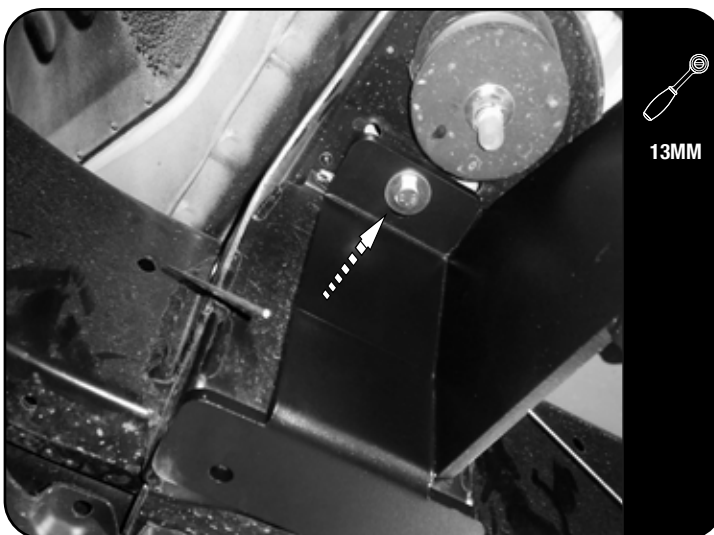

Using the vehicles jack, lift the rock slider into place. Looking at the front mounting bracket on the rock sliders, align the holes in the bracket with the holes on the vehicles chassis.

Loosely fit Items 9, 12 & 13. in the top hole of the bracket as shown. Refer to Figure 1.1.


Repeat this step on the other side.

2.3



Looking at the front left and right side of the vehicle, place two M8 Channel Nuts (Item 15) through the bottom holes as shown. Loosely fit Items 12, 14 & 16 to item 15.

2.4

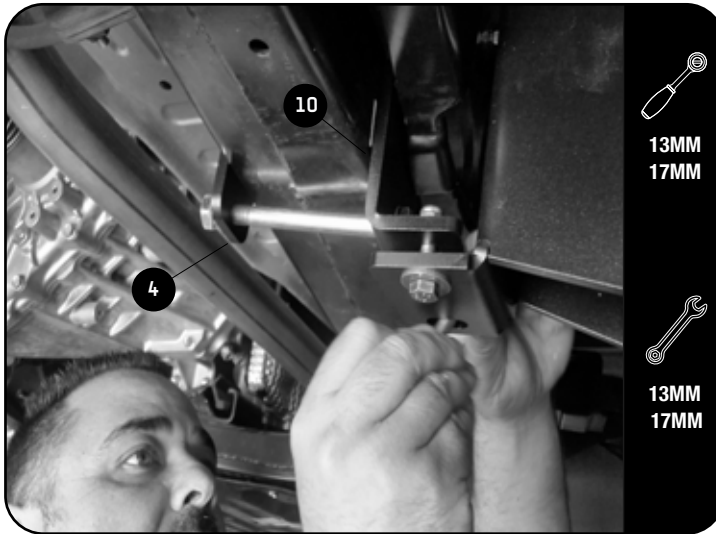


Move to the middle mounting bracket. Slide the Middle RH Welded Bolt Plate (Item 10) between the chassis and the hand brake cables.

Loosely fit Items 3, 5 & 11 to top hole of the Middle RH Welded Bolt Plate (Item 10) and Items 3, 4, 5, 6 & 11 in the bottom of Item 10.

Refer to Figure 2.5.


Now fit the rock slider to the Middle RH Welded Bolt Plate using Items 9, 12 & 14 through the bottom holes and Items 3, 5 & 17 through the top hole. Refer to Figure 2.5.

2.5

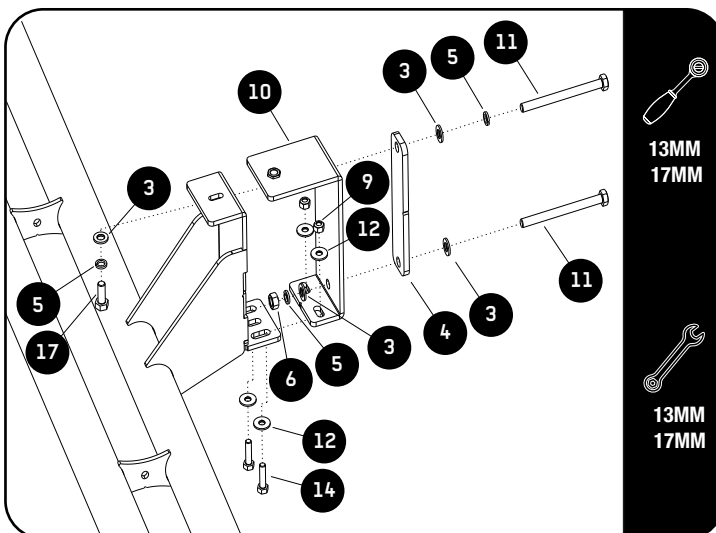

Exploded view of the Middle RH Welded Bolt Plate to chassis and rock slider to bolt plate.

2.6

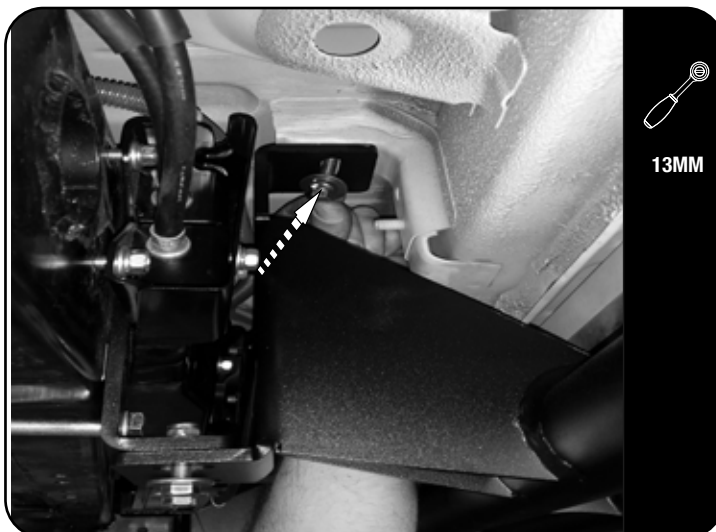

Also looking at the right side middle mounting bracket on the rock slider, fit Items 12, 13 and 16 to the chassis through the top hole of the bracket.

On the left side use Items 3, 4, 5, 6 & 11 to secure the rock slider to the chassis. Refer to Figure 1.1

2.7




Move to the right rear mounting bracket. Bend the cable bracket out of the way as shown.

Loosely fit Items 2, 3, 4, 5 & 6. Refer to Figure 1.1.

On the rear left side fit Items 2, 3, 5, 6 & 7 through the bottom hole of the mounting bracket and items 3, 5 & 8 to the top hole of Item 7. Refer to Figure 2.8.

2.8

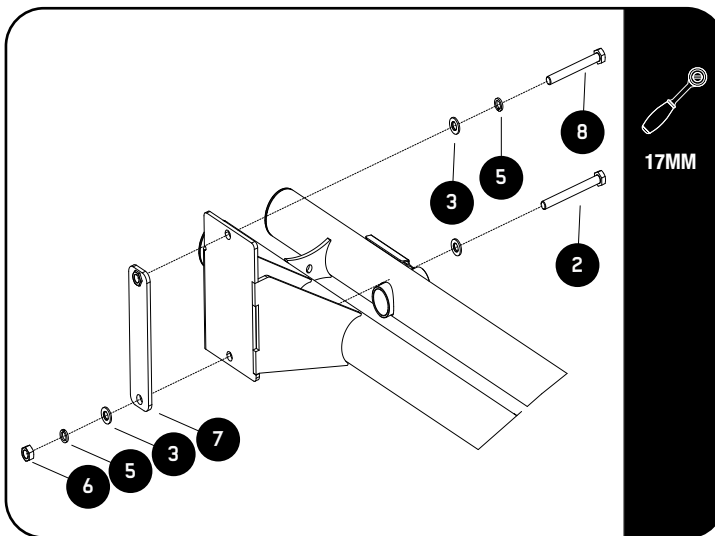

Exploded view the rear left side mounting bracket.

! Before fully securing the Rock Sliders, make sure that no parts are interfering with the brake lines.

3

COMPLETION

3.1



Congratulations. You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    