FRONT RUNNER
VEHICLE OUTFITTERS


ROCK SLIDERS

MITSUBISHI TRITON 2015-CURRENT ROCK SLIDERS

ENG

BPMT001

45 min

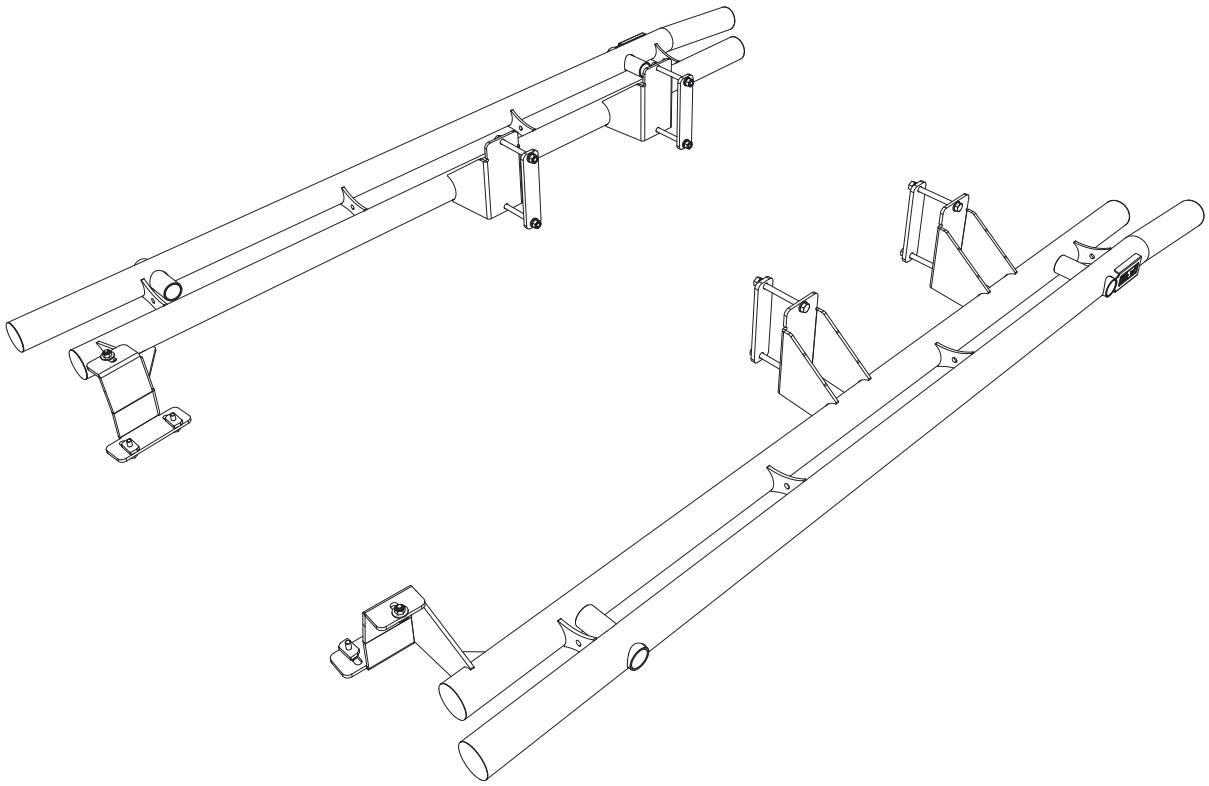

Thank you for purchasing Front Runner Rock Sliders.

Before you start, take a moment to familiarize yourself with this Fitting Intruction and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE.

IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH.

YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE.

THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE.

IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES,

YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

© COPYRIGHT 2016 FRONT RUNNER VEHICLE OUTFITTERS

1 GET ORGANIZED

Here is what you are looking at for BPMT001

IN THE BOX		
1	1 X	Rock Sliders (1LH & 1RH)
2	8 X	M10x110 Hex Bolt
3	16 X	M10 Flat Washer
4	4 X	Rock Slider Bolt Plate
5	8 X	M10 Spring Washer
6	8 X	M10 Hex Nut
7	4 X	M8 Channel Nut On Wire
8	8 X	M8x25x2 Flat Washer
9	4 X	M8 Spring Washer
10	4 X	M8x30 Hex Bolt
11	2 X	M8 Nyloc
12	2 X	M8x20 Hex Bolt

TOOLS NEEDED




13MM
17MM



13MM
17MM


FIGURE 1.1

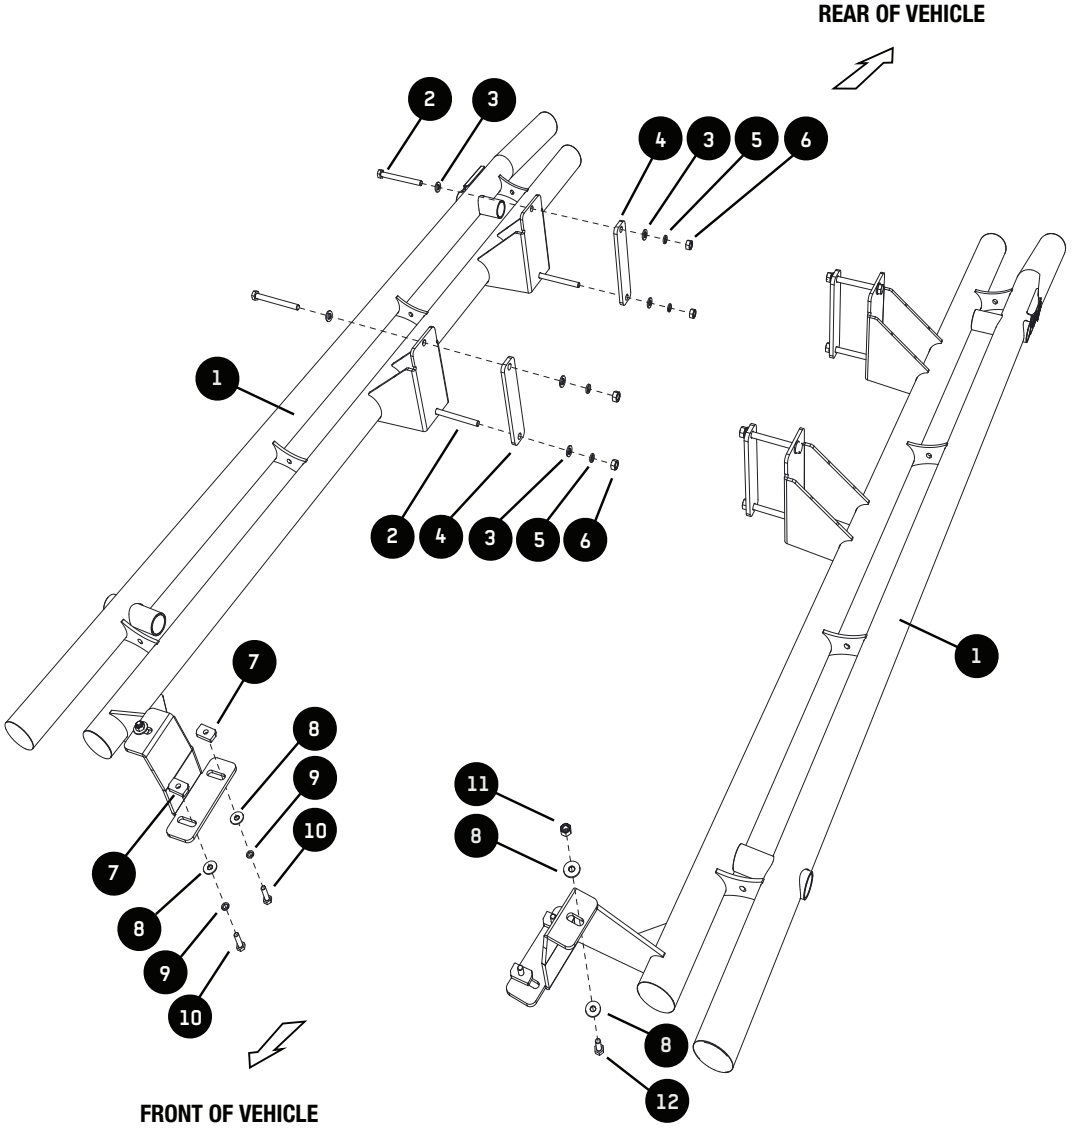

 © COPYRIGHT 2016 FRONT RUNNER VEHICLE OUTFITTERS


2 SECURE

2.1

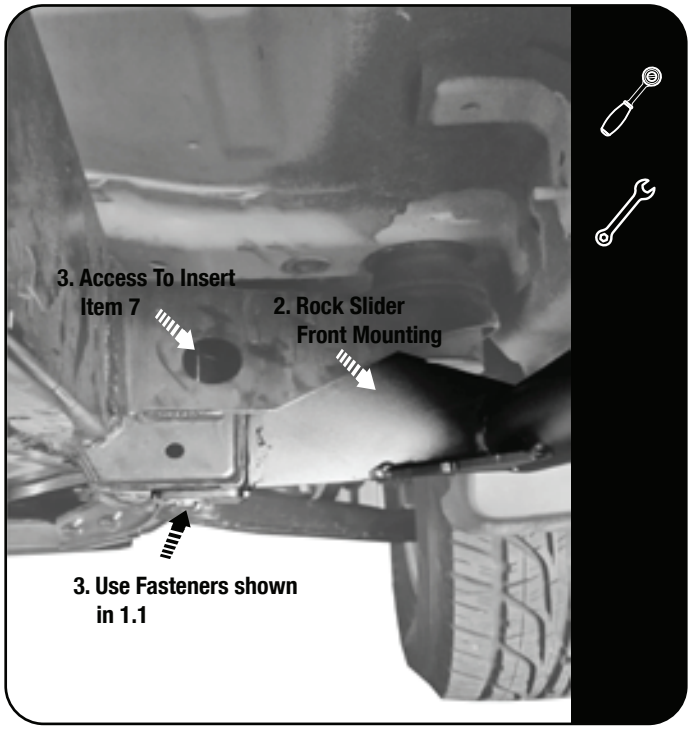

1. Lift the Rock Slider into position as shown in 2.1 using the vehicles jack.
2. Use the front mounting of the Rock Slider to align the slider on the chassis.
3. Insert item 7 (M8 Channel Nut on Wire) through the access hole in the chassis and secure using the fasteners shown in 1.1

2.2

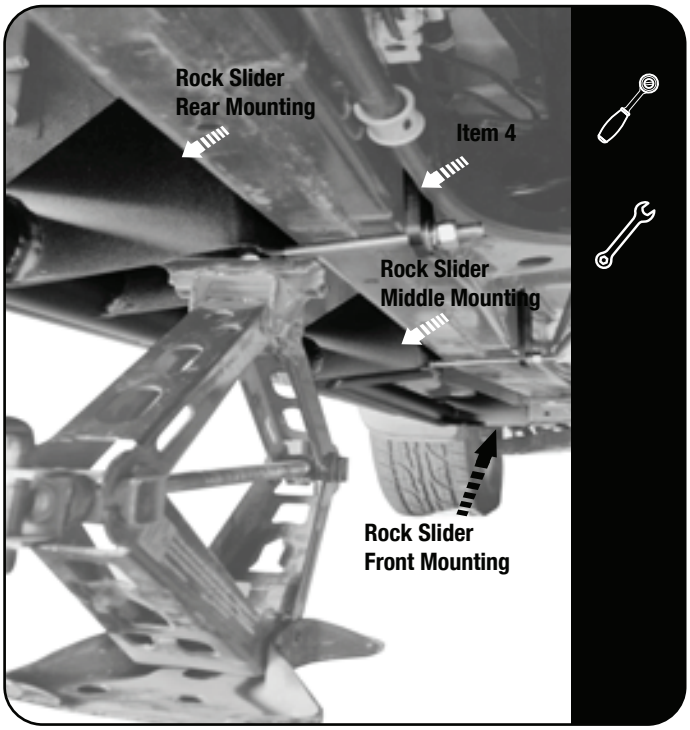

Slide item 4 between the brake lines and chassis. Insert the fasteners as shown in 1.1.

Before securing the Rock Sliders, make sure that no parts are interfering with the brake lines.

© COPYRIGHT 2016 FRONT RUNNER VEHICLE OUTFITTERS

3 COMPLETION

3.1



Congratulations you have completed your installation, take a step back and admire your work.

4 INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

© COPYRIGHT 2016 FRONT RUNNER VEHICLE OUTFITTERS