




FRONT RUNNER
VEHICLE OUTFITTERS

ROCK SLIDERS

MITSUBISHI TRITON 2015-CURRENT ROCK SLIDERS

ENG

BPMT002

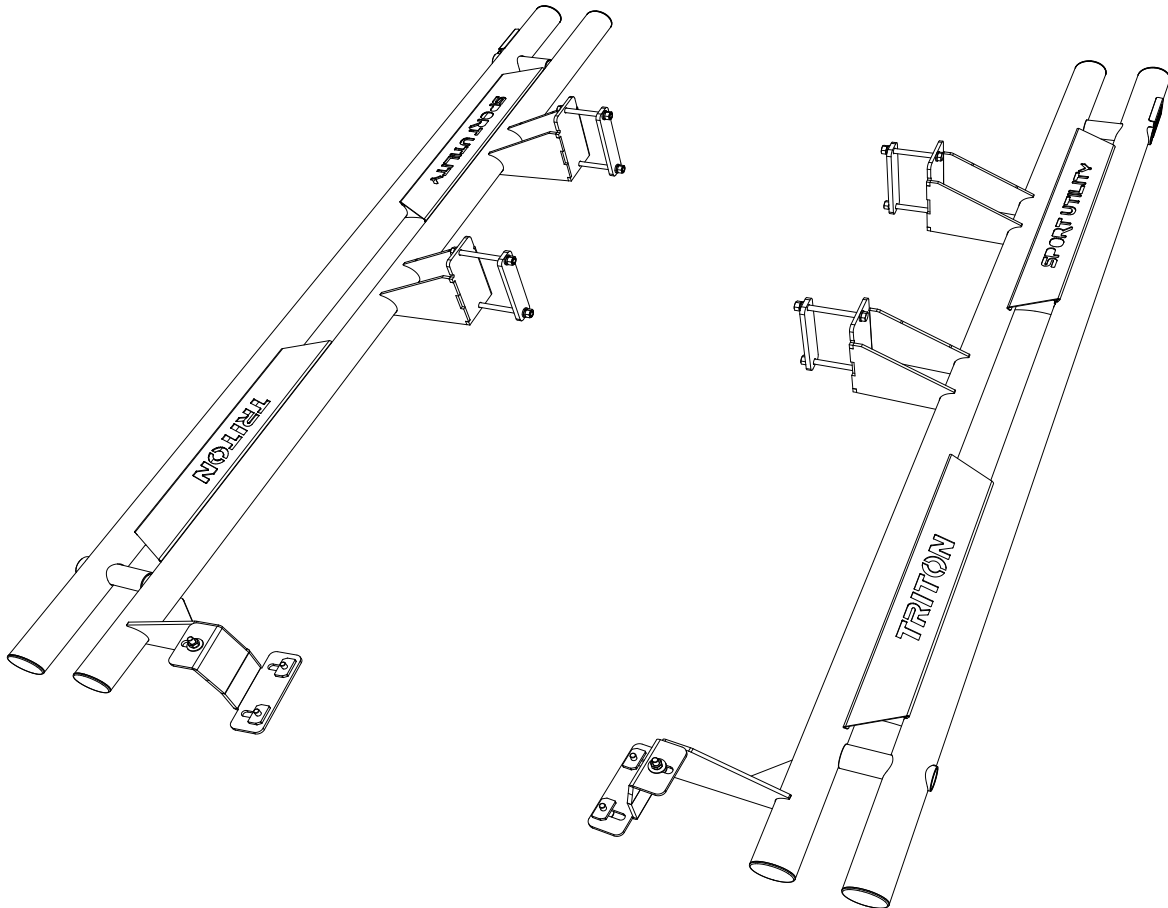

READ ME !

Thank you for purchasing Front Runner Rock Sliders.

Before you start, take a moment to familiarize yourself with this Fitting Instruction and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE.

IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH.

YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE.

THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE.

IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES,

YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED

Here is what you are looking at for BPMT002


IN THE BOX

1	1 X	Rock Sliders (1LH & 1RH)
2	4 X	M10 x 100 Hex Bolt
3	16 X	M10 Flat Washer
4	4 X	Rock Slider Bolt Plate
5	8 X	M10 Spring Washer
6	8 X	M10 Hex Nut
7	4 X	M10 x 110 Hex Bolt
8	4 X	M8 Channel Nut On Wire
9	8 X	M8 x 25 x 2 Flat Washer
10	6 X	M8 Spring Washer
11	6 X	M8x30 Hex Bolt
12	2 X	M8 Hex Nut


TOOLS NEEDED



FIGURE 1.1

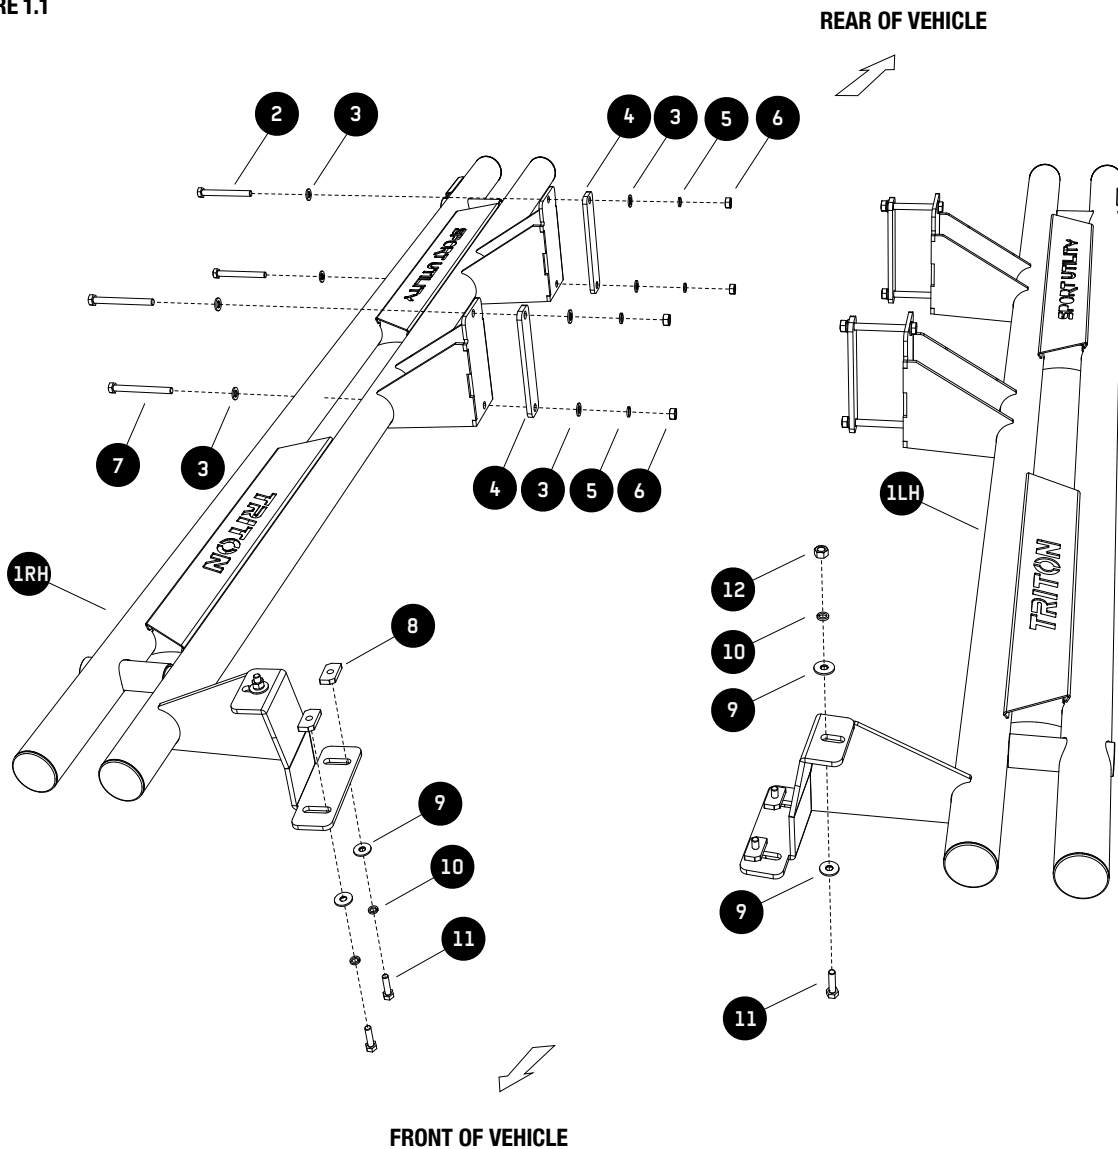

2.1

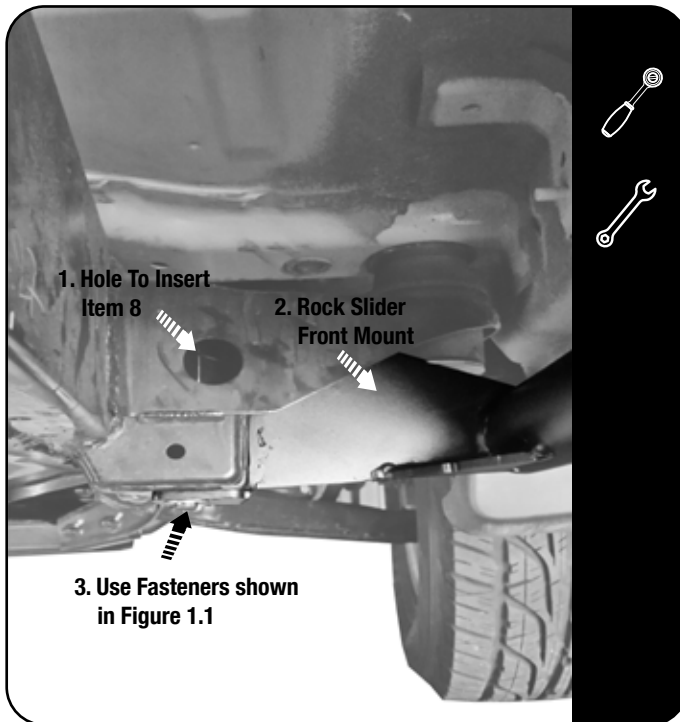


 Lift the Rock Slider into position as shown in Figure 2.1 using the vehicles jack to hold it in place.

Use the front mounting of the Rock Slider to align the slider with the holes on the chassis. Refer to Figure 2.1 point 3.

Insert item 8 (M8 Channel Nut on Wire) through the access hole in the chassis and secure using items 9, 10 & 11.

2.2

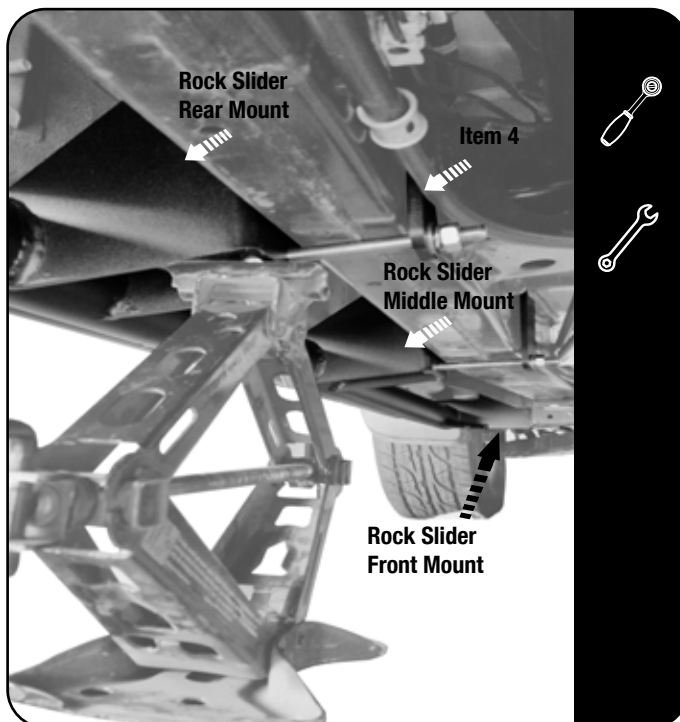

 For the Rear mounting Slide item 4 between the brake lines and chassis. Loosely fit items 3, 5, 6 & 7.

 Before fully securing the Rock Sliders, make sure that no parts are interfering with the brake lines.

3

COMPLETION

3.1



Congratulations. You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.