



FRONT RUNNER


**TOYOTA FORTUNER
ROCK SLIDERS**

ENG

BPTF001



INSTALL TIME: 45 mins

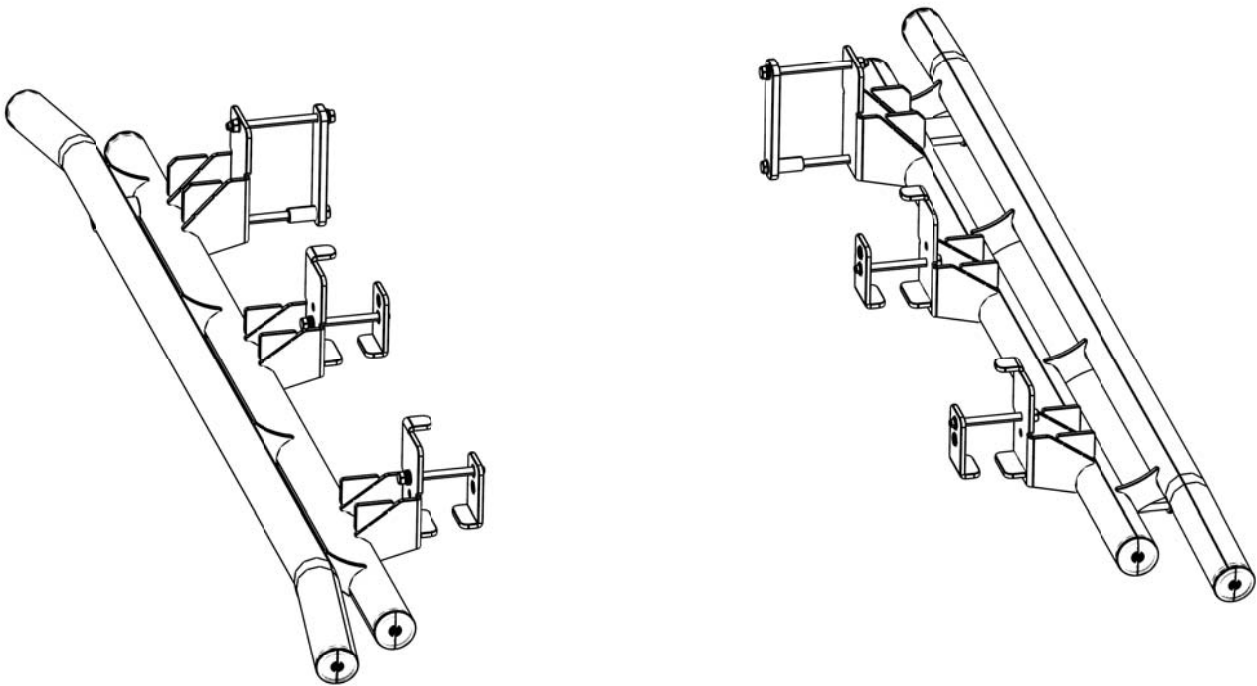

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.


1 GET ORGANIZED...

Here is what you are looking at:

Item #	Quantity	Description
1	4	M10 x 150mm HEX BOLT
2	24	M10 FLAT WASHER (8 not pictured - Refer to Step 2C)
3	2	ROCK SLIDER - 1 LEFT, 1 RIGHT
4	4	M10 NYLOC NUT
5	2	FRONT MOUNTING PLATE
6	2	ALUMINIUM SPACER
7	4	MIDDLE / REAR MOUNTING BRACKET
8	4	M10 SPRING WASHER
9	4	M10 x 120mm HEX BOLT

you will need:

- ☐ 17 mm Flat & Socket Wrench
- ☐ 12 mm Flat or Socket Wrench

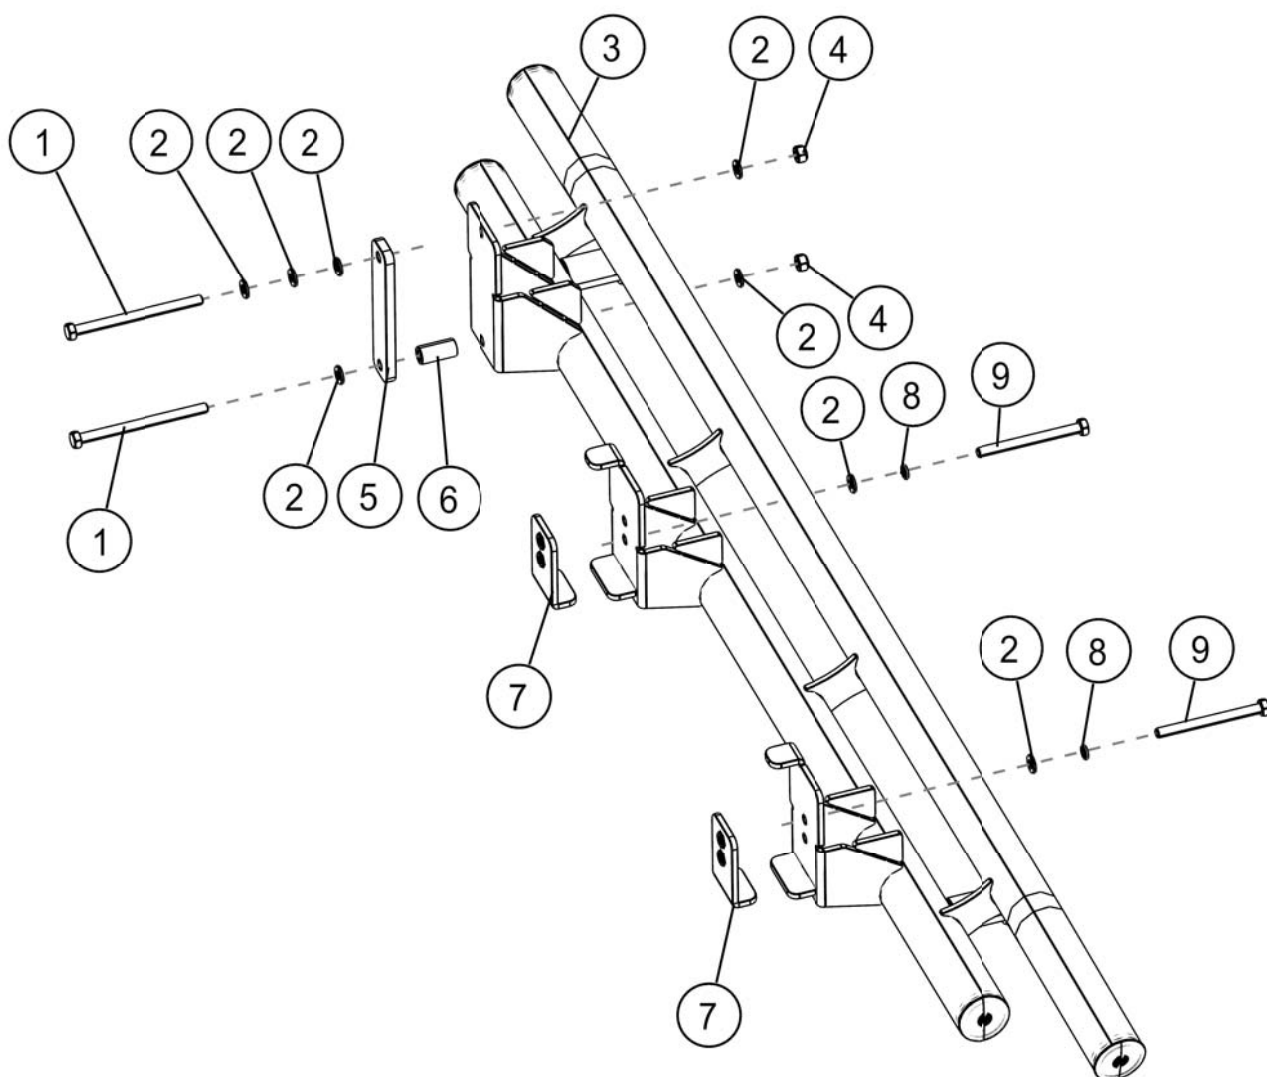

- (A) Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Take a moment as little prep now may save you a lot of time later.

2 INSTALL THE ROCK SLIDERS

- (A) Looking underneath your vehicle, loosen and remove the original running boards from the side of the vehicle.

- (B) Working underneath the vehicle, place the Rock Sliders (Item 3) up against the outside of the vehicles chassis rail, resting the two lips as indicated on Page 2 on top of the chassis rail.

Position the Rock Sliders front to back, lining up the two rear mounting points with the through holes in the vehicle's chassis rail.





- (C) Starting with the middle and rear mounting points, loosely secure the Rock Sliders to the vehicle, using one M10 x 120 Hex Bolt, one M10 Spring Washer, one M10 Flat Washer and one Mounting Plate (Items 2, 7, 8, 9) per mounting. The Mounting Plate goes on the inside of the chassis rail, with the lip going underneath, up against the chassis rail as shown. In some cases the M10 x 120 Hex Bolt may be too long and will require spacing using one or two of the additional M10 Flat Washers supplied per bolt to avoid the bolt making contact with the fuel tank.



2 INSTALL THE ROCK SLIDERS CONT...

- (E) Referring to the Exploded View on Page 2, Loosely secure the front of the Rock slider to the vehicle using two M10 x 150 Hex Bolts, six M10 Flat Washers, two M10 Nyloc Nuts, one Front Mounting Plate and one Aluminium Spacer (Items 1, 2, 4, 6). The Spacer goes on the **BOTTOM** Hex Bolt against the Rock Slider as shown.

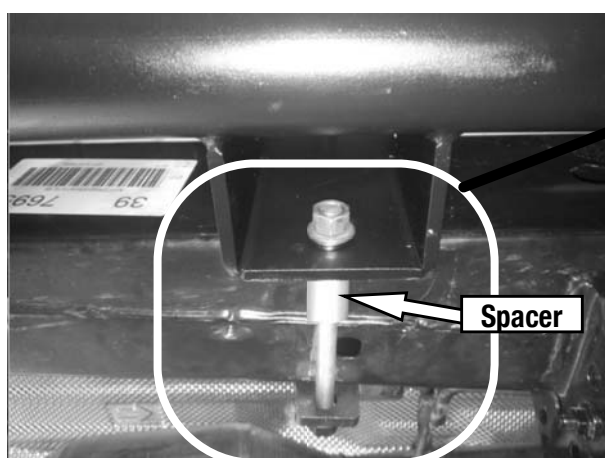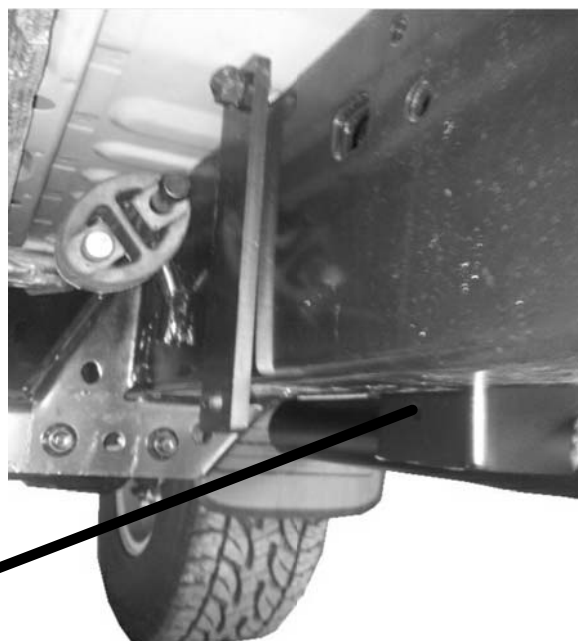

- (F) Center the the Rock Sliders front to back and tighten all fasteners.



Congratulations, you have completed your installation. Take a step back and admire your work. Good Job!