




FRONT RUNNER
VEHICLE OUTFITTERS

ROCK SLIDERS

TOYOTA FORTUNER (2016-CURRENT)

ENG

BPTF002

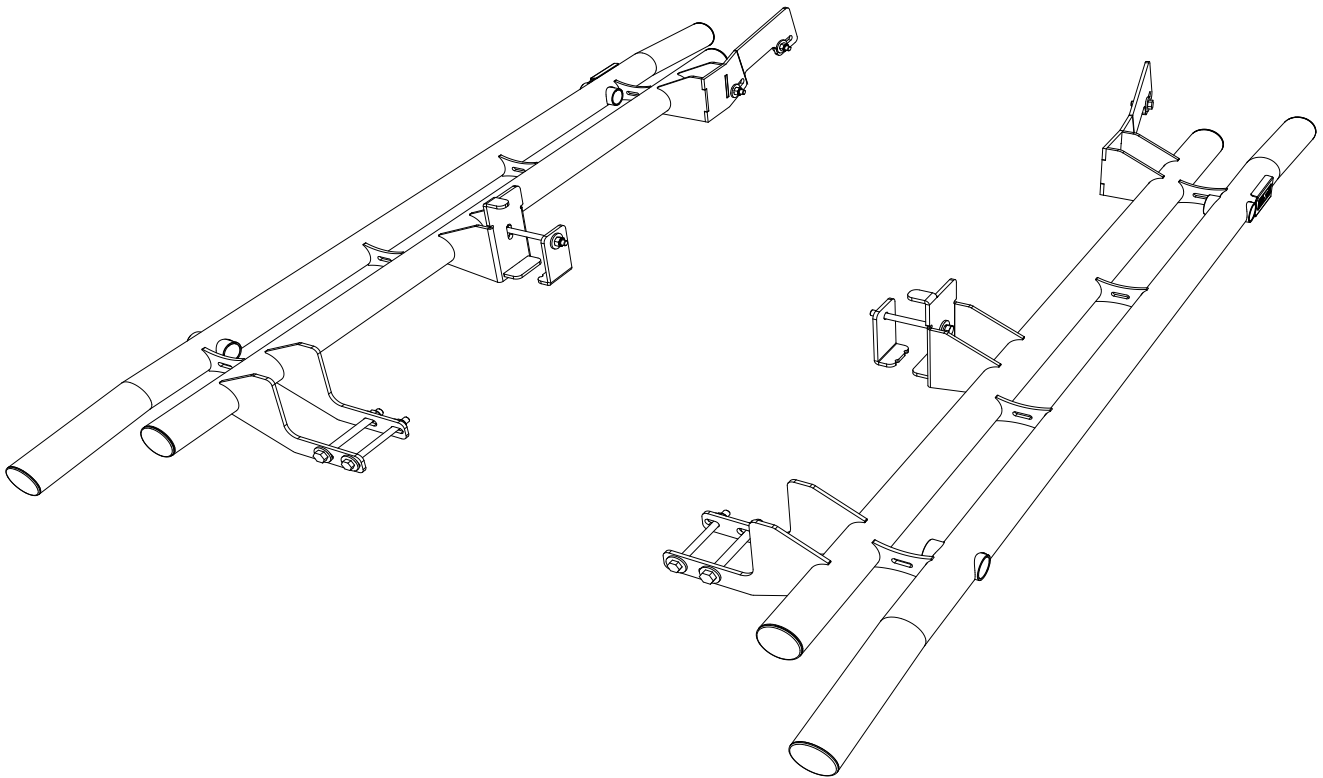

READ ME !

Thank you for purchasing Front Runner Rock Sliders.

Before you start, take a moment to familiarize yourself with this Fitting Instruction and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE.

IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH.

YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE.

THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE.

IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES,

YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED

Here is what you are looking at for BPTF002


IN THE BOX

1	1 X	Rock Sliders (1LH & 1RH)
2	4 X	M10 x 30 Hex Bolt
3	15 X	M10 x 30 x 2 Flat Washer
4	4 X	M10 Nyloc Nut
5	2 X	M10 x120 Hex Bolt
6	1 X	M10 Spring Washer
7	1 X	L Bracket With Welded Nut
8	1 X	L Bracket
9	2 X	M10 x 130 Hex Bolt
10	2 X	M12 x 130 Hex Bolt
11	4 X	M12 x 30 x 2 Flat Washer
12	2 X	M12 Nyloc Nut


TOOLS NEEDED



FIGURE 1.1

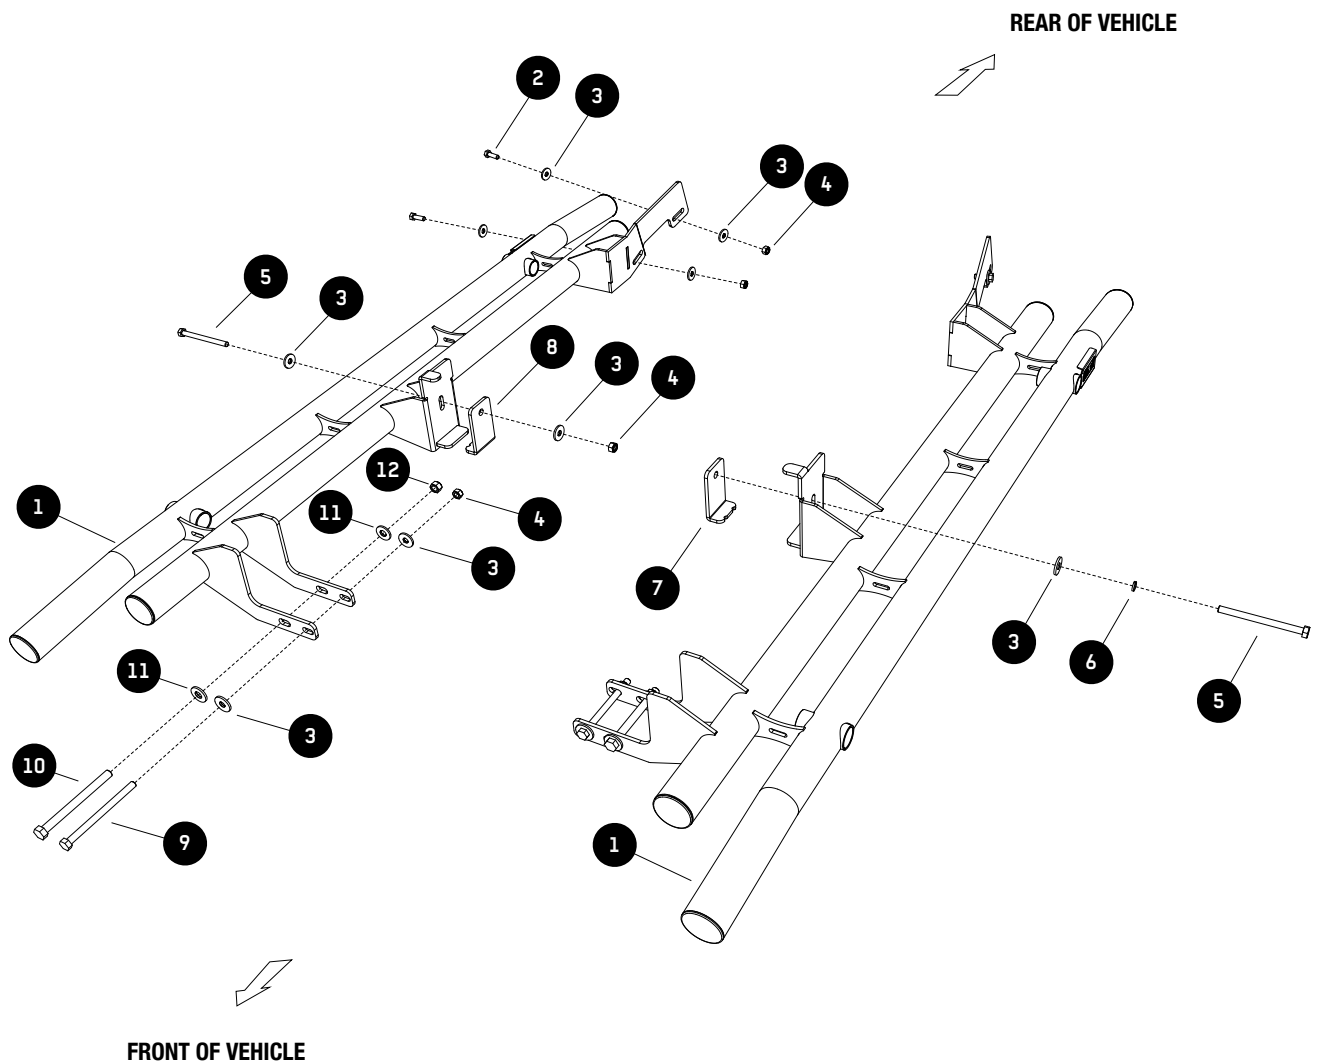


2.1

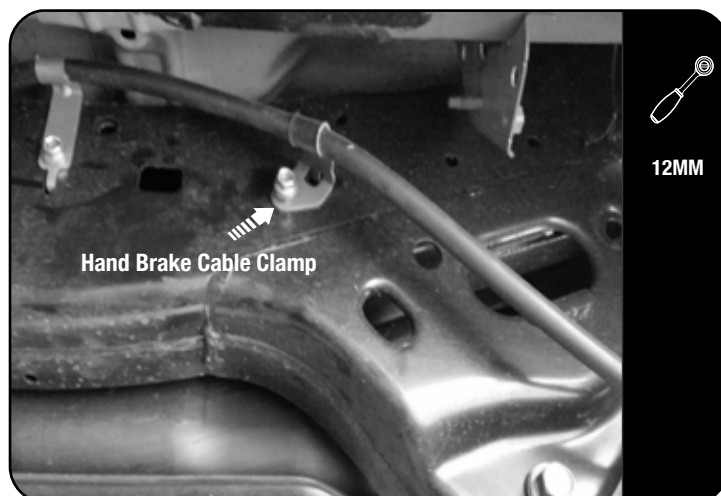

Looking at the left back of the vehicle, loosen the hand brake cable clamp shown and slide it out of the way.

2.2

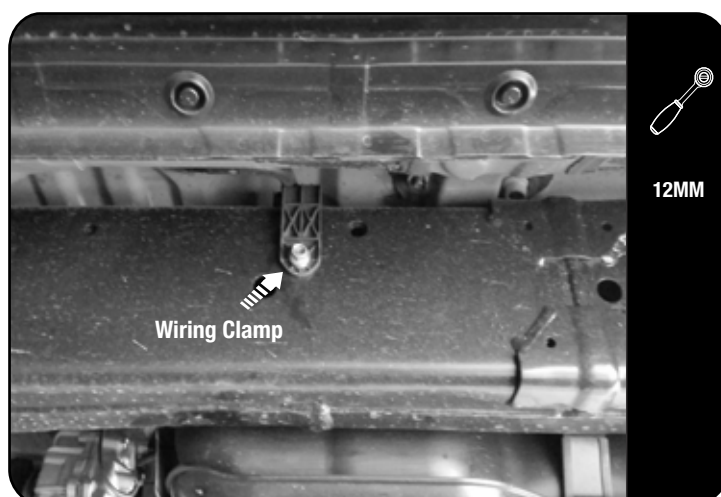

Also on the left in the middle of the vehicle, loosen the wiring clamp shown.

2.3



Before fitting the rock sliders, remove the existing M12 bolt on the front cross member as shown in Figure 2.3.

Place the rock sliders onto the chassis, using the front cross member as a guide. Use the car jack to lift the Rock slider into place.


Loosely fit items 10, 11 & 12 in the hole closest to you and items 3, 4 & 9 in the next hole as shown in Figure 1.1.

2.4



Moving to the rear of the vehicle, loosely fit items 2, 3 & 4 as shown in Figure 1.1.

2.5

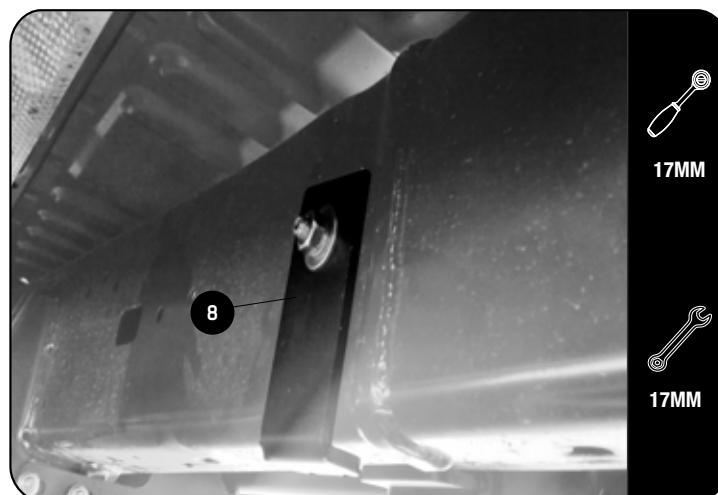

On the right hand side of the vehicle, secure the L bracket (Item 8) with the fasteners shown in Figure 1.1.

On the left hand side secure the L bracket with welded nut (Item 7) and the fasteners shown in Figure 1.1.

Fully tighten all fasteners used.

Secure hand brake cable clamp and wiring clamp removed in step 2.1 & 2.2 with cable ties.

3

COMPLETION

3.1

Congratulations. You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.