


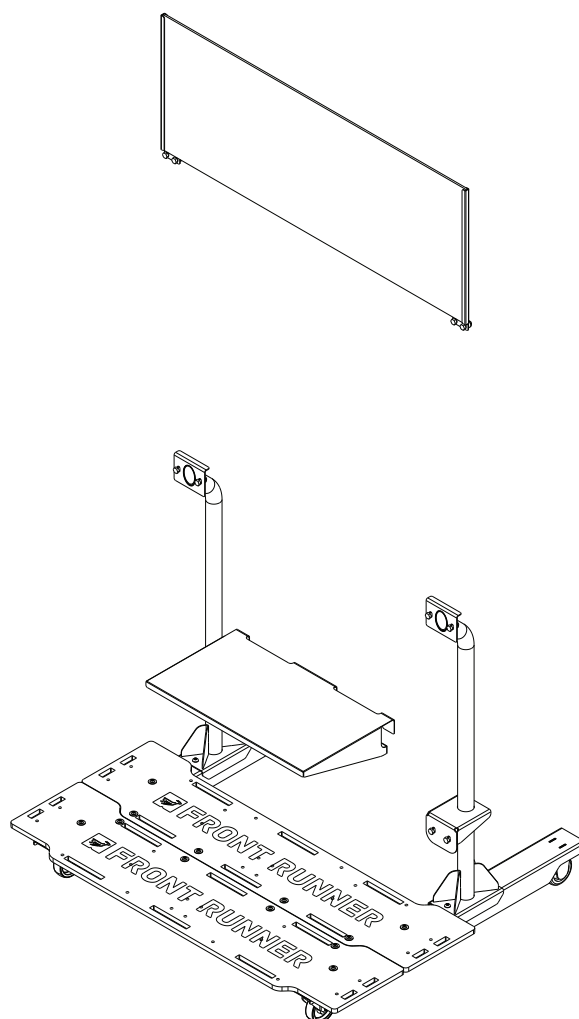

READ ME !

Thank you for purchasing a Front Runner Display Stand.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	1 X	Banner
2	12 X	M8 Nut Cap
3	12 X	M8 Nyloc Nut
4	12 X	M8 Flat Washer
5	2 X	Display Post
6	2 X	Display Base
7	4 X	M6 Nyloc Nut
8	4 X	M6 Flat Washer
9	4 X	M6 x 16 Hex Head Bolt
10	2 X	Display Box Side Wall (Part of the wooden packaging)
11	12 X	M6 Large Flat Washer
12	12 X	M6 x 25 Button Head Screw
13	1 X	Display Shelf
14	1 X	Banner Channel LH
15	1 X	Banner Channel RH
16	12 X	M8 x 16 Hex Head Bolt
17	4 X	M8 x 16 Button Head Screw
18	1 X	Support


TOOLS NEEDED



FIGURE 1.1

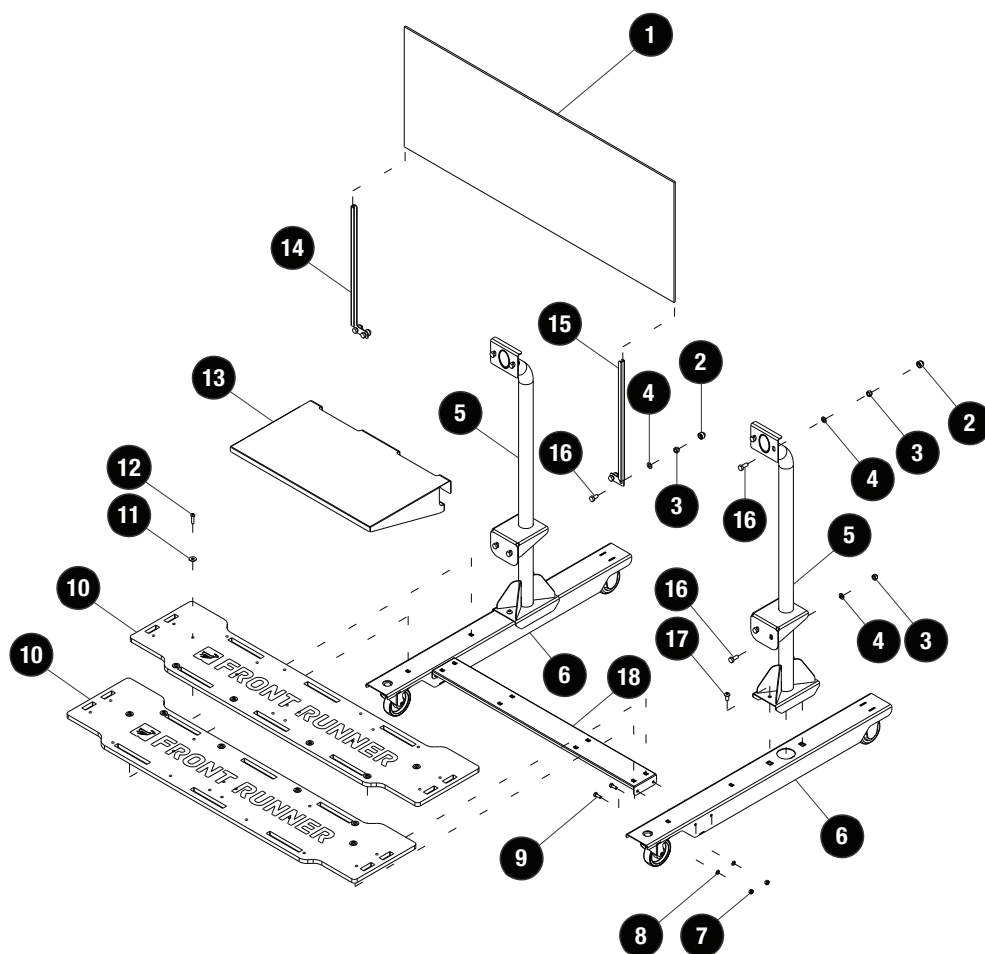

2.1

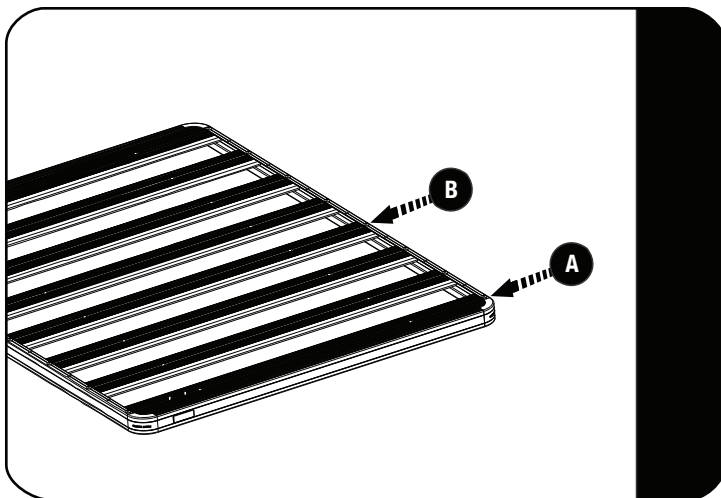


NOTE: Display Stand Rack to be used RRSTA08 (not included)

A Slide four M8x16 Hex Head Bolts (Item 16) into the machined slots. Move two bolts to the left hand side and two bolts to the right hand side of the rack.

B Slide four M8x16 Hex Head Bolts (Item 16) into the machined slots. Move two bolts to the left hand side and two bolts to the right hand side of the rack.

2.2

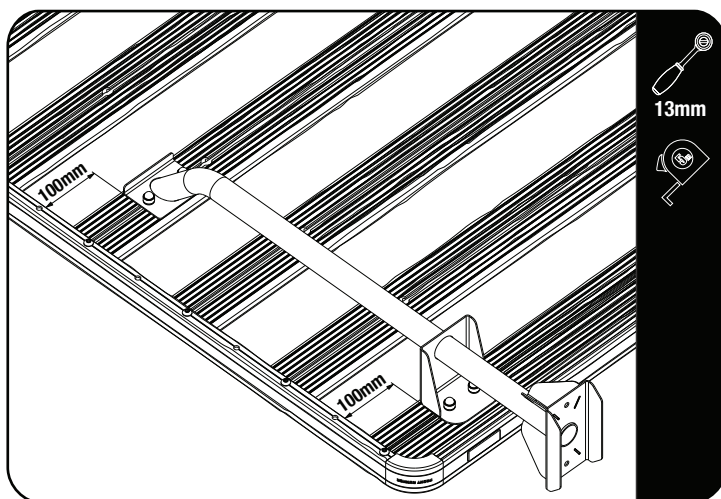


Loosely fit the two Display Posts (Item 5) to the rack using eight M8 Flat Washers and eight M8 Nyloc Nuts (Items 4 & 3) to the M8x16 Hex Head Bolts inserted in 2.1.

Position the Display Posts (Item 5) 100mm from the inside edge of the side profile to the outside face of the post bracket, top and bottom.


Fully tighten the Display Posts. Finish off by placing eight M8 Nut Caps (Item 2) on the M8 Nyloc Nuts (Item 3).

2.3

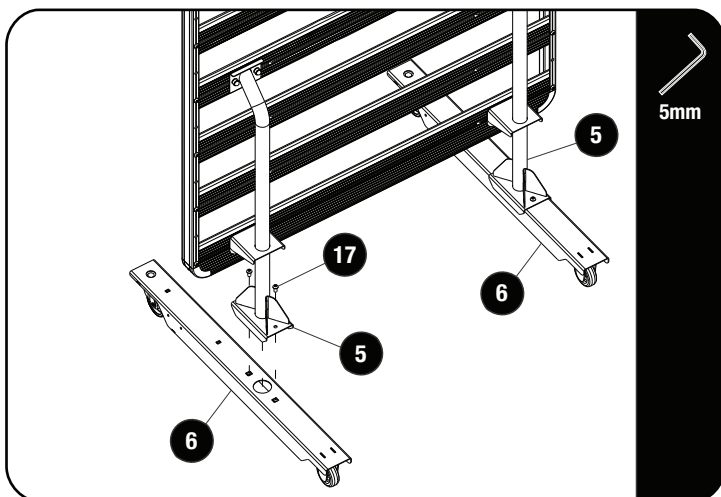


Secure the two Display Bases (Item 6) to bottom of the two Display Posts (Item 5) using four M8x16 Button Head Screws (Item 17).

2.4

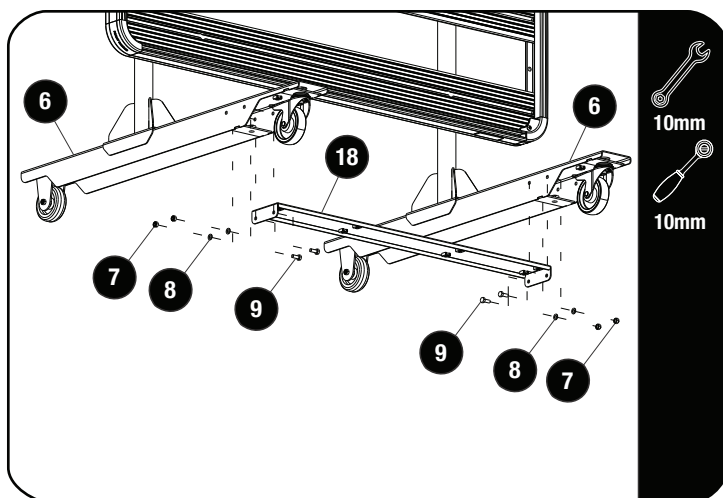


Secure the Support (Item 18) between the two Display Bases (Item 6) using four M6x16 Hex Head Bolts, four M6 Flat Washers and four M6 Nyloc Nuts (Item 9, 8 & 7).

2.5

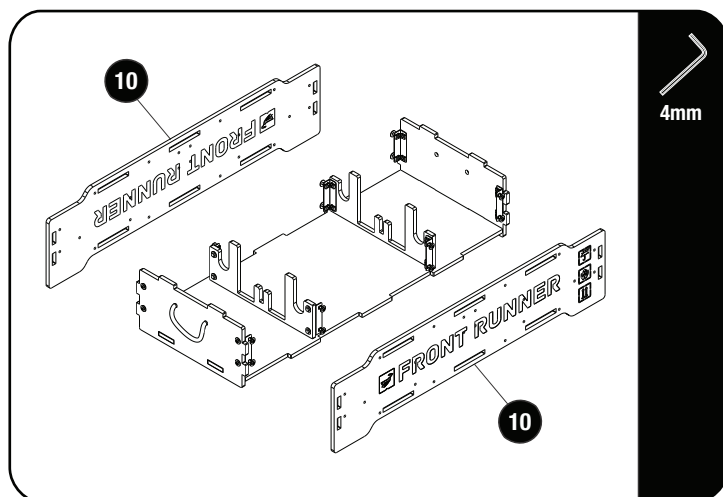


Disassemble the Display Box two Side Walls (Item 10).

2.6

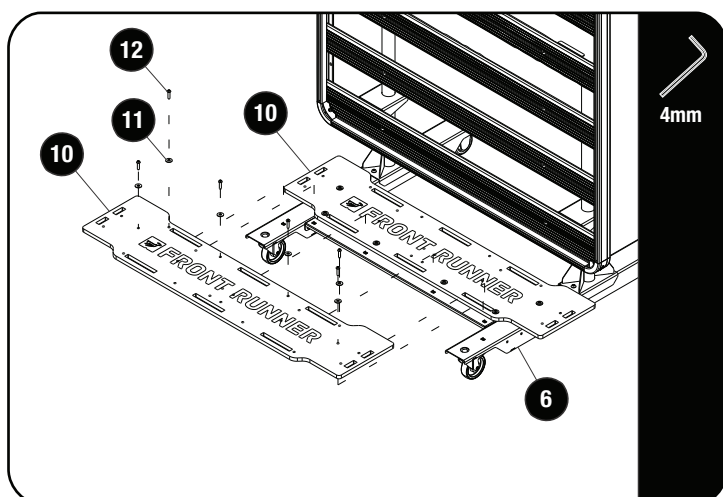


Secure the two Display Box Walls (Item 10) removed with the laser engraved logo facing upward, using twelve M6 Large Flat Washers and twelve M6x25 Button Head Screws (Item 11 & 12).

2.7

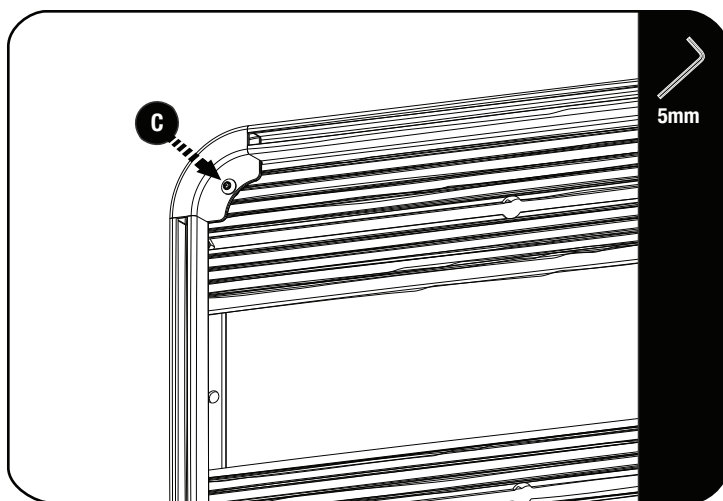


C Loosen and remove the button head screw and remove the rack corner.

2.8

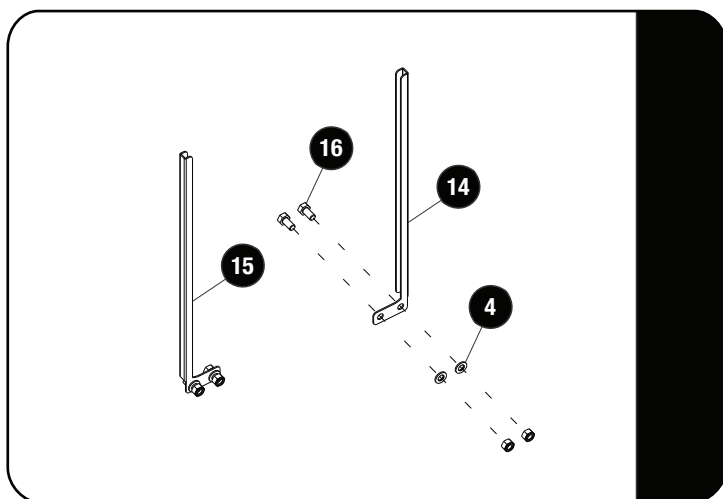

C Loosley assemble four M8x16 Hex Head Bolts, four M8 Flat Washers and four M8 Nyloc Nuts (Item 16, 4 & 2) to the Banner Channel LH (Item 14) and the Banner Channel RH (Item 15).

2.9

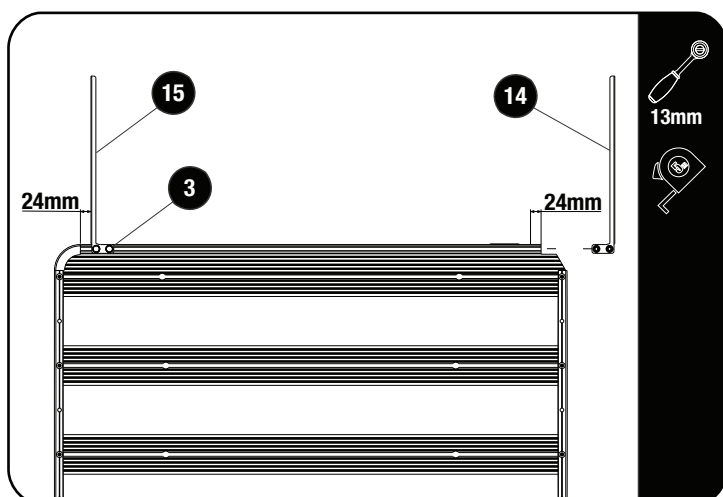

C Slide the two M8x16 Hex Head Bolt heads on the Banner Channel RH and then the two M8x16 Hex Head Bolt heads on the Banner Channel LH into the rack side profile with the open channels facing towards each other on the back of the rack.


Position the Channels 24mm from the side profile edges as shown.

Fully tighten after the Banner Channels have been positioned. Finish off by placing four M8 Nut Caps (Item 2) on the M8 Nyloc Nuts (Item 3).

Refit corner removed earlier.

2

FIT AND SECURE

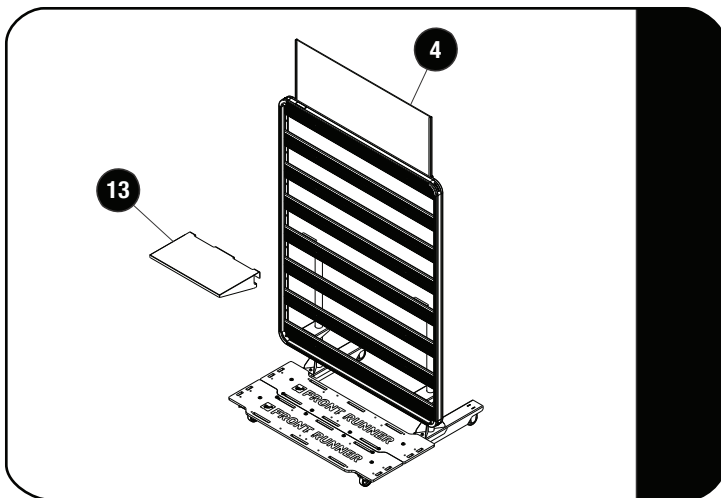2.10

Slide the Banner (Item 1) into the banner channels.

Determine the position of the Display Shelf (Item 13) and hook the shelf in position on the slat.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

