


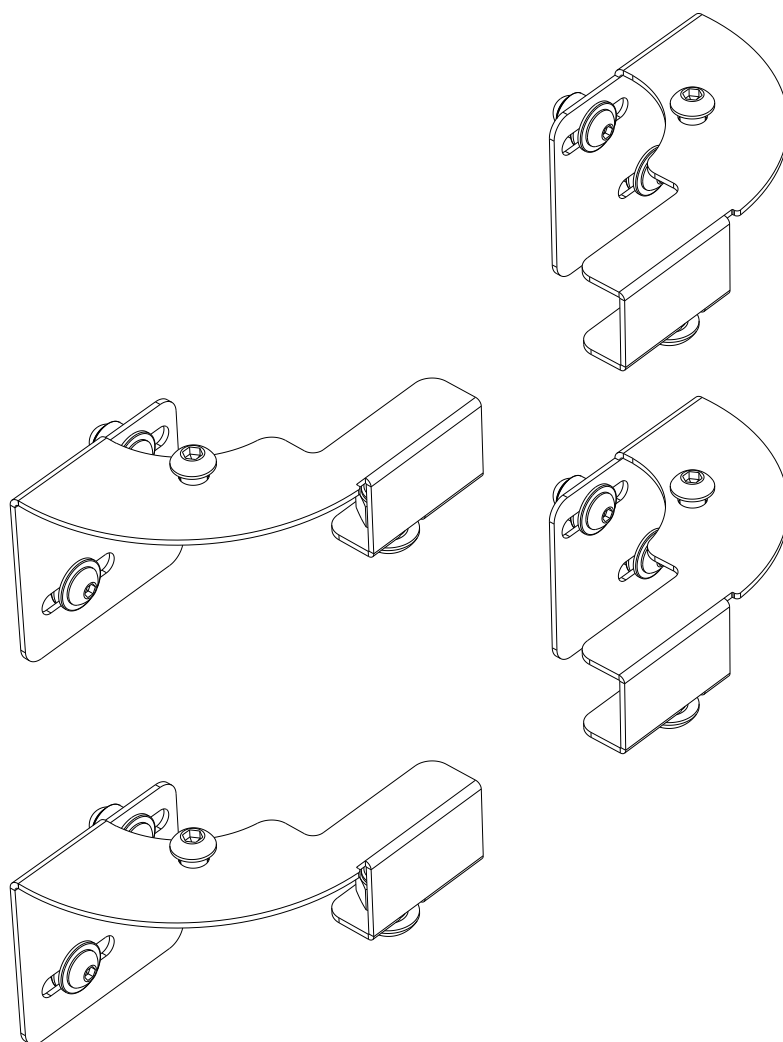

READ ME !

Thank you for purchasing a set Front Runner Side Profile Brackets for TEGO Display Stand.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	4 X	Mounting Bracket - 1LH + 1RH
2	8 X	M5 Nut Cap
3	8 X	M5 Nyloc Nut
4	16 X	M5 x 13 x 1SS Flat Washer
5	8 X	M5 x 12 Button Head Bolt
6	4 X	M6 x 12 Button Head Bolt
7	4 X	M6 x 12 x 1SS Flat Washer
8	4 X	M6 Nyloc Nut
9	4 X	M6 Nut Cap
10	4 X	M8 Nyloc Nut
11	4 X	M8 x 12 Button Head Bolt


TOOLS NEEDED



FIGURE 1.1

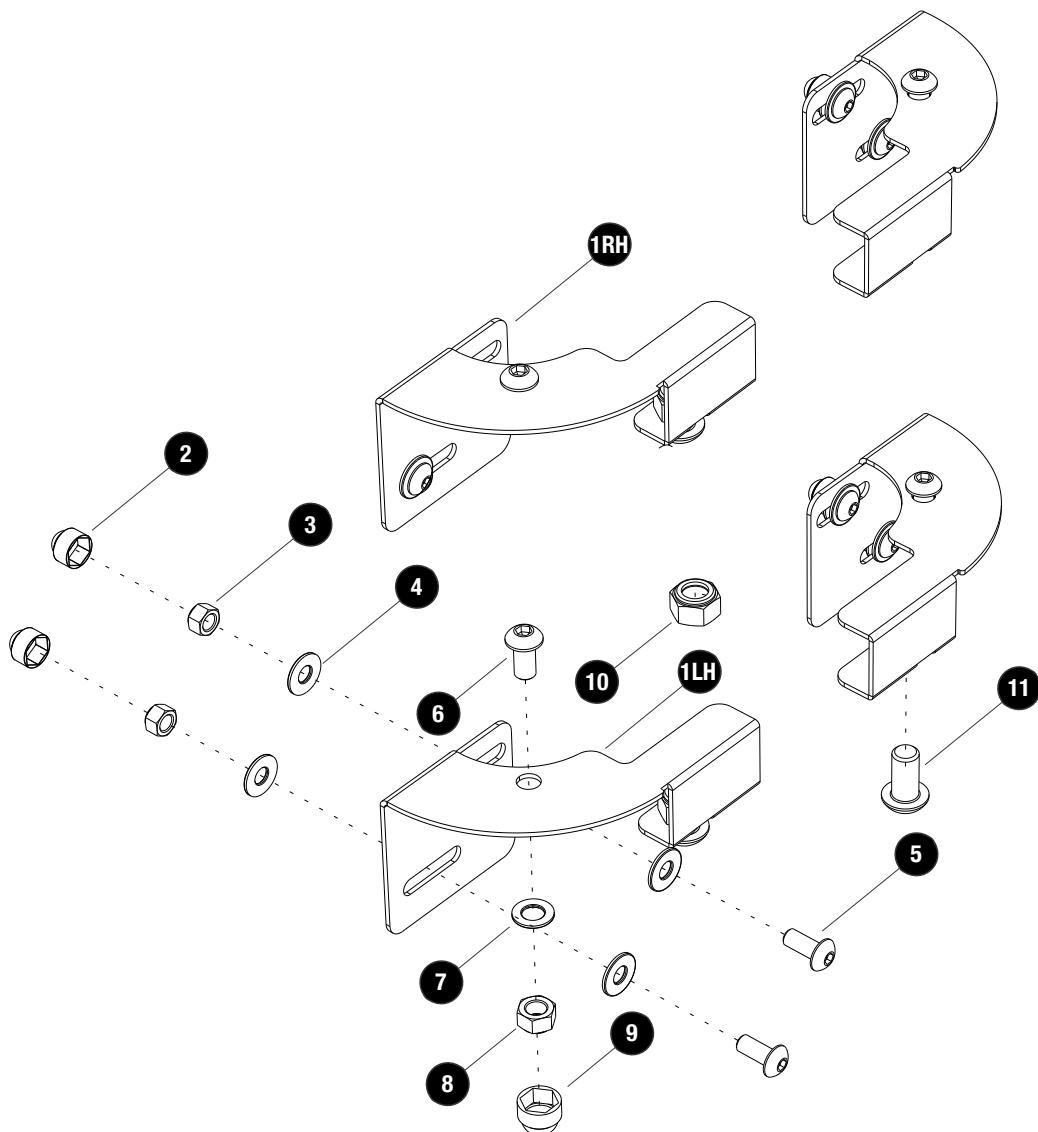


2.1

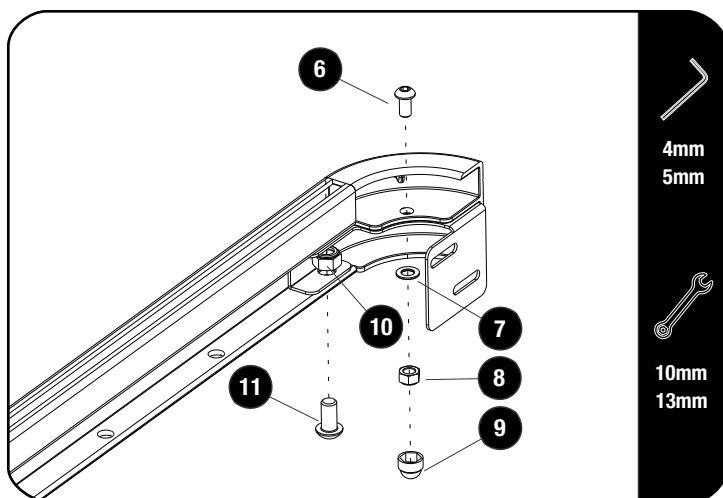

Assemble the side profile and corner to the Mounting Brackets (Item 1LH & 1 RH) using M6 x 12 Button Head Bolts, M6 x 12 x 1SS Flat Washers, M6 Nyloc Nuts, M8 x 12 Button Head Bolts and M8 Nyloc Nuts (Items 6, 7, 8, 10 & 11) as shown.

Finish off by placing M6 Nuts Caps (Item 9) on the M6 Nyloc Nuts.


2.2

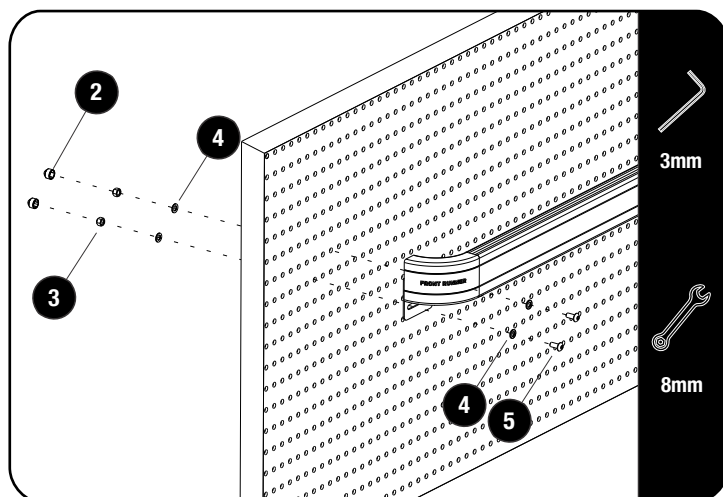

Secure the assembly from 2.1 to the Tego display stand using M5 x 12 Button Head Bolts, M5 x 13 x 1SS Flat Washers and M5 Nyloc Nuts (Items (3, 4 & 5) as shown.

Finish off by placing M5 Nut Caps (Item 2) on the Nyloc Nuts.

2.3

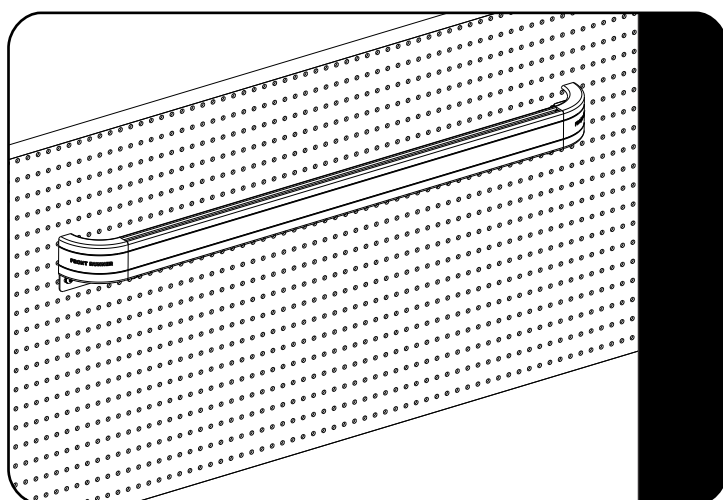

Mount your Front Runner product to the side profile.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    