
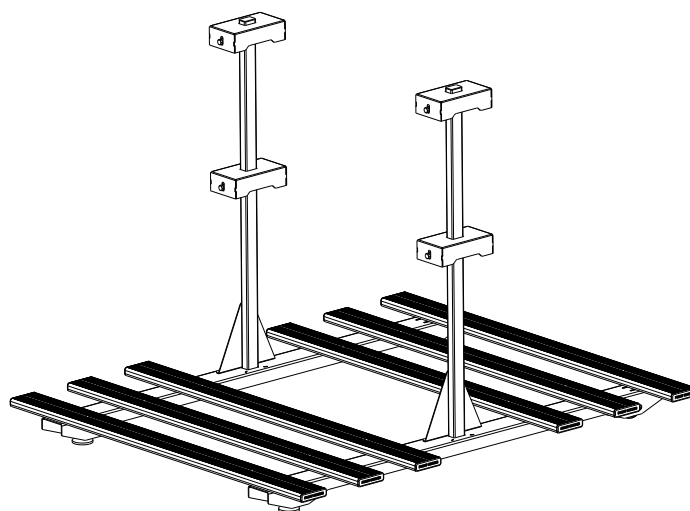


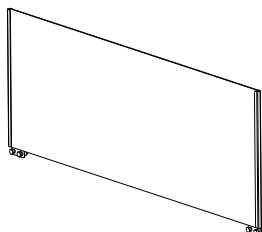

READ ME !

Thank you for purchasing a Front Runner Slimline II & Slimsport Roof Rack Display.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX


1	2 X	Display Post Assembly
2	2 X	Base Assembly
3	12 X	M8 Flat Washer
4	24 X	M8 Nyloc Nut
5	20 X	M8x20 Hex Bolt
6	12 X	M8 Plastic Nut Cap
7	6 X	Slat
8	12 X	Slat End Cap
9	8 X	M6X16 Button Head Bolt
10	8 X	M6 Nyloc Nut
11	1 X	Banner Channel LHS
12	1 X	Banner Channel RHS
13	1 X	Display Banner
14	4 X	M8x16 Hex Bolt
15	8 X	M6 Flat Washer

TOOLS NEEDED




NOTE: The Slimline II and Slimsport Racks needed for this display are supplied separately.

FIGURE 1.1

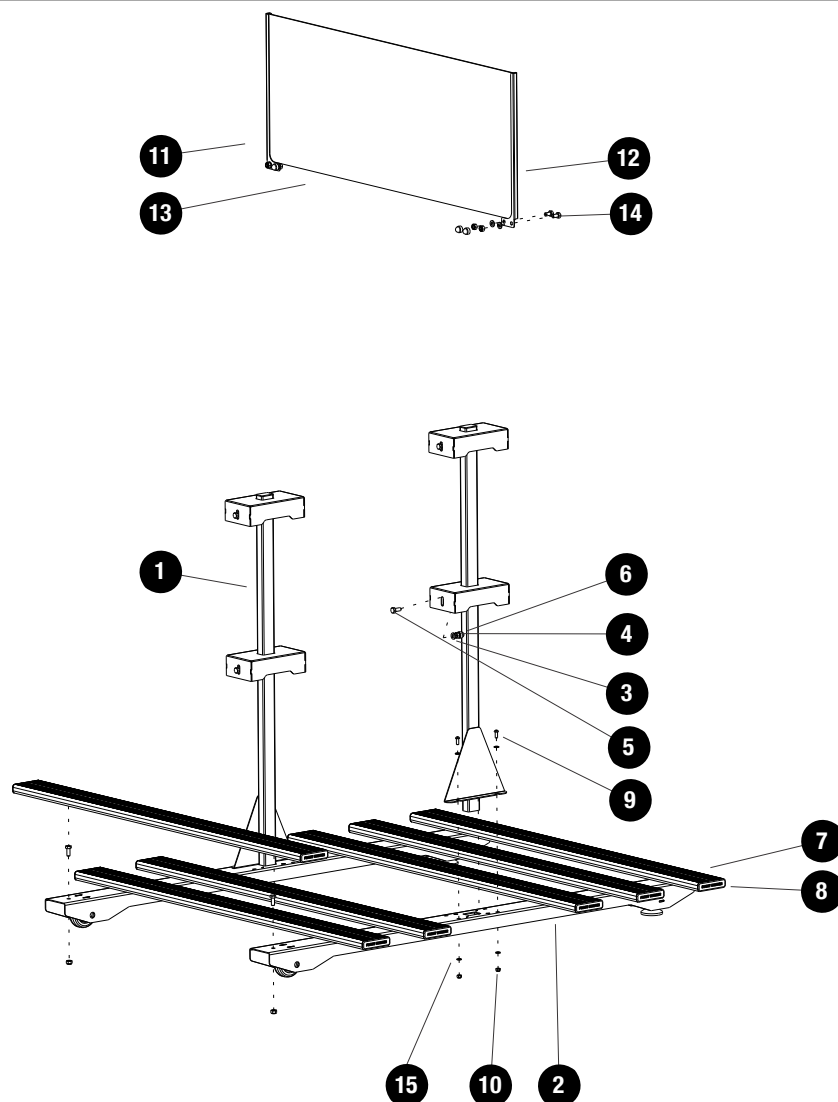


2.1

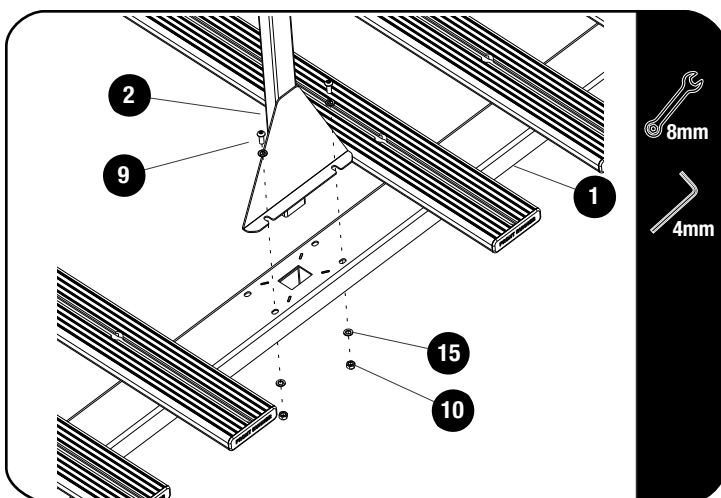

Slide the Display Post Assembly (Item 1) into the cutout in the Base Assembly (Item 2) and fasten using the M6 x 16mm Button Head Bolts (Item 9), M6 Flat Washers (Item 15) and M6 Nyloc Nuts (Item 10) as shown in Fig 2.1.


2.2

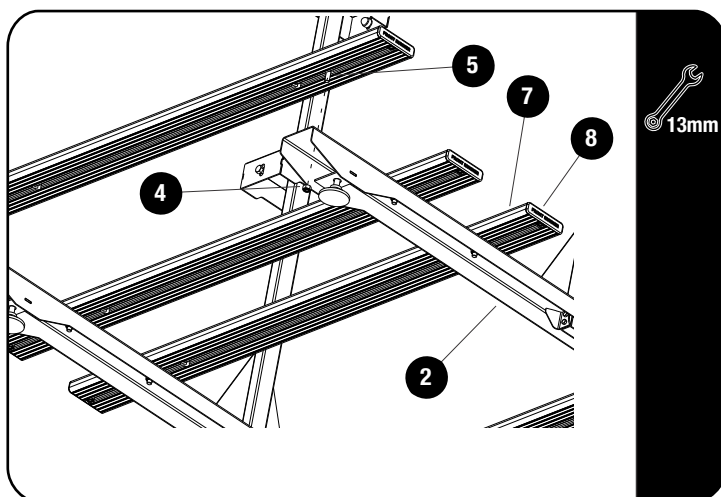

Press the Slat End Caps (Item 8) into the Slat (Item 7). Ensure the logo on the end caps are both facing the same way.

Slide two M8x20 Hex Bolts (Item 5) into each Slat. Align the M8x20 Hex Bolts (Item 5) with the holes seen on the Base Assembly (Item 2) and loosely fasten using the M8 Nylock Nuts (Item 4).

2.3

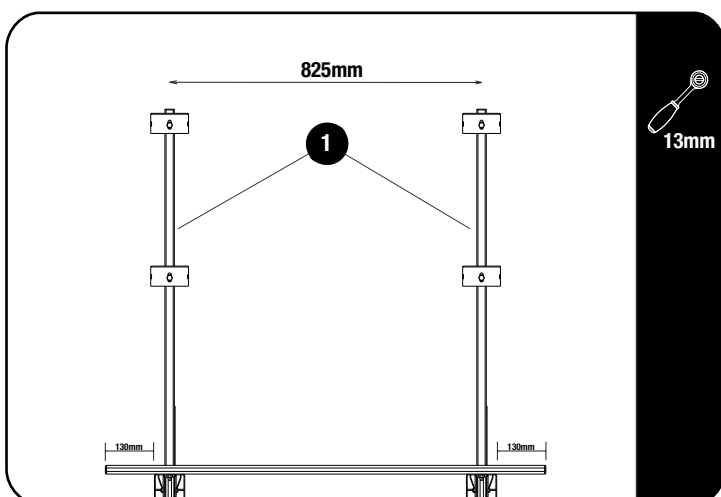


Space the Upright Assemblies (Item 1) 825mm apart (centre to centre). Align the Slat so that the edge of the Slat is 130mm away from the edge of the Base Assembly as seen in Fig 2.3. Tighten the M8 Nylock Nuts (Item 4).



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.4

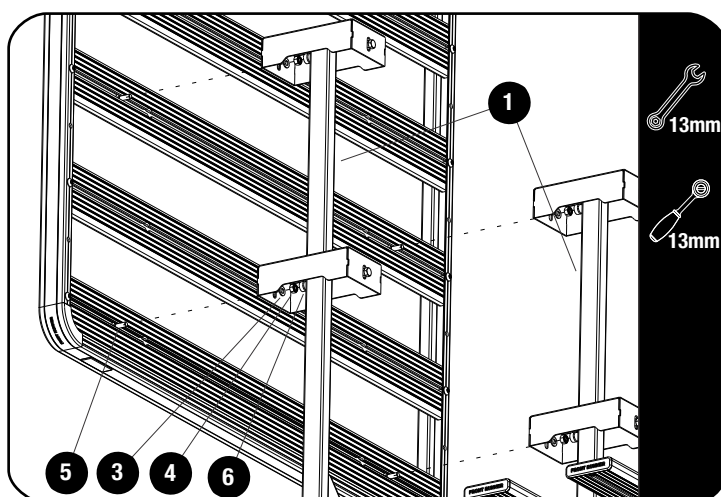


Slide two M8x20 Hex Bolts (Item 5) into the bottom slat and two into the third slat from the bottom on the Slimline II or Slimsport rack. For the Slimsport rack, the bolts holding the slat to the foot rail will need to be removed in order to slide the M8x20 Hex Bolts (Item 5) into the underside of the slats.

Align the M8x20 Hex Bolts with the mounting holes in the Upright Assemblies (Item 1) and loosely fasten the rack using M8 Flat washers (Item 3) and M8 Nyloc Nuts (Item 4) as seen in Fig 2.4. Centre the rack between the Uprights and tighten the M8 Nyloc Nuts (Item 4). Place the M8 Plastic Nut caps (Item 6) on the M8 Nyloc Nuts (Item 4).


Place a Slimline II rack onto the one side and a Slimsport rack onto the other side of the stand.

2.5

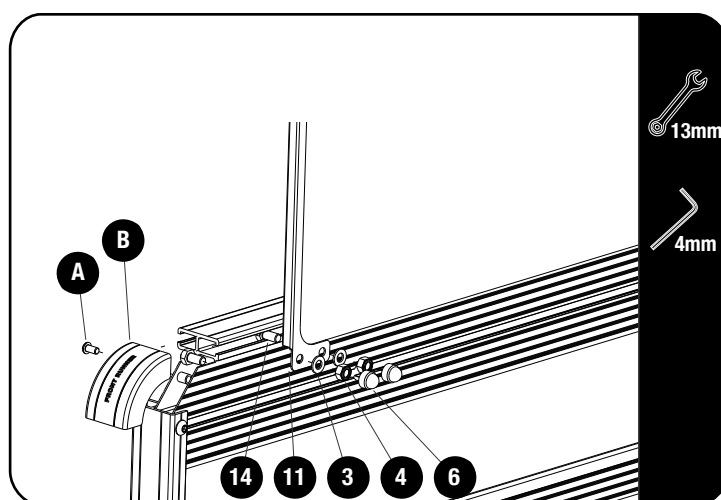

Loosen the M6x12mm Button Head Bolt (Item A) and remove the top Corner (Item B) of the Slimline II rack. Slide four M8x16mm Hex Bolts (Item 14) into the Combine Slat Slot and loosely fasten the Left Hand Banner Channel (Item 13) and Right Hand Banner Channel (Item 11) using M8 Flat Washers (Item 3) and M8 Nyloc Nuts (Item 4) as seen in Fig 2.5. Refit the Corner (Item B) and the M6x12mm Button Head Bolt (Item A).

2.6

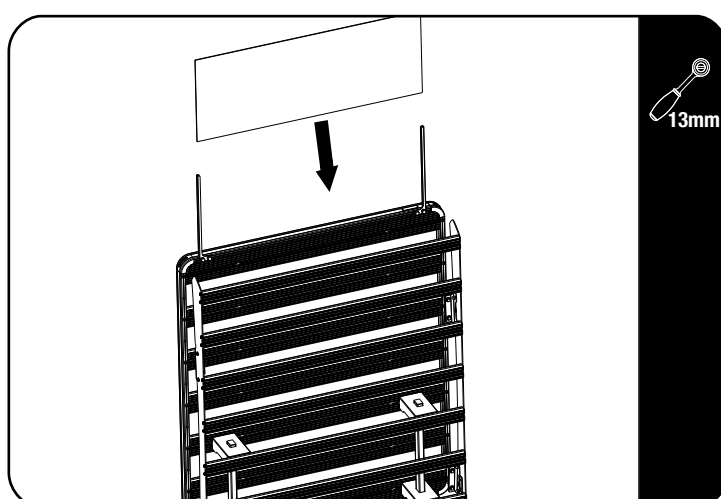

Slide the Banner (Item 12) between the two Banner Channels (Item 11 & 13) and centre the Banner (Item 12) on the rack. Tighten the M8 Nyloc Nuts (Item 4) and insert the Plastic M8 Nut Caps (Item 6) as seen in Fig 2.6.

You can now fit Front Runner Accessories to the two Racks and bottom slats.

Note: Make sure to load the two racks evenly.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

