


Slimline 3 Slat Wall Display

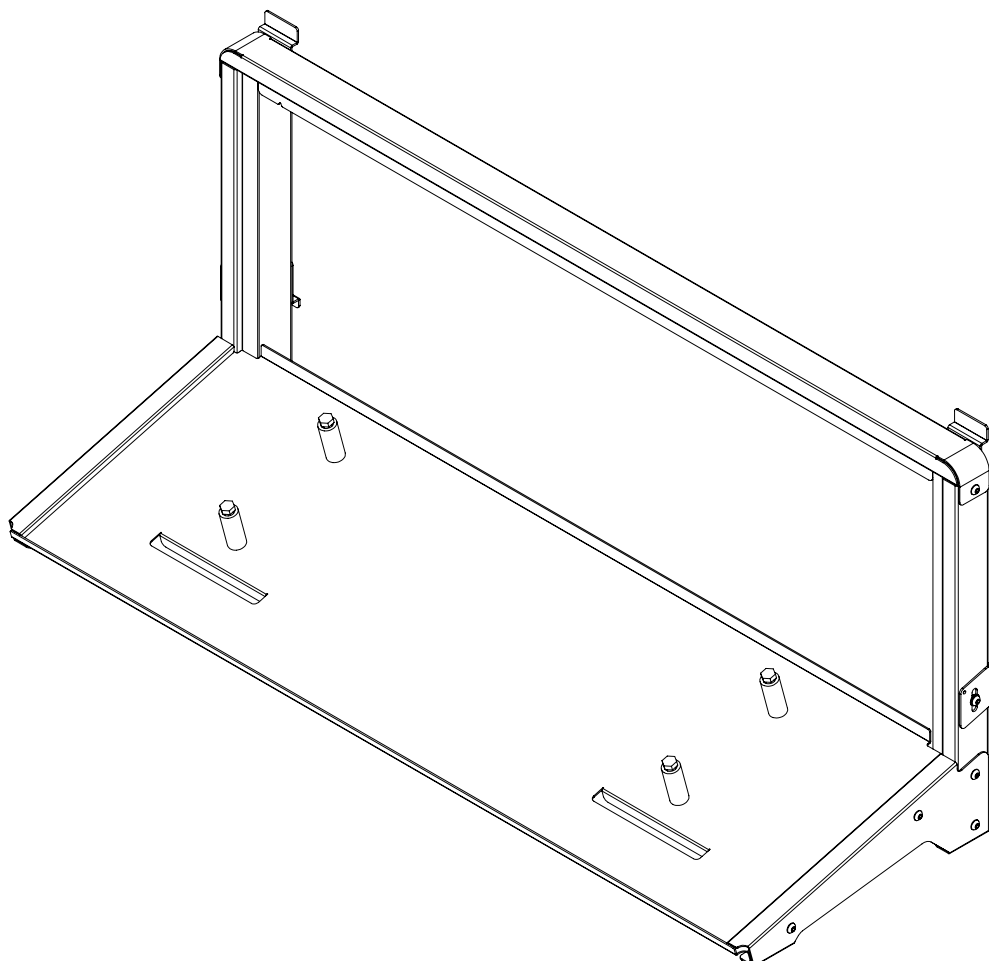

READ ME!

Thank you for purchasing a Slimline 3 Slat Wall Display.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	1 X	Vertical Strut RH
2	1 X	Vertical Strut LH
3	1 X	Base Plate
4	1 X	Slat Wall Lock Bracket RH
5	1 X	Slat Wall Lock Bracket LH
6	1 X	Side Bezel RH
7	1 X	Side Bezel LH
8	1 X	Top Cap
9	4 X	M8 Nyloc Nut
10	4 X	19x12.58x45 Tube Spacer
11	4 X	M8x60 Hex Bolt
12	10 X	M6x12 Button Head Bolt
13	2 X	M6x12x1 Flat Washer
14	2 X	M6x16 Button Head Bolt
15	2 X	M6 Nyloc Nut

TOOLS NEEDED




FIGURE 1.1

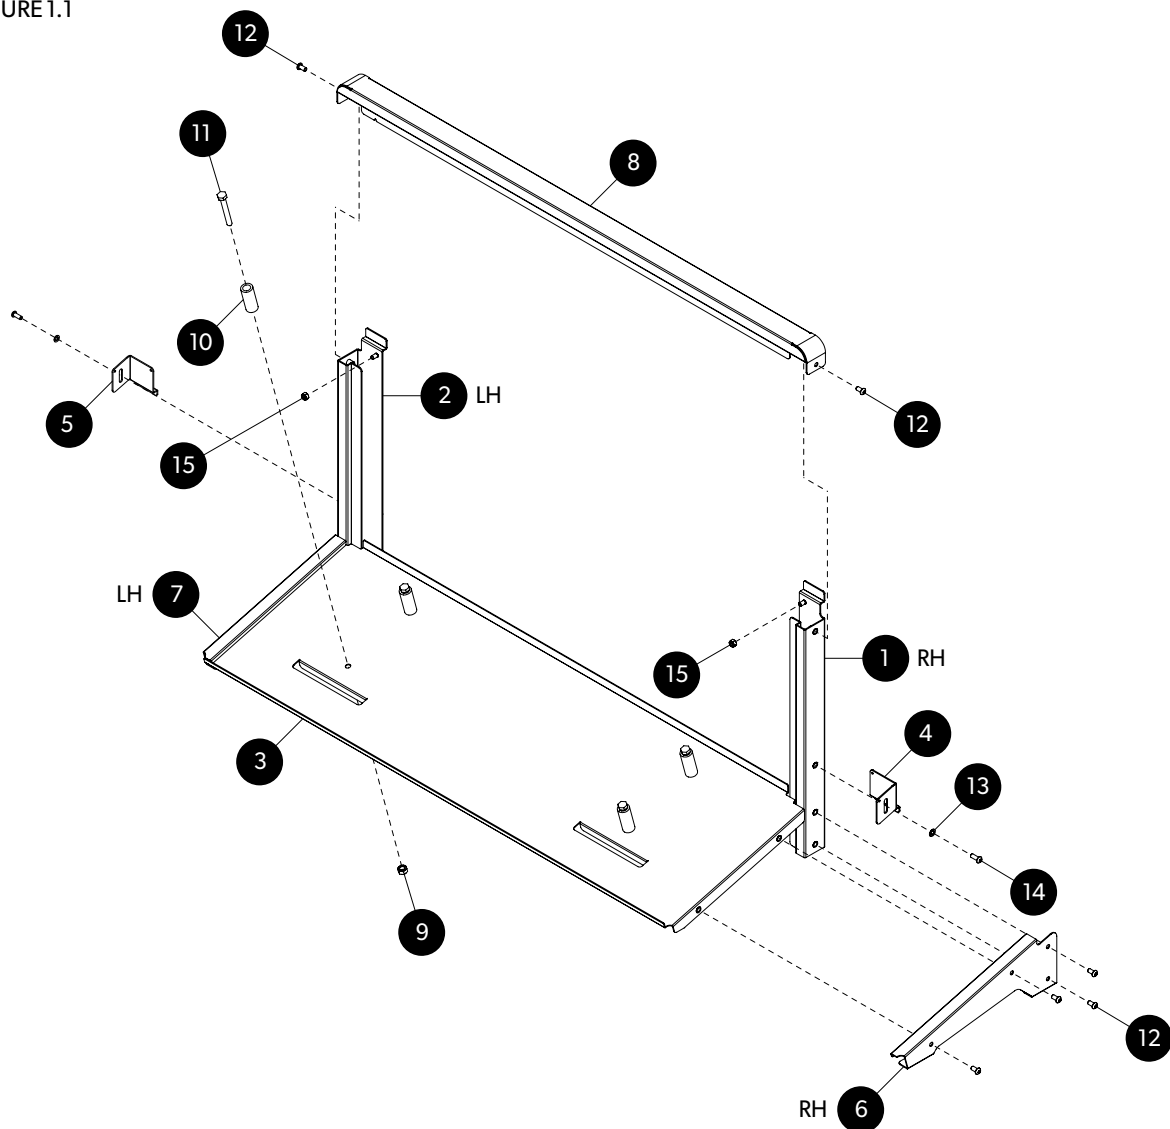

2

FIT AND SECURE

2.1

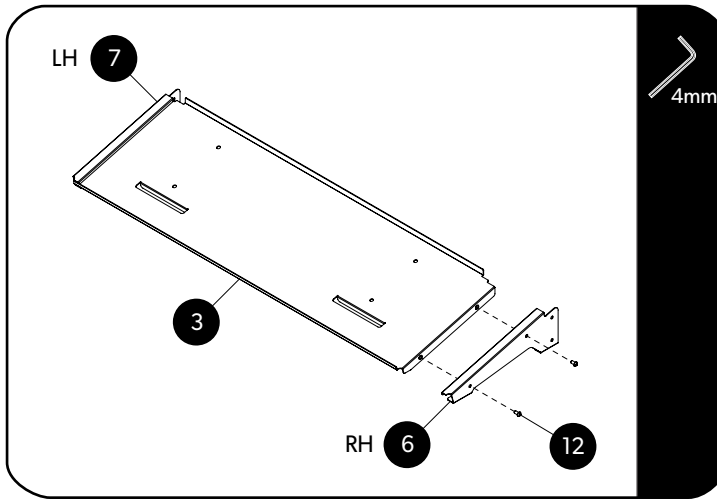


Assemble the two Side Bezels LH & RH (Items 7LH & 6RH) to the Base Plate (Item 3) by using two M6x12 Button Head Bolts per side as shown.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.2

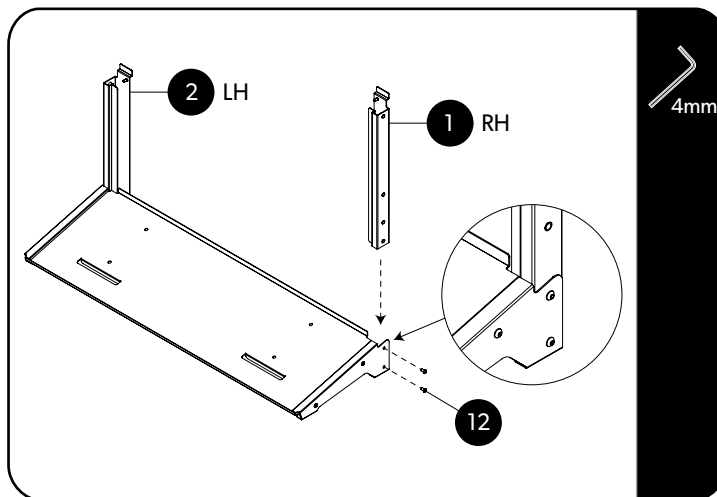


Assemble the two Vertical Struts LH & RH (Items 2LH & 1RH) to the Side Bezels (Item 7LH & 6RH) by using two M6x12 Button Head Bolts per side as shown.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.3

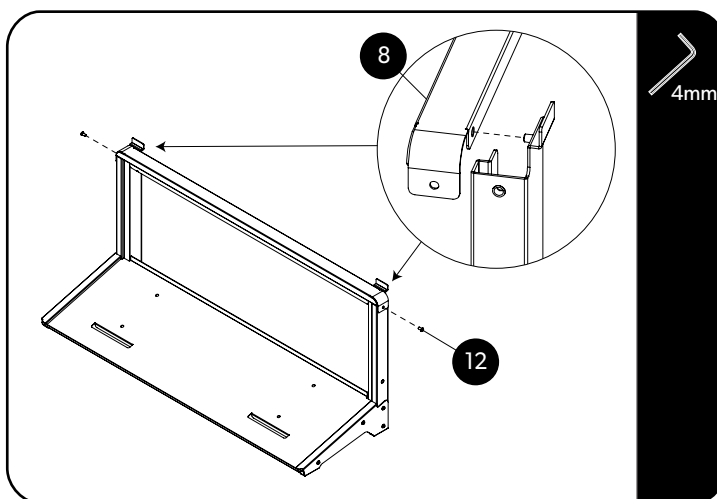

Place the Top Cap (Item 8) onto the two Vertical Struts (2LH & 1RH) allowing the hole on the Top Cap (Item 8) to pass through the Threaded Studs as shown.




Fully tighten the two M6x12 Button Head Bolts (Item 12) as shown.

Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.4

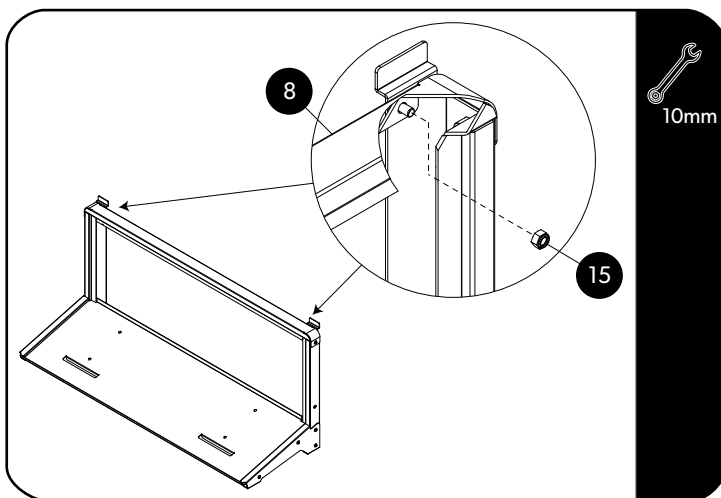


Fully tighten the Top Cap (Item 8) using two M6 Nyloc Nuts (Item 15) as shown.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb


2.5

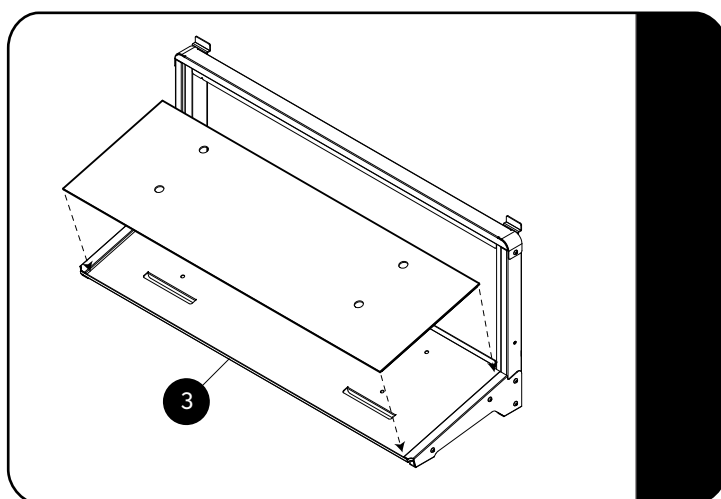

Remove the backing from the two velcro strips (Hook & Loop) and adhere the Bottom Banner to the Base Plate (Item 3) aligning the four holes centrally with the holes in the base plate.

Slat Wall Display Banners are sold separately.

2.6

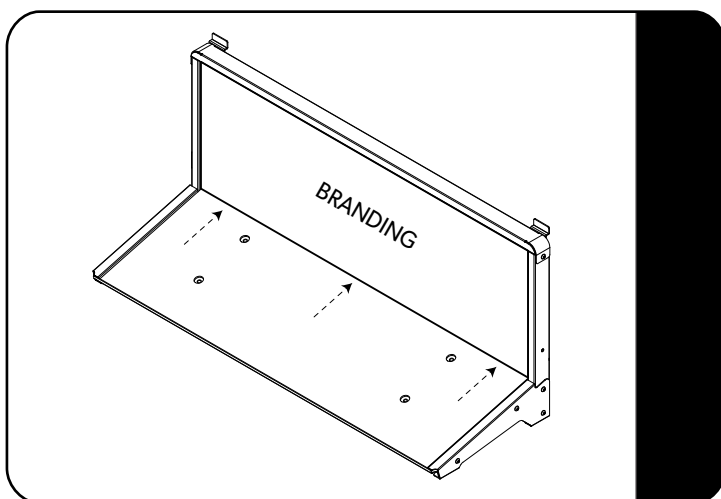


Remove the backing from the two velcro strips (Hook & Loop) of the Top Banner.

Rest the bottom edge of the Top Banner on the top edge of the Bottom Banner applied in Step 2.5 and align the side edges with the Bottom Banner.

Push the Top Banner backward and adhere to the Vertical Strut LH & RH (Items 2LH & 1RH) applying a little pressure.


Slat Wall Banners are sold separately.

2.7

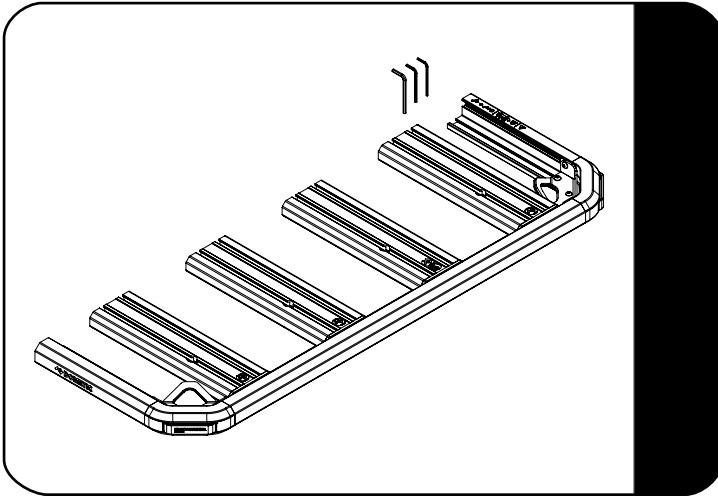


Revert to DISP045 to assemble the Slimline 3 Display Tray.

2.8

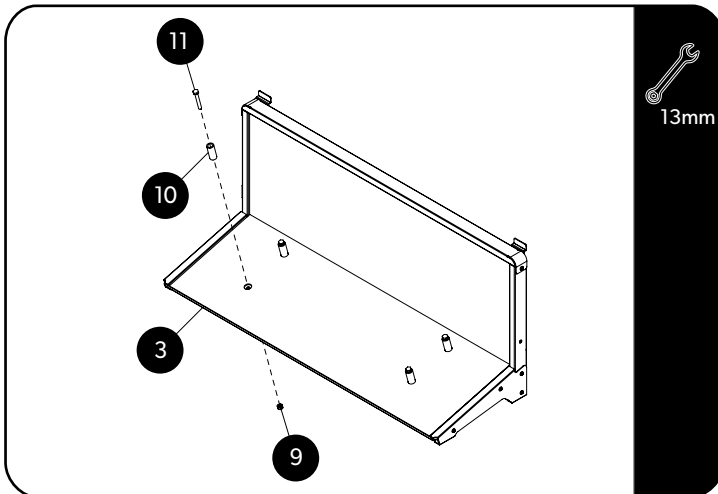

Loosely assemble the four M8x60 Button Head Bolts, 19x12.58x45 Tube Spacers & M8 Nyloc Nuts (Items 11, 10 & 9) to the Base Plate (Item 3) as shown.

2.9

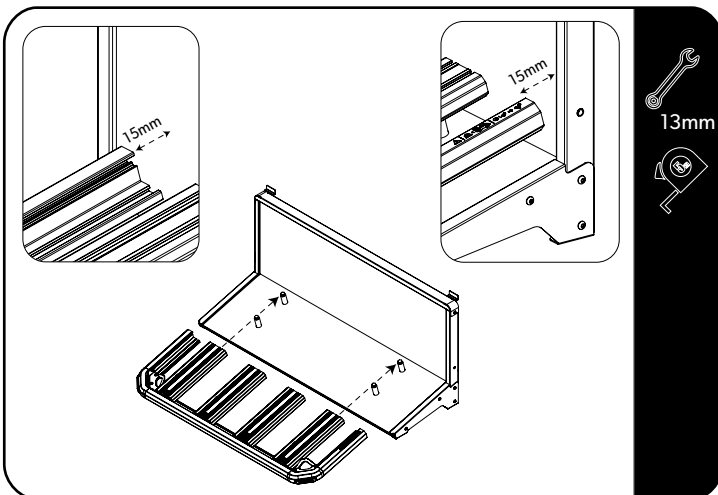

Position the assembled Slimline 3 Display Tray aligning the 1st & 4th Slat bottom T-slots with the bolts assembled in Step 2.8. Slide the Tray toward the Top Banner ensuring all four M8 bolt heads are in the T-slots.

Position the Slimline 3 Display Tray 15mm away from the Top Banner.


Fully tighten the four M8 Nyloc Nuts (Item 9) from Step 2.8, take care not to move the Slimline 3 Display Tray when tightening.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb


3.1

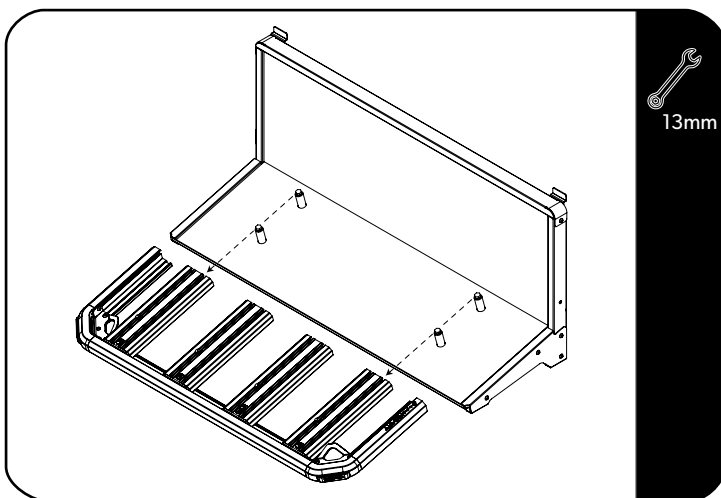

Slimline 3 Side Mount accessories can be assembled to the Slimline 3 Display Tray by loosening the four M8 Nyloc Nuts (Item 9) from Step 2.8 - 2.9.

Assemble the accessory to the Slimline 3 Display Tray before re-assembling the Slimline 3 Display Tray to the Slat Wall Display.

3.2

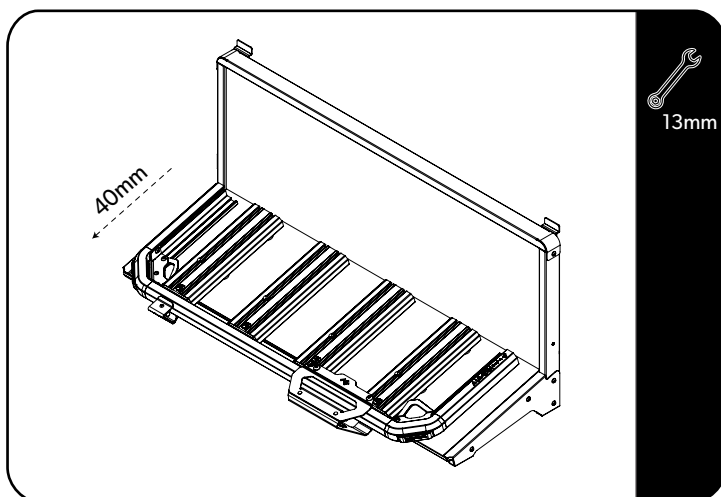

When re-assembling the Slimline 3 Tray to the Slat Wall Display it can be offset forward up to 40mm from the Top Banner to allow additional accessories to be installed.


Position the Slimline 3 Display Tray and fully tighten the four M8 Nyloc Nuts (Item 9) from Step 3.1.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

3.3

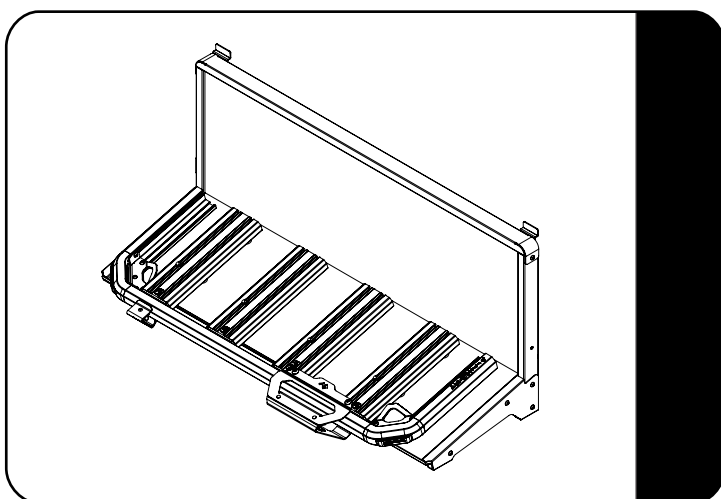


The Slimline 3 Slat Wall Display can be used as a counter top display, allowing for a wide range of storefront options.

3


MOUNTING OPTIONS

3.4

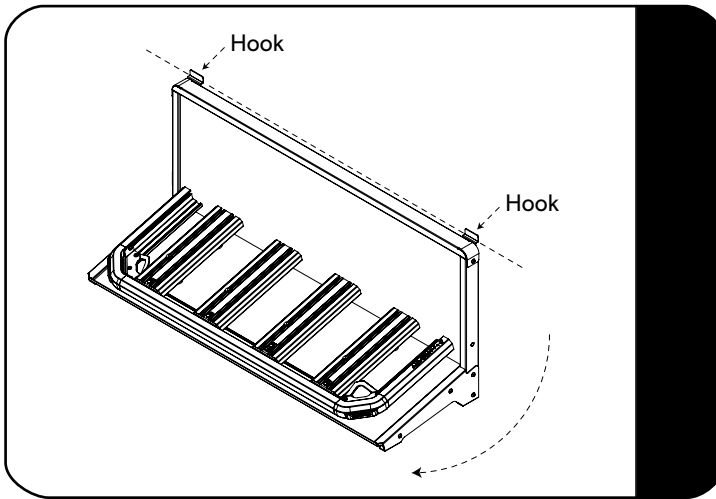

Fit the Salt Wall Display to your existing in-store slat wall using the Vertical Strut Hooks by inserting the hooks into the slat wall recess as shown.

3.5

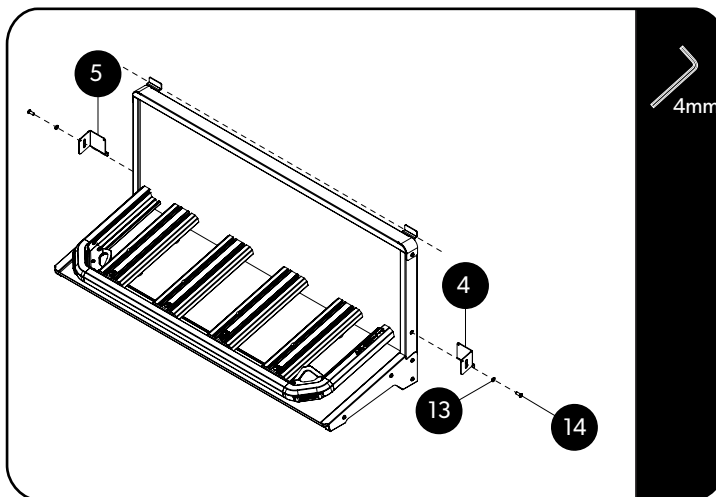

Slide the Slat Wall Lock Brackets LH & RH (Items 4 & 5) into the Slat Wall recess as shown.

The Slat Wall Lock Brackets can be adjusted based on your Slat Wall type.

Fully tighten the two M6x12x1 Flat Washers & M6x16 Button Head Bolts (Items 13 & 14) to secure the Slimline 3 Slat Wall Display to the Slat Wall.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

4

FINISH

Congratulations! You did it. Take a step back and admire your work!

5

INSTALL OTHER RACK ACCESSORIES ON YOUR DISPLAY STAND

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures

