


Y-Frame Display Slat Wall Brackets



READ ME!

Thank you for purchasing a Y-Frame Display Slat Wall Brackets.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED





IN THE BOX

1	2 X	Slat Wall Hook - 1LH & 1RH
2	2 X	Slat Wall Stopper
3	2 X	Slat Wall Spacer
4	3 X	M6x16 Button Head Bolt
5	1 X	M6x20 Button Head Bolt
6	3 X	M6 Nyloc Nut


TOOLS NEEDED



FIGURE 1.1

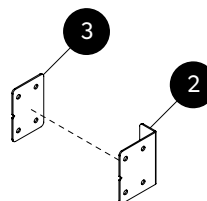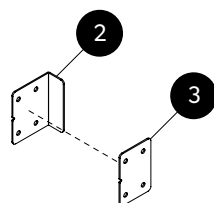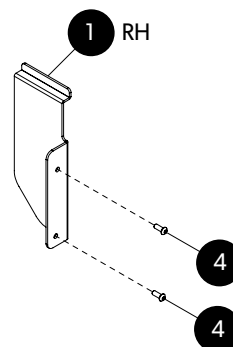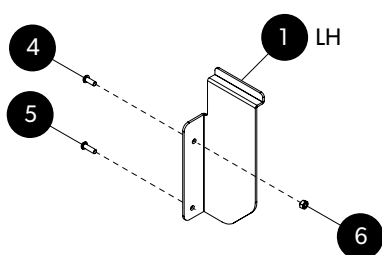


2.1

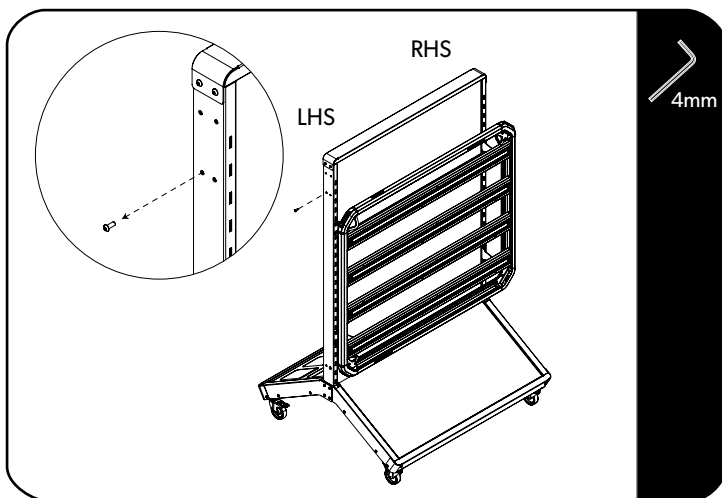

To convert your free standing Y-Frame Display Stand to the Slat Wall Display Stand start by removing the M6x16 Button Head Bolt on the LHS Vertical Upright that secures the internal cross brace.

2.2

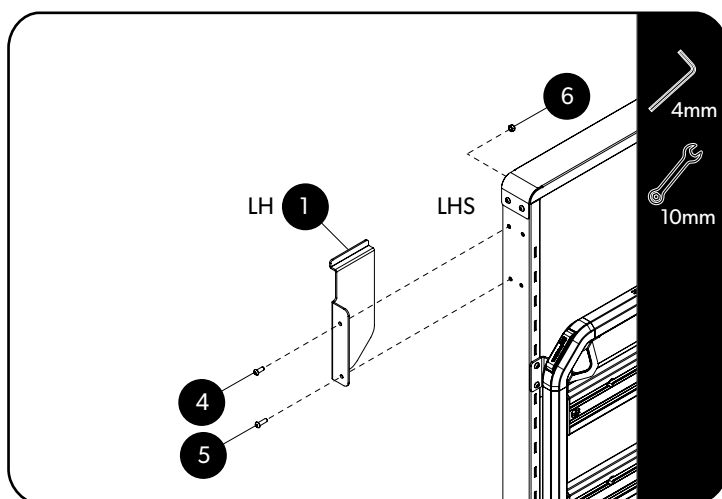


Assemble the Slat Wall Hook Bracket LH (Item 1LH) to the left vertical upright by using a M6x16 Button Head Bolt & M6 Nyloc Nut (Items 4 & 6) for the top hole and a M6x20 Button Head Bolt (Item 5) for the bottom hole as shown.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.3

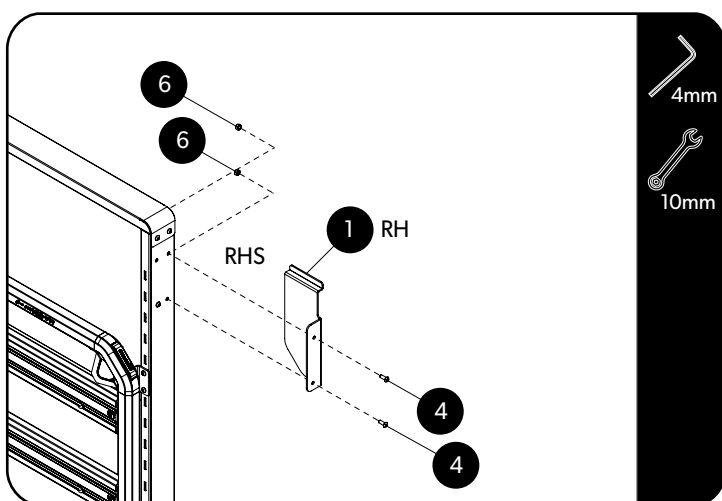


Assemble the Slat Wall Bracket RH (Item 1RH) to the right vertical upright by using two M6x16 Button Head Bolts & M6 Nyloc Nuts (Items 4 & 6).



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.4

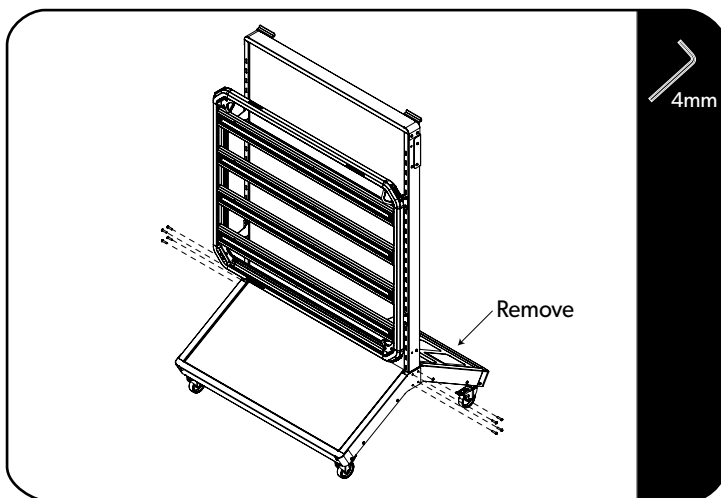


Remove the rear Base Plate from the Y-Frame Base as this is a removable part.

Place the Y-Frame on a suitable working surface so that the Slimline 3 Tray faces upwards.

Remove the eight M6x25 Button Head Bolts that hold the Y-Frame Bases & internal Brace in place so that the bottom Slat Wall Brackets can be assembled.

Take care when removing the Y-Frame Bases then store in a safe location for later use.

2.5

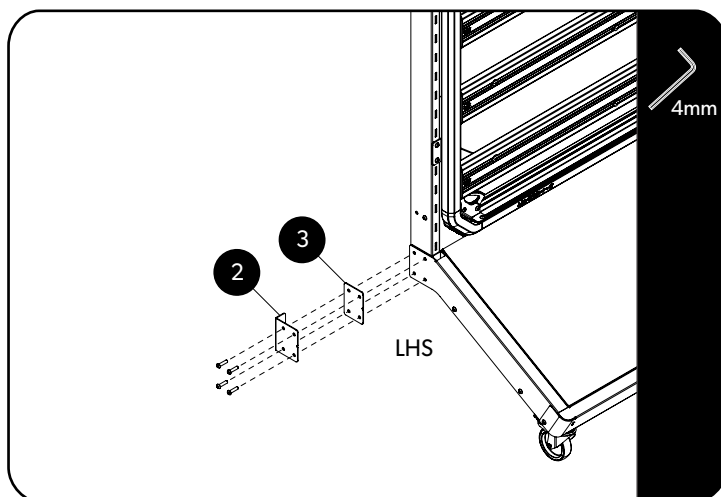

Assemble a Slat Wall Stopper & Spacer (Items 2 & 3) to the left hand side of the Y-Frame vertical uprights as shown by using the four M6x25 Button Head Bolts removed in Step 2.4.

Align the triangle notches to ensure the Slat Wall Spacer is in the correct orientation before fully tightening.


Make sure to reassemble the internal Brace that was loosened in Step 2.4.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.6

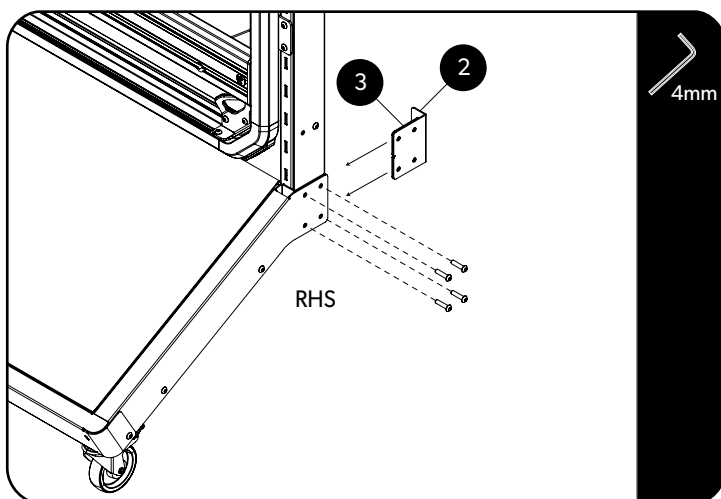

Assemble a Slat Wall Stopper & Spacer (Items 2 & 3) in between the right hand side Y-Frame vertical uprights and the Y-Frame Base as shown by using the four M6x25 Button Head Bolts removed in Step 2.4.

Align the triangle notches to ensure the Slat Wall Spacer is in the correct orientation before fully tightening.

Make sure to reassemble the internal Brace that was loosened in Step 2.4.




Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2

FIT AND SECURE


2.7

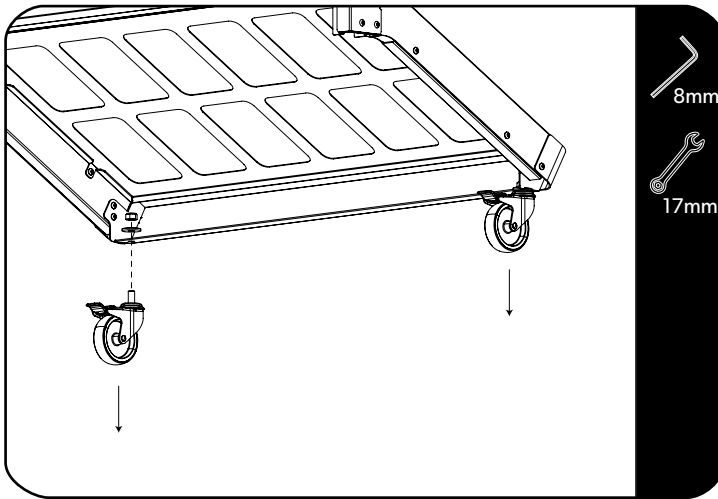

Remove the two 75mm Braked Wheels from the Y-Frame Base by loosening the M10 Nyloc Nuts.

Store the Wheels in a safe location with the removed Y-Frame Base.

2.8

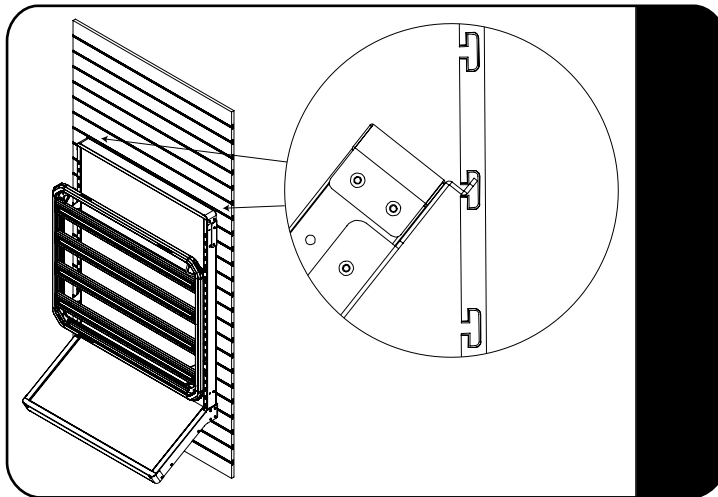

Insert the Slat Wall Hooks on the Y-Frame Display Stand into the Slat Wall channels as shown, then allow the Slat Wall Display Stand to rest against the Slat Wall.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER RACK ACCESSORIES ON YOUR DISPLAY STAND

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures

