


Slimsport Display Rack

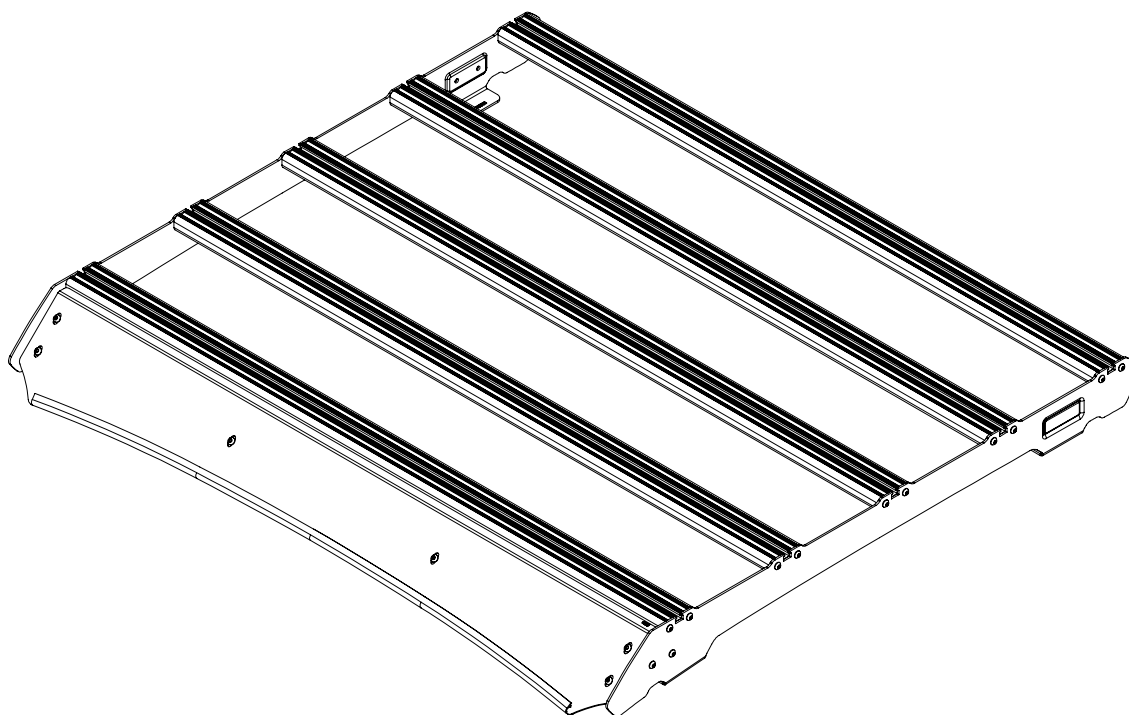

READ ME!

Thank you for purchasing a Slimsport Display Rack.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	1 X	Side Profile LH
2	1 X	Side Profile RH
3	1 X	Wind Fairing Bracket LH
4	1 X	Wind Fairing Bracket RH
5	1 X	Wind Fairing
6	2 X	Wind Fairing Middle Bracket
7	5 X	Slat
8	1 X	Wind Fairing Rubber - HDR0081
9	10 X	M6x16 Button Head Bolt
10	2 X	M8 Nyloc Nut
11	2 X	M8x16 Hex Bolt
12	2 X	M8 Nut Cap
13	20 X	M6x20 Button Head Bolt

TOOLS NEEDED




4mm Allen Key




13mm Wrench

FIGURE 1.1

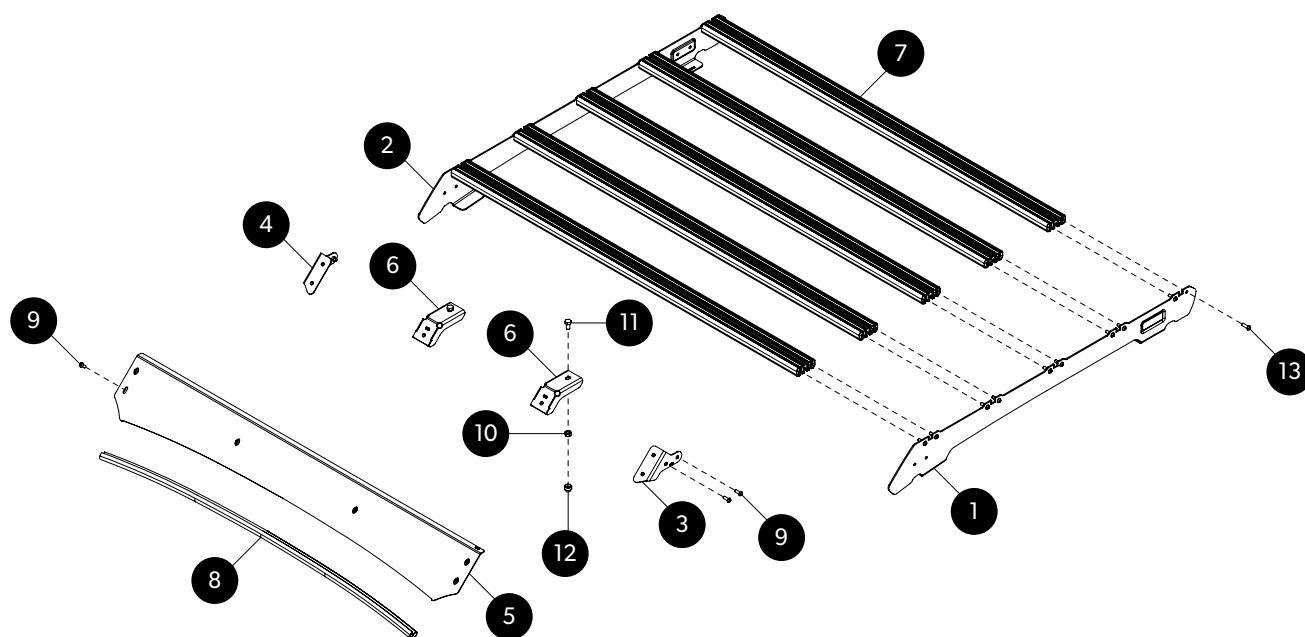


2.1

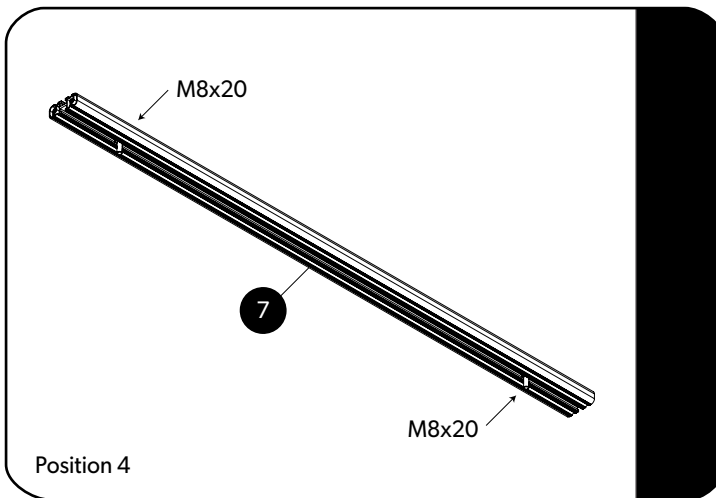

Insert two M8X20 Hex Bolts (supplied with the Y-Frame Display Stand - DISP042) or (supplied with the Display Rack Brackets - DISP049) into the bottom T-Slot of the Slat (Item 7) as shown.

To be used in position 4.

2.2

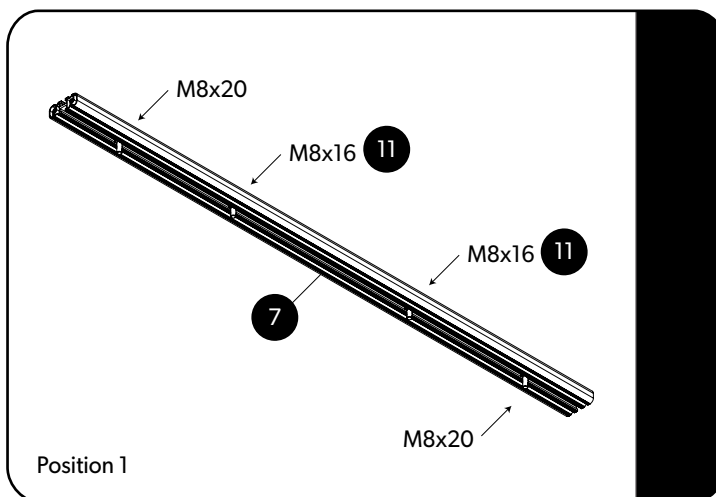


Insert two M8x16 Hex Bolts (Item 11) into the bottom T-Slot of the slat as shown.

Insert two M8X20 Hex Bolts (supplied with the Y-Frame Display Stand - DISP042) or (supplied with the Display Rack Brackets - DISP049) into the outside section of the bottom T-Slot of the Slat (Item 7) as shown.

To be used in position 1.

2.3

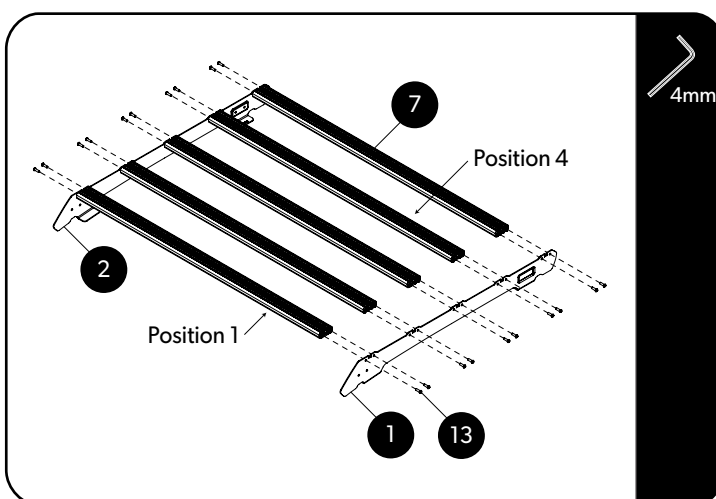

Make sure to place the Slats from Step 2.1 - 2.2 in position 1 and 4 as shown.

Assemble the Side Profiles LH & RH (Items 1 & 2) to the Slats (Item 7) by using twenty M6x20 Button Head Bolts (Item 13) as shown.




Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2

FIT AND SECURE

2.4

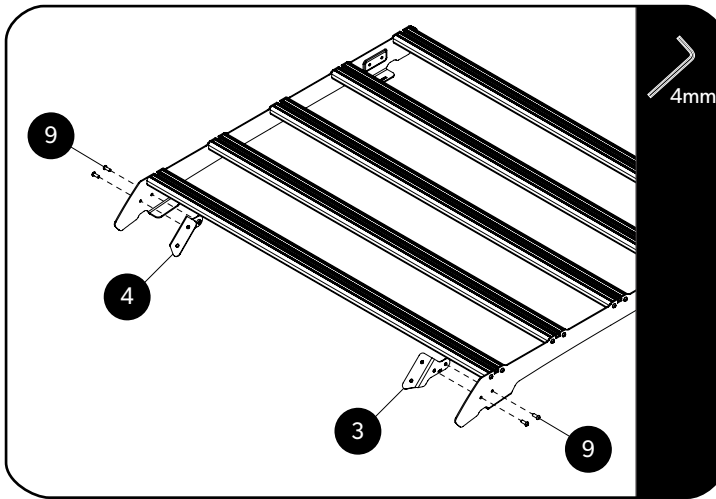


Assemble the Wind Fairing Bracket LH & RH (Items 3 & 4) to the Side Profiles as shown by using two M6x16 Button Head Bolts (Item 9) on each Wind Fairing Bracket.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.5

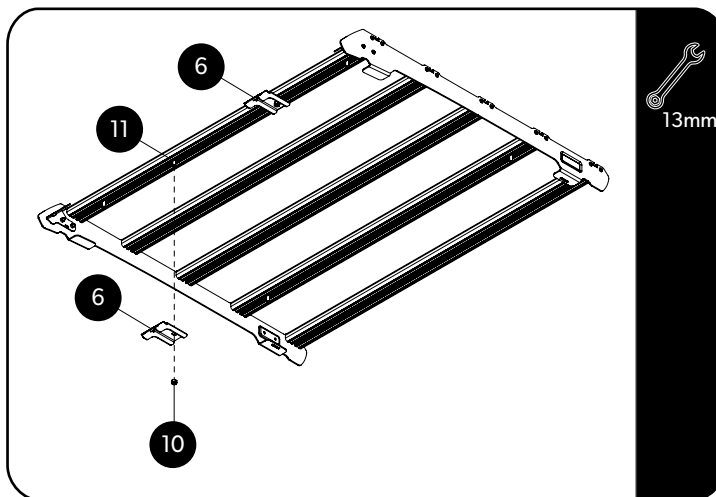


Assemble two Wind Fairing Middle Brackets (Item 6) to the underside of the first Slat as shown by using a M8 Nyloc Nut (Item 10).

Make sure to use the M8x16 Hex Bolts (Item 11) from Step 2.2.

Do not fully tighten yet.

2.6

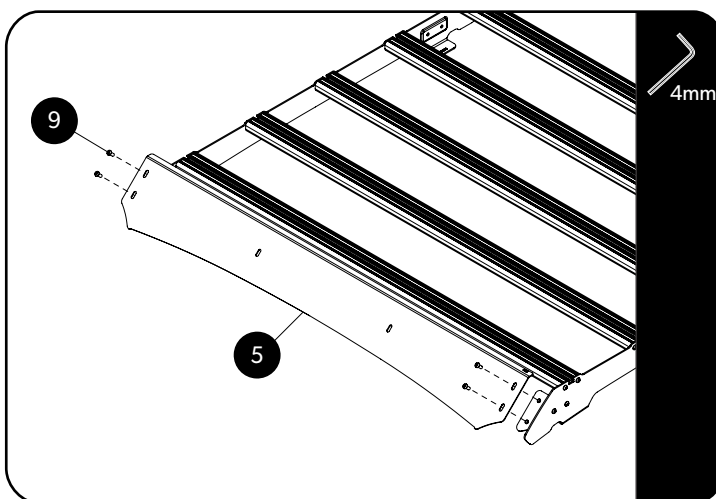


Assemble the Wind Fairing (Item 5) to the two Wind Fairing Middle Brackets LH & RH (Item 3 & 4) by using four M6x16 Button Head Bolts (Item 9) as shown.

Do not fully tighten yet.

2

FIT AND SECURE

2.7

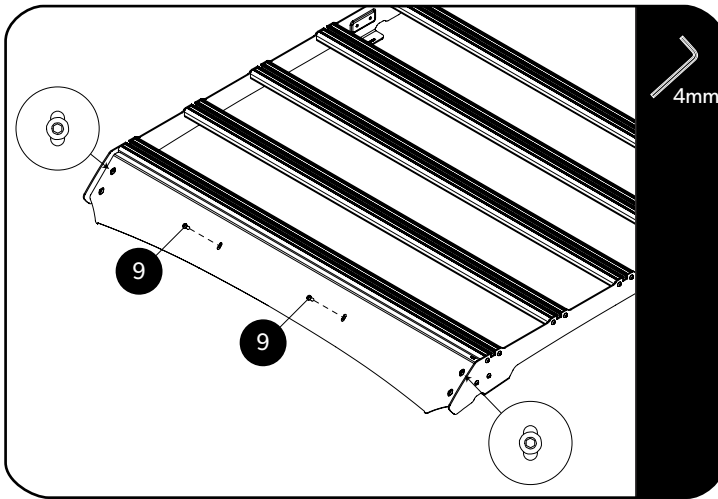


Position the Wind Faring Middle Brackets (Item 3 & 4) so that the two M6x16 Button Head Bolts (Item 9) can be inserted through the Wind Faring (Item 5) as shown.

Center align the Slots with the Bolts on the Wind Faring before fully tightening all of the M6x16 Button Head Bolts (Item 9) to secure the Wind Faring.

Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.8

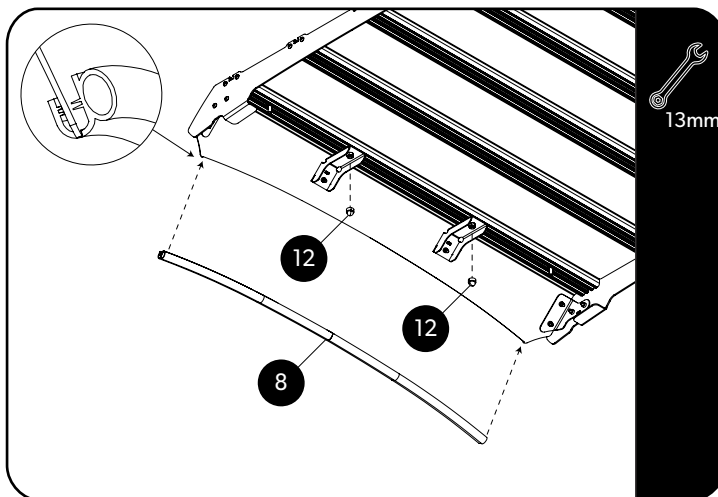

Fully tighten the two M8 Nyloc Nuts (Item 10) from Step 2.5 and place the two M8 Nut Caps (Item 12) over the M8 Nyloc Nuts (Item 10) as shown.

Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

Finish off the assembly by fitting the Wind Faring Rubber (Item 8) to the Wind Faring (Item 5) as shown.

The Slimsport Display Rack can now be fitted to a Y-Frame Display Stand.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER RACK ACCESSORIES ON YOUR DISPLAY STAND

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures

