
FRONT RUNNER
VEHICLE OUTFITTERS

STRAP-ON FOOT SET

ENG

FAG0011

15 min

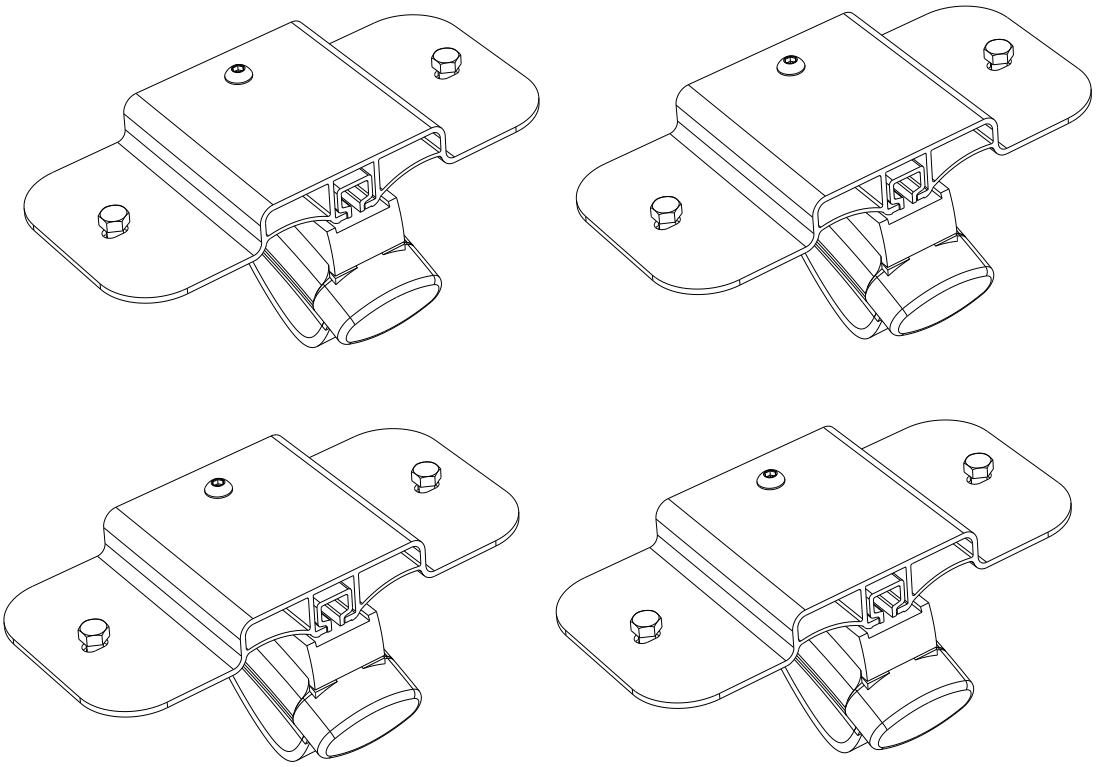

READ ME !

Thank you for purchasing a Front Runner Strap-On Foot Set.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE.

IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH.

YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE.

THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE.

IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES,

YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

© COPYRIGHT 2016 FRONT RUNNER VEHICLE OUTFITTERS


1 GET ORGANIZED

IN THE BOX		
1	4 X	Adapter Plate
2	4 X	Strap-On Foot
3	8 X	M8 x 16 Hex Bolt
4	4 X	M8 x 16 Button Head Bolt
5	12 X	M8 x 16 x 1SS Flat Washer
6	12 X	M8 Nyloc Nut
7	8 X	M8 Nut Caps

TOOLS NEEDED




FIGURE 1.1

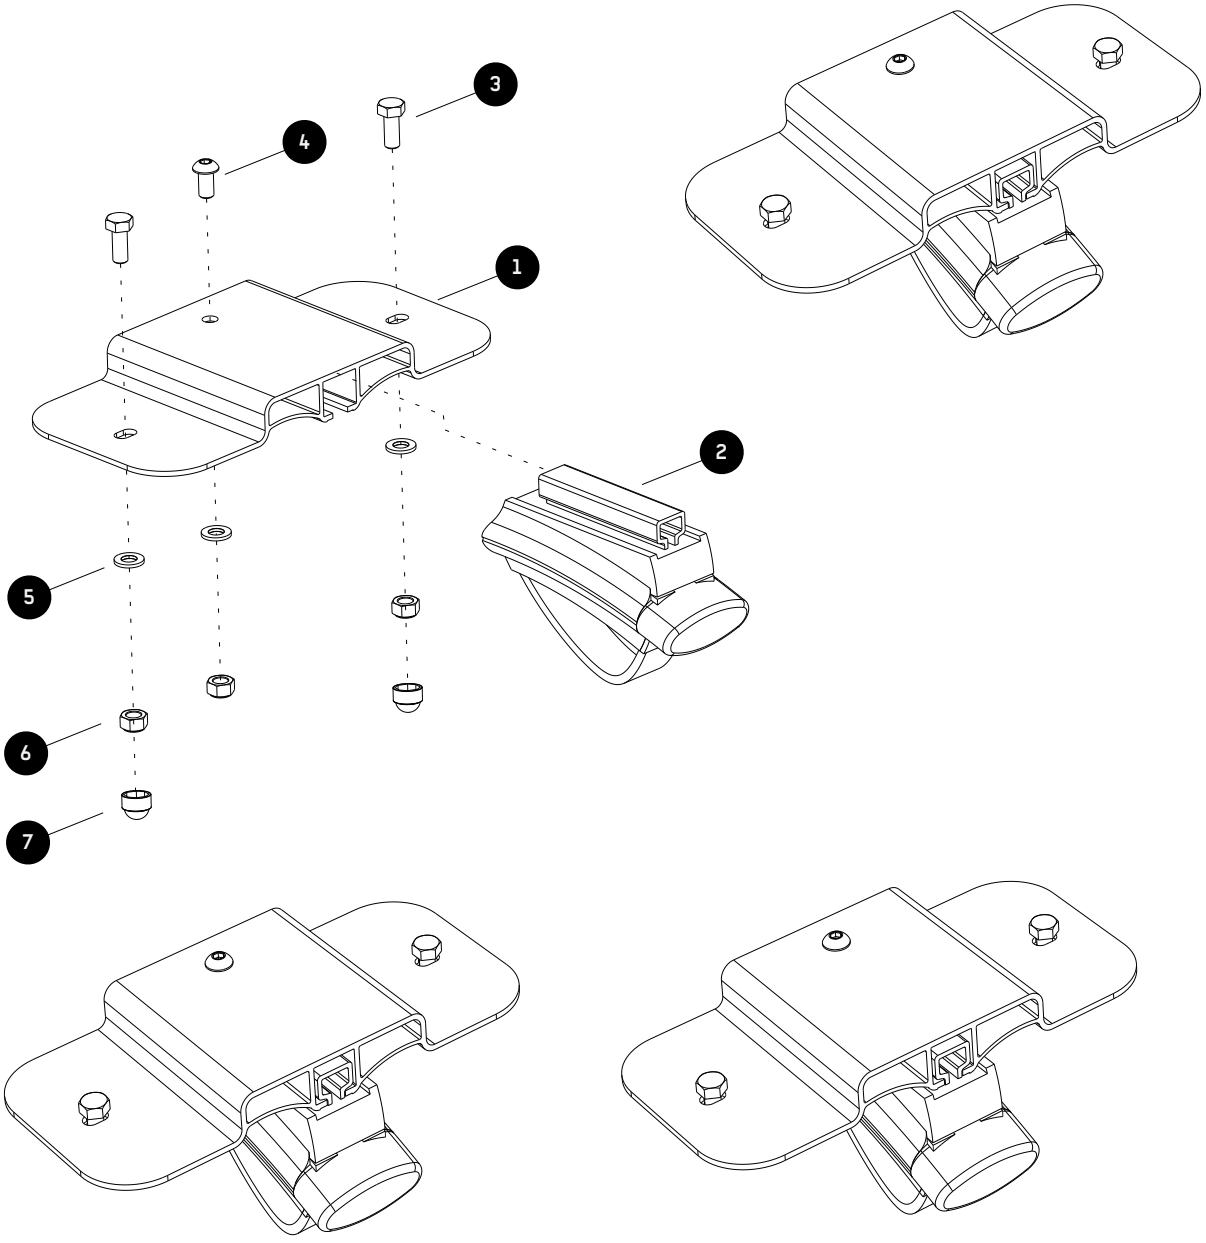

 © COPYRIGHT 2016 FRONT RUNNER VEHICLE OUTFITTERS

2 FIT AND SECURE


2.1

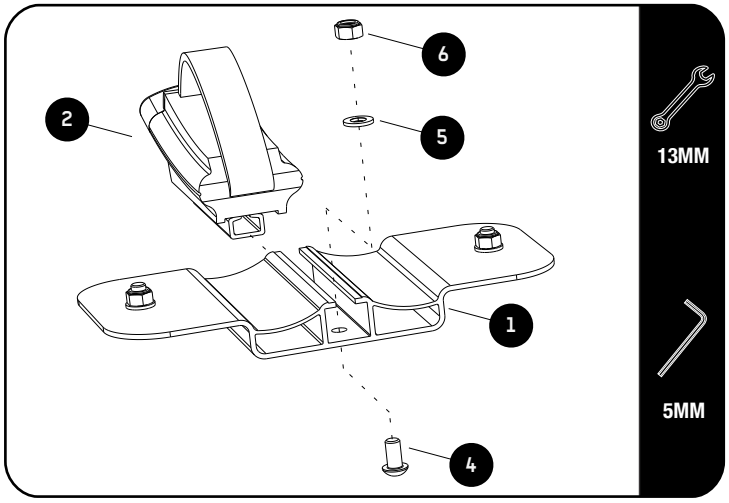

Insert and fasten the M8 x 16 Button Head Bolt (Item 4) to the Adapter Plates (item 1) using the M8 Nyloc Nuts and M8 x 16 x 1SS Flat Washer. (Items 5 & 6)

From the opposite end, slide the Strap-On-Feet (Item 2) onto the Adapter Plates up to the Button Head Bolt, Nyloc Nut and Flat Washer.

2.2

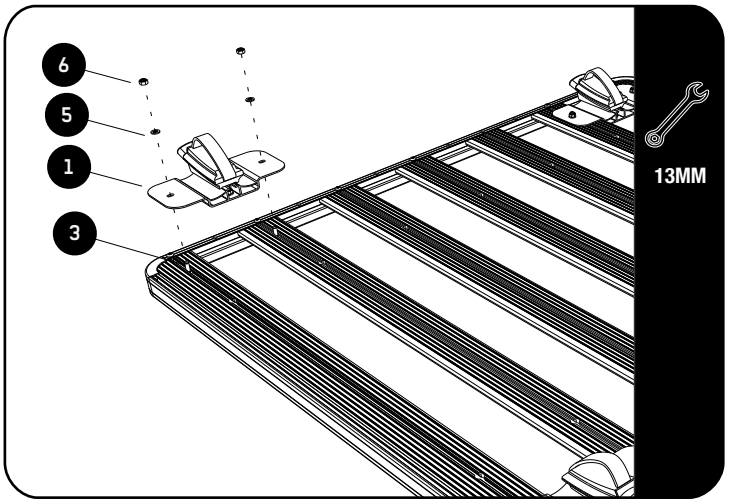


Insert an M8 x 16 Hex Bolt (Item 3) into each of the required Slats using the Machined Slots as shown.

Place the Strap-On-Foot Adapter Plate (Item 1) over the Hex Bolts and loosely fasten using M8 Flat Washers and M8 Nyloc Nuts (Items 5 & 6).

The assembly should still be able to slide if pushed.

2.3

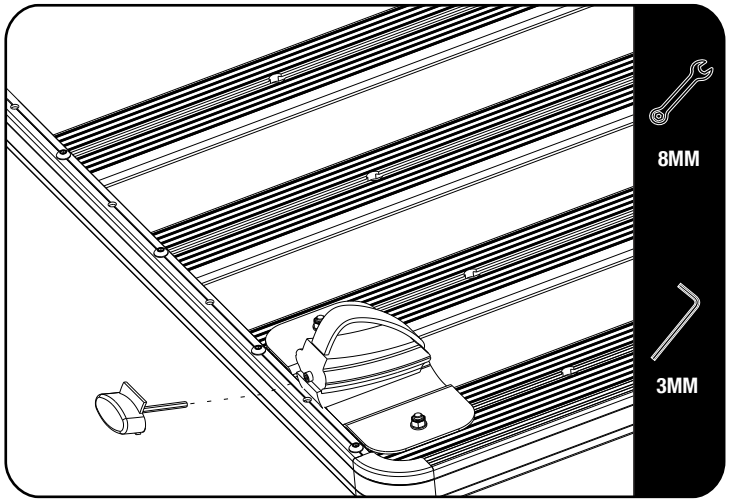

To loosen the Strap, unlock and remove the Locking Handle of the Strap-On-Foot. Loosen the M6 Socket Head Screw using the Allen Key supplied with the Strap-On-Foot. You will see that this will loosen the Strap of the Foot.

You can now remove one end of the Strap.

2 FIT AND SECURE

2.4



Turn the Rack over so that the Strap-On-Feet are below the Rack. Place the Rack on your vehicle so that the Strap-On-Feet are positioned on the Raised Rails of the vehicle.

Wrap the Straps around the Raised Rails and push the loose end into the Strap-On-Foot where you removed it in Step 2.3.

Tighten the M6 Socket Head Screw of the Strap by using the Allen Key on the Locking Handle.

Before fully tightening the Adapter Plates, center the rack on your vehicle.

Finally, make sure that all four the Adapter Plates of the Strap-On-Feet are fully tightened Place M8 Nut Caps (Item 7) on all the Nyloc Nuts.

3 COMPLETION

3.1



Congratulations! You did it. Take a step back and admire your work!

4

Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.

5 INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

© COPYRIGHT 2016 FRONT RUNNER VEHICLE OUTFITTERS