




FRONT RUNNER
VEHICLE OUTFITTERS

ROOF RAIL LAND ROVER DISCOVERY SPORT

ENG

FALD005

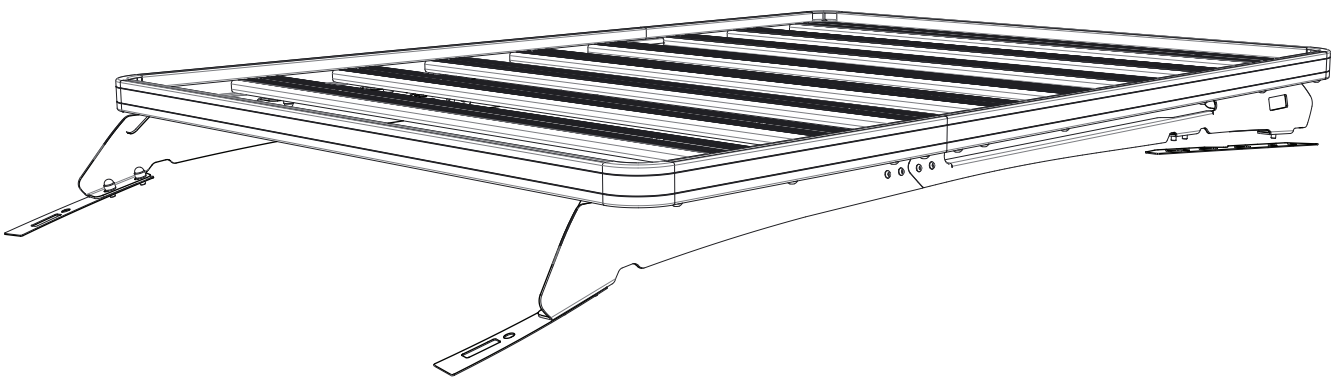

READ ME FIRST! ⚠

Thank you for purchasing a Front Runner Foot Rail.

Before you start, take a moment to familiarize yourself with this Fitting Instruction and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED

Here is what you are looking at for FALD005

IN THE BOX

1	2 X	Foot Rail; 1xLH, 1xRH
2	2 X	Foot Rail; 1xLH, 1xRH
3	22 X	M8 Nut Cap
4	22 X	M8x20 Hex Nut
5	10 X	M8 Spring Washer
6	22 X	M8x16x1.6 Stainless Steel Flat Washer
7	12 X	M8 Nyloc Hex Nut
8	2 X	Rear Cover Plate; 1xLH, 1xRH
9	2 X	Front Cover Plate; 1xLH, 1xRH
10	8 X	M6x16 Button Head
11	2 X	Slide Plate

IN THE BOX CONTINUED

12	8 X	M6x12x1 Stainless Steel Flat Washer
13	8 X	M6 Nyloc Nut
14	8 X	M6 Nut Cap

TOOLS NEEDED



Measuring
Tape





FIGURE 1.1



2.1

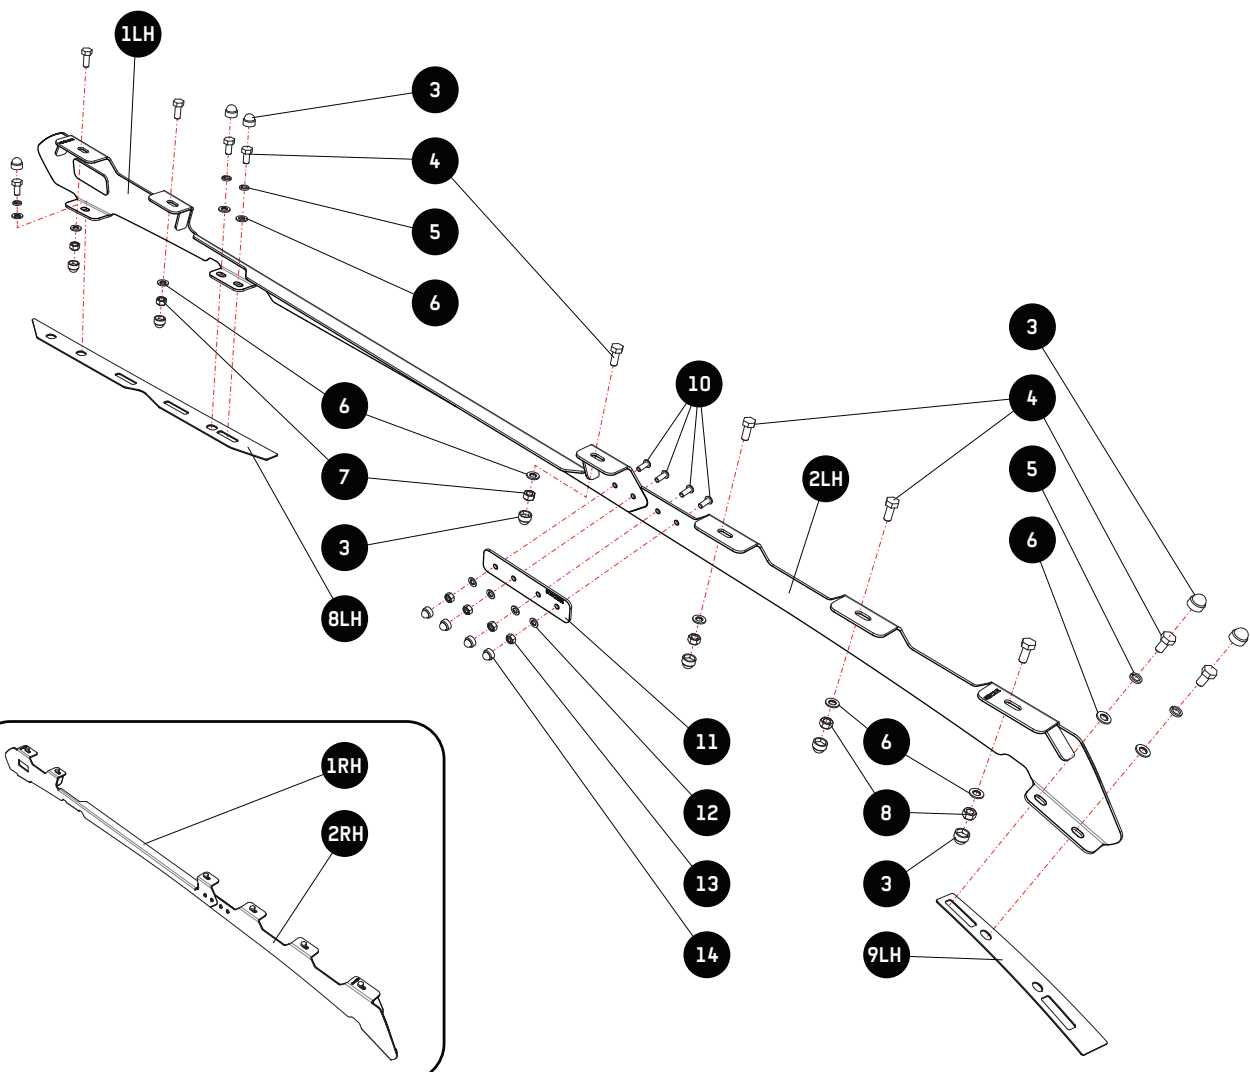

Remove Factory fitted Rails exposing the brackets as shown.


Loosen and remove all 6 brackets. Retain for refit in next Step.

2.2



Fit Cover Plates Items 8 and 9 into the Channel and Refit Factory Brackets Fully Tighten.

2.3

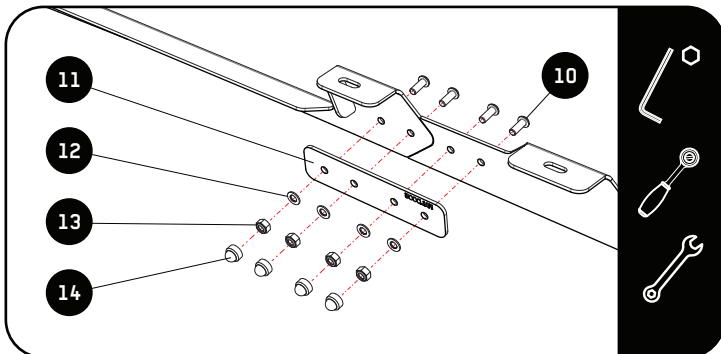

Join the 2 halves of the Foot Rails with supplied Splice Plate Item 11. Fasten as shown with Items 10, 12, 13 and 14.

2.4



Fit the Roof Rail to the Factory Brackets with Items 4, 5 and 6. Fully tighten and cover with Item 3.


3 FIT AND SECURE

3.1

Refer to RRSUNI when assembling your Slimline II Tray.
See Step 3.2 You will need to insert Item 6 into the Front Combined Slat before fitting the Wind Deflector.



3.2

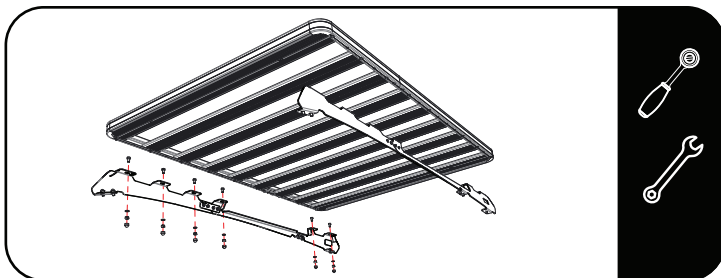

Use Item 4, 6 & 3 to Fit and Secure Your Roof Rack to the Foot Rails.


3.3



Take a moment to centre the Rack and Fully Tighten. Use Items 3 to Finish off the Bolts.

4 COMPLETION

4.1

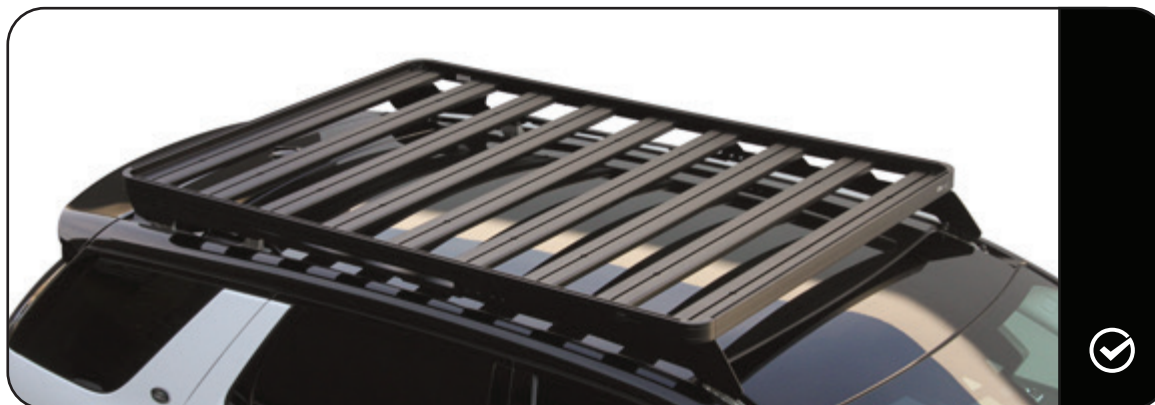

Congratulations. You did it. Take a step back and admire your work!

5 INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.