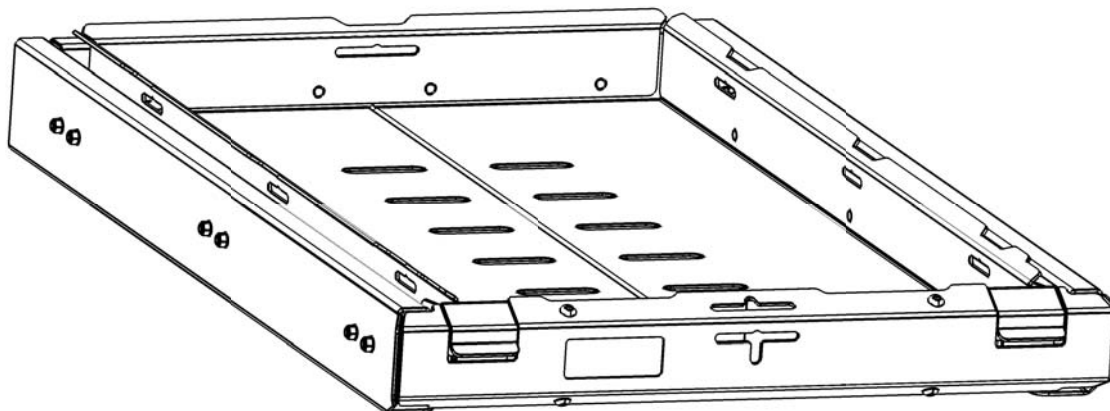


**INSTALL TIME: 30 mins**


Note: In certain cases the bolts supplied may be longer than required. If the length of the bolts are going to cause any clearance issues once fitted, cut the bolts to a suitable length.

1 MOUNTING TO WOODEN DECK

- (**A**) Place your Fridge Slide on top of the wooden deck in the desired location. Open the Fridge Slide and mark the position of the eleven mounting points on to the deck.

Remove the Fridge Slide and Drill a 8.5mm hole through the wooden deck on all eleven markings.


- (**B**) Crimp the M6 Riv nut to the M10x30 Flat Washer as shown. Working on the underside of the deck, knock a Riv Nut/Washer combination into each 8.5mm hole from Step A.

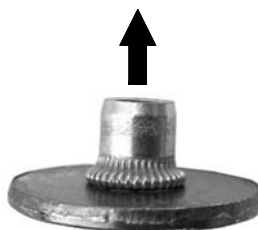

- (**C**) Fasten the Fridge Slide to the wooden deck using the M6 x 30 Hex Bolts, M6 Spring Washers and M6 Flat Washers supplied.

You will need:

- ☐ 10 mm Flat or Socket Wrench
- ☐ Drill Machine
- ☐ 8.5 mm Drill Bit
- ☐ Riv Nut Tool
- ☐ Marking Pen

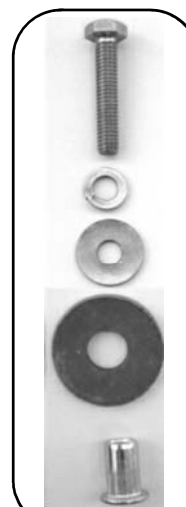**x 11**

2 MOUNTING TO LOAD BAY OPTION 1

- (A) Place your Fridge Slide in the desired location. Open the Fridge Slide and mark the position of the eleven mounting points on to the load bay.


Remove the Fridge Slide and Drill a 9mm hole through the body on all eleven markings.

- (B) Crimp the M6 Riv Nuts into the vehicle's body in each of the 9mm holes from Step A.

- (C) Fasten the Fridge Slide to the vehicle using the M6 x 30 Hex Bolts, M6 Spring Washers and M6 Flat Washers supplied.

You will need:

- ☐ 10 mm Flat or Socket Wrench
- ☐ Drill Machine
- ☐ 9 mm Drill Bit
- ☐ Riv Nut Tool
- ☐ Marking Pen

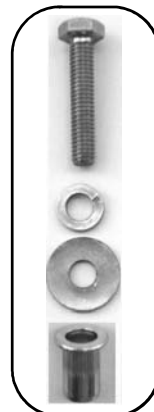

x 11

3 MOUNTING TO LOAD BAY OPTION 2

- (A) Place your Fridge Slide in the desired location. Open the Fridge Slide and mark the position of the eleven mounting points on to the load bay.


Remove the Fridge Slide and Drill a 6.5mm hole through the body on all eleven markings.

- (B) Fasten the Fridge Slide to the vehicle using the M6 x 30 Hex Bolts, M6 Spring Washers, M6 Flat Washers, M10 Flat Washers and M6 Nyloc Nuts supplied.

Working on the underside of the vehicle, the M10 Flat Washers must go over the M6 x 30 Hex Bolts first, followed by the M6 Flat Washers and M6 Nyloc Nuts.

You will need:

- ☐ 10 mm Flat & Socket Wrench
- ☐ Drill Machine
- ☐ 6.5 mm Drill Bit
- ☐ Marking Pen

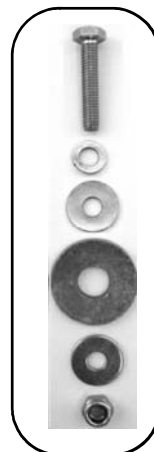

x 11

4 INSTALL OTHER VEHICLE AND RACK ACCESSORIES

- (A) Now's the time to visit your favorite Front Runner dealer in person or online.