



FRONT RUNNER RACKS 2000 PTY LTD

1 Forssman Close
Barbeque Downs, Kyalami

P.O.Box 7857
Halfway House 1685
Republic of South Africa

Tel : +27 11 466 - 0155/6
Fax: +27 11 466 - 0163
www.frontrunner.co.za
Reg No : 99/23159/07

FITTING INSTRUCTIONS – LANDROVER 90 RIGHT HAND SIDE FUEL TANK
(FTLD013)


1. The loose bracket is fitted to points 1 and 2
The tank is then fitted to the bracket at point 3



2. The back of the tank is fitted to the round pipe and mounted with M8 x 60 U-bolts and nyloc nuts.



3. A hole is drilled with a hole saw to 76mm for new filler neck, see measurements.

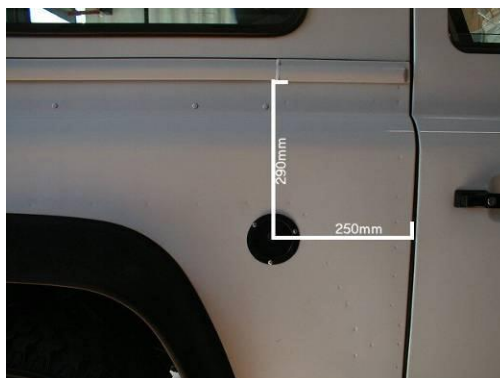

4. The fuel pump is mounted just above filler pipe onto flat body plate.




5. The filler pipe (No 1) runs over the round tube up to the new filler neck.



6. Connect the T-piece into rubber filler pipe close to fuel tank with stainless T-piece (60 x 8 x 60) in kit. Connect the outlet pipe from fuel pump into this T-piece.




7. Fitting in balance breather pipe. Connect T-piece in the auxiliary filler breather pipe as shown.

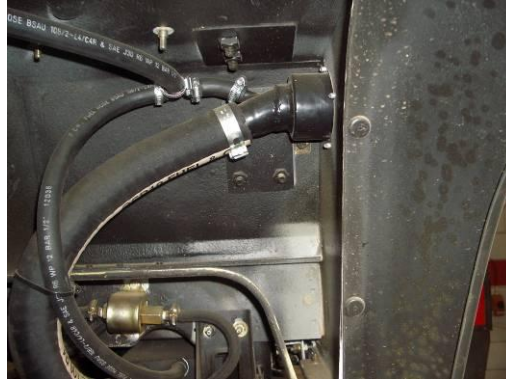

8. Cable tie hose as shown above wheel



9. Connect balance breather hose into the vehicles main breather using the T -piece 19x12x19

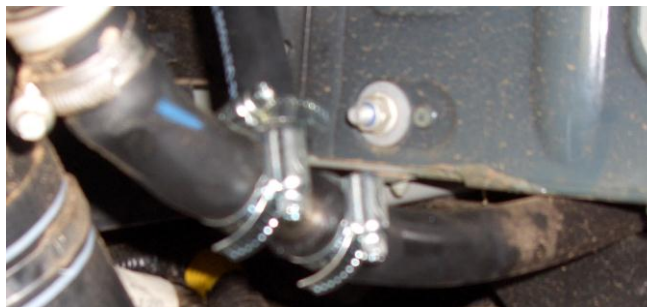



10. The bottom support for the running boards must be located back in its place by modifying it. Tank is now in position. Route wires from pump from switch to inside of vehicle. Make sure all clamps, bolts and nylock nuts are tightened. Test Pump