

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

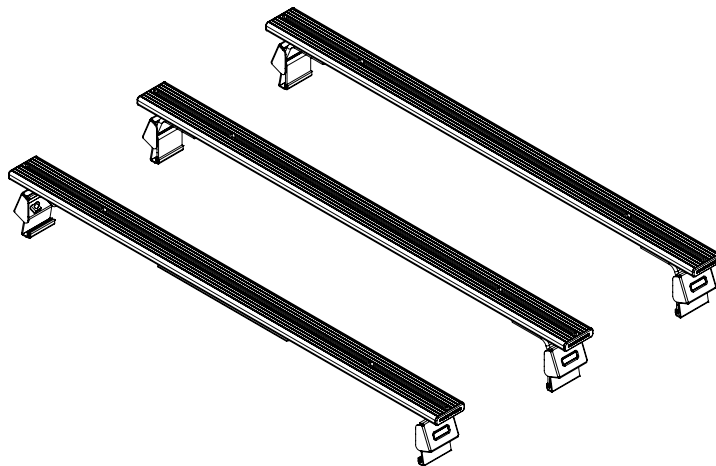

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

**1 GET ORGANIZED****IN THE BOX**

1	3 X	NO 2 Leg 130mm (Pair)
2	1 X	Load Bar Wind Deflector / 10mm
3	1 X	Pinch Weld Strip / 6 Pieces
4	1 X	Roof Load Bar Set 1345mm(W)

TOOLS NEEDED

Tape Measure




13mm Wrench




5mm Allen Key

FIGURE 1.1

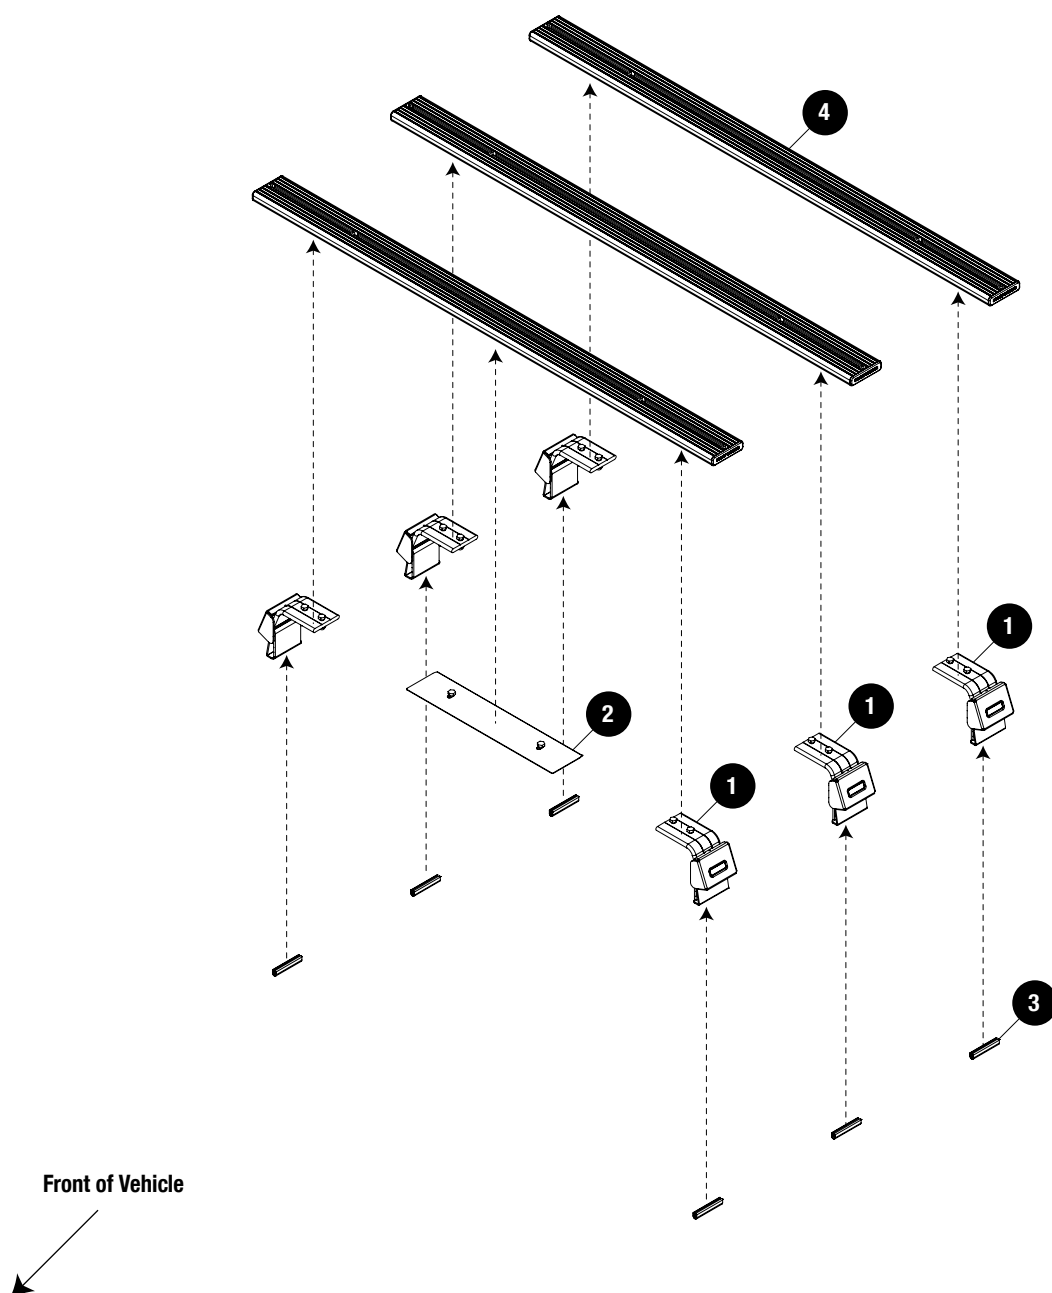

2.1

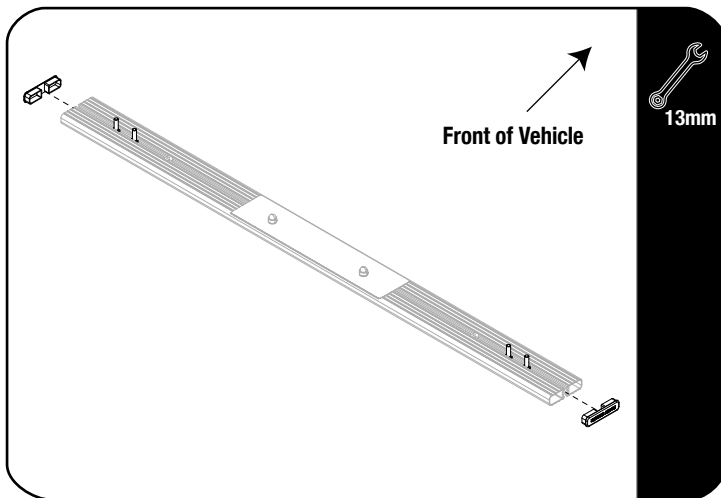

Refer to WDLB001 fitment guide before continuing to Step 2.1.




Flip the Load Bar so that the bottom of the Wind Deflector faces up.

Insert two M8x25 Hex Bolts into each side of the machined slots in the slat as shown.

Place the End Caps over the Slat as shown, with the text upside down.


2.2

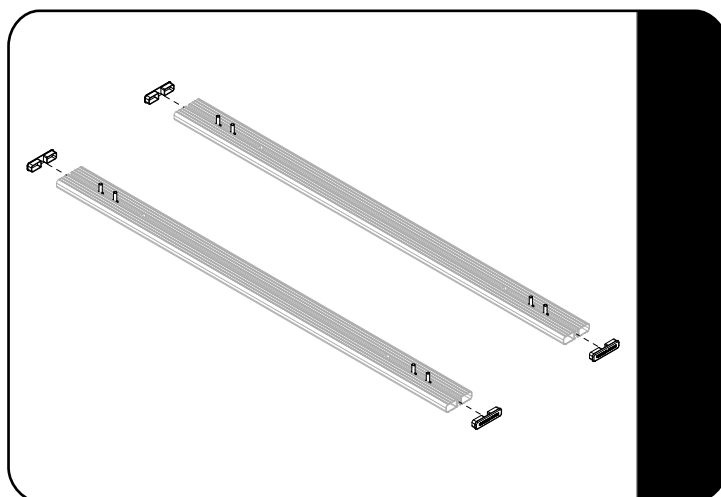

Insert two M8x25 Hex Bolts into each side of the machined slots in the two remaining slats as shown.


Place the End Caps over the Slat as shown, with the text upside down.

2.3

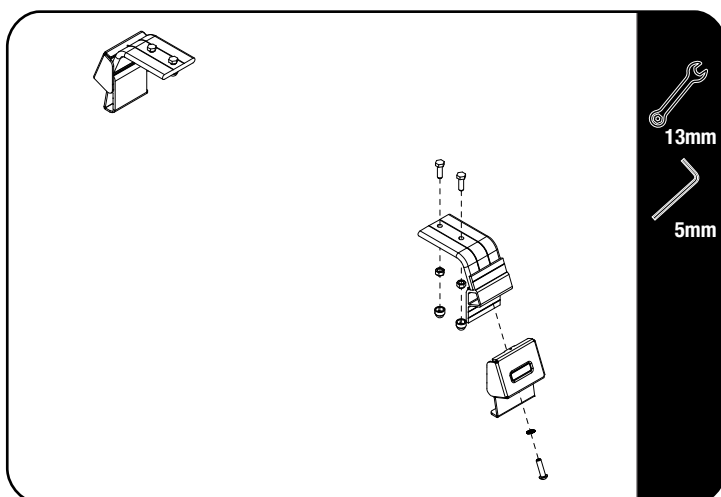


Familiarize yourself the LASSUNI fitment guide to assemble NO 2 Leg 130mm (Pair) for the steps to follow.

2.4

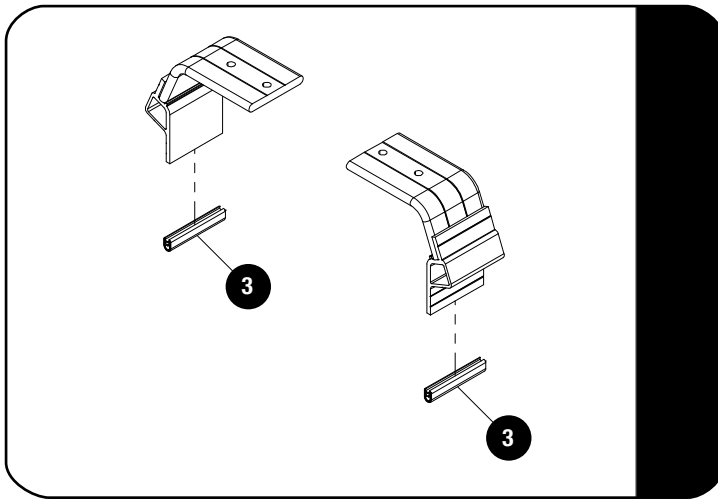


Fit the Pinch Weld Strips (Item 3) to the three pairs of Legs as shown.

2.5

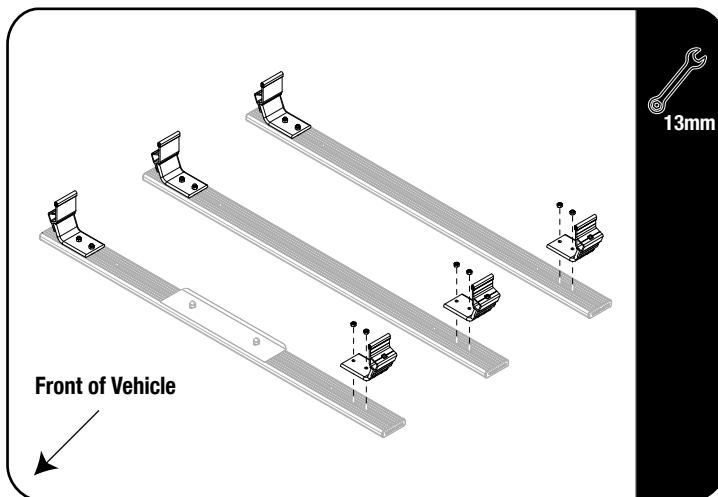

Loosely fit the three Pairs of Legs to the slats by using the M8 Nyloc Nuts referenced within LASSUNI.

2.6

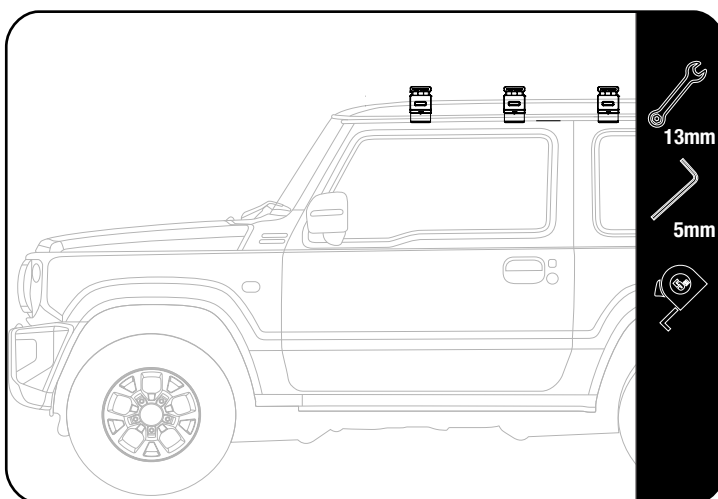

Place your Load Bars on the vehicle positioning all the Legs so that they rest on the gutters.

Position the Load Bars equally from each other and centralize on the roof.

Place the Gutter Clamps over the Legs by using the Schnorr Washers & M8x30 Button Head Bolts referenced within LASSUNI.

Fully tighten the M8 Nyloc Nuts & M8x30 Button Head Bolts.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

Place the M8 Nut Caps over the M8 Nyloc Nuts.

3

COMPLETION

3.1

Congratulations! You did it. Take a step back and admire your work!



4

TAKE A TRIP

After your first trip, check that all nuts, bolts, screws and fittings are tight. Re-tighten where needed. You will find a small amount of settling has happened.

Before going on a trip, check if the nuts, bolts, screws or fittings need to be re-torqued.

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:    