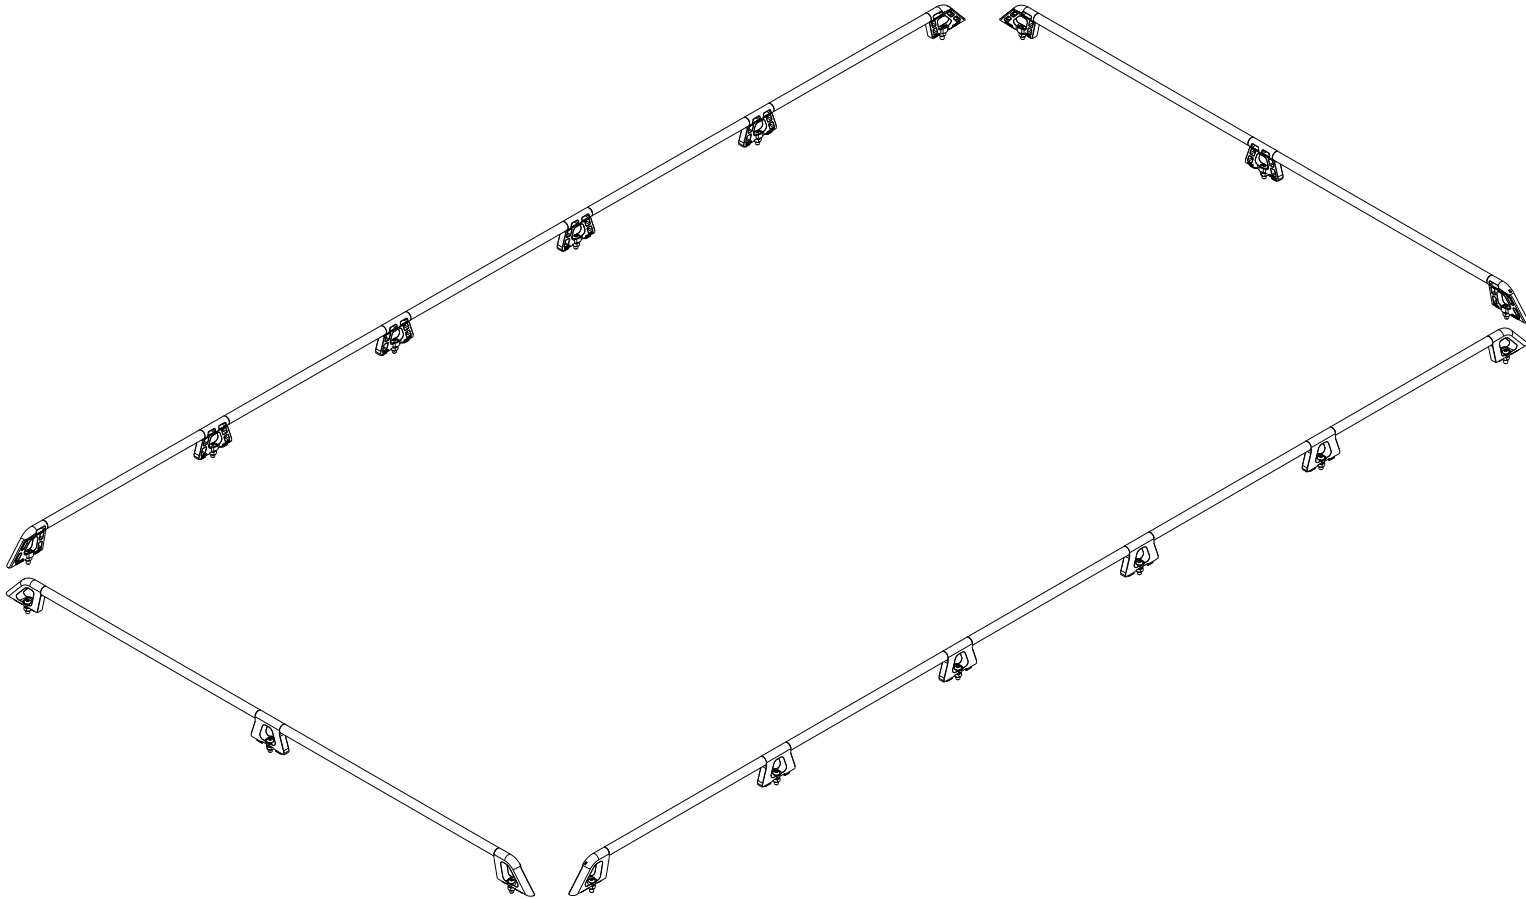


FRONT RUNNER

EXPEDITION RAILS FOR 1575MM WIDE RACK

ENG

KRXPUNI



READ ME !

Thank you for purchasing Expedition rails for your 1575mm wide rack

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

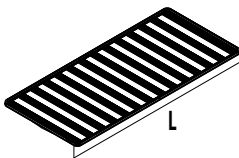
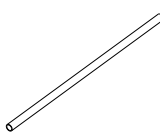
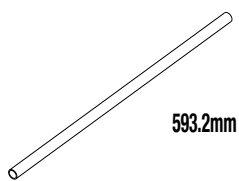
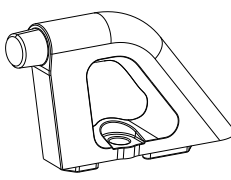
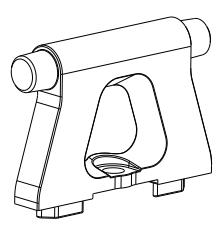
NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.



Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

Depending on which size Slimline II Tray you order, quantities may vary from those pictured.



	Rack Length (mm)	Short Tube	Long Tube	Corner Joiner	Center Joiner
		 350mm 369mm 410mm 435mm 460mm 480mm 495mm 503mm	 593.2mm		
3 SLAT	550mm	NA	4	4	2
4 SLAT	752mm	NA			2
5 SLAT	954mm	NA			2
6 SLAT	1156mm	NA			2
7 SLAT	1358mm	4 x 480mm		8	6
8 SLAT	1560mm	6 x 369mm			6
9 SLAT	1762mm	4 x 480mm & 2 x 350mm			6
10 SLAT	1964mm	6 x 495mm			6
11 SLAT	2166mm	8 x 410mm			8
12 SLAT	2368mm	8 x 460mm			8
13 SLAT	2570mm	8 x 503mm			8
14 SLAT	2772mm	10 x 435mm			10

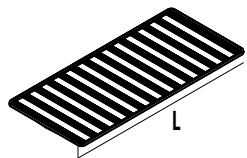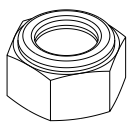		M8 Nyloc Nut	Button Head Screws
			 25mm M8x25
3 SLAT	550mm	6	6
4 SLAT	752mm	6	6
5 SLAT	954mm	6	6
6 SLAT	1156mm	6	6
7 SLAT	1358mm	14	14
8 SLAT	1560mm	14	14
9 SLAT	1762mm	14	14
10 SLAT	1964mm	16	16
11 SLAT	2166mm	16	16
12 SLAT	2368mm	16	16
13 SLAT	2570mm	16	16
14 SLAT	2772mm	18	18


2

GET ORGANIZED**IN THE BOX - As per table Section 1.**

- | | |
|---|---------------------------|
| 1 | End Piece Joiner |
| 2 | Center Joiner |
| 3 | 593.2 mm Long Tube |
| 4 | Short Tube |
| 5 | M8 x 25 Button Head Screw |
| 6 | M8 Nyloc Nut |

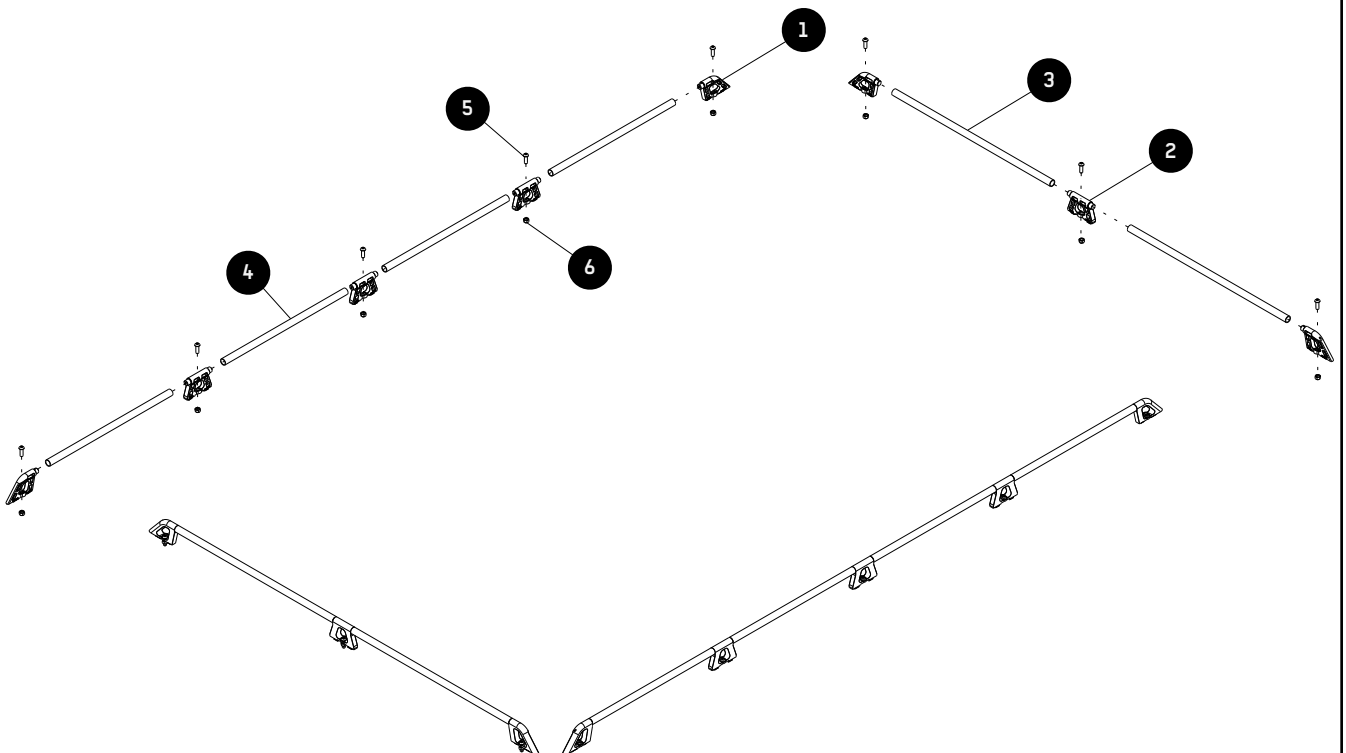TOOLS NEEDED**FIGURE 1.1**

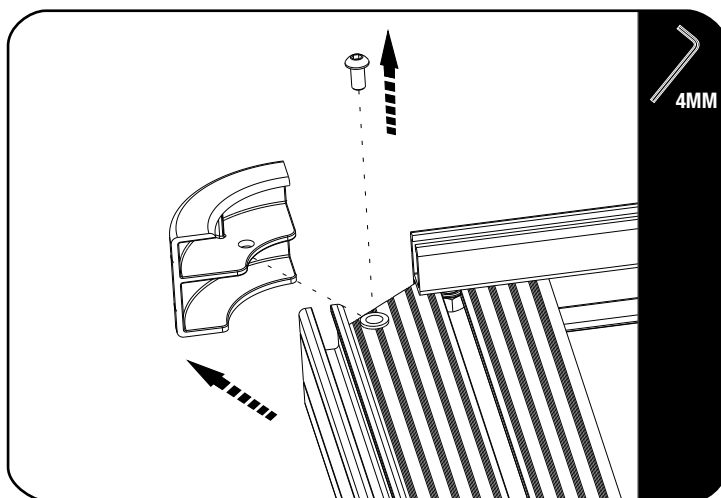
3.1



Remove the four Corners from the Roof Rack using a 4mm Allen Key.

Keep the corners safe to refit once fitment is complete

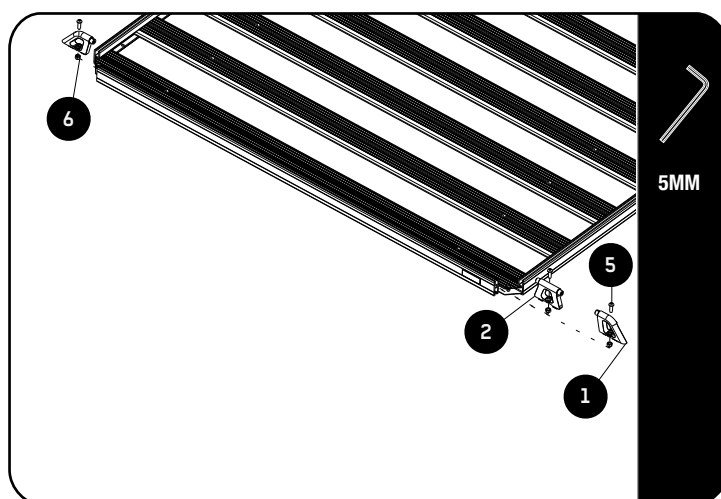
3.2



Loosely assemble the M8 x 25 Button Head Screw (Item 5) and M8 Nyloc Nut (Item 6) to the Joiner.

Slide the Center Joiner (Item 2) to the center of the Combined slat. DO NOT FULLY TIGHTEN

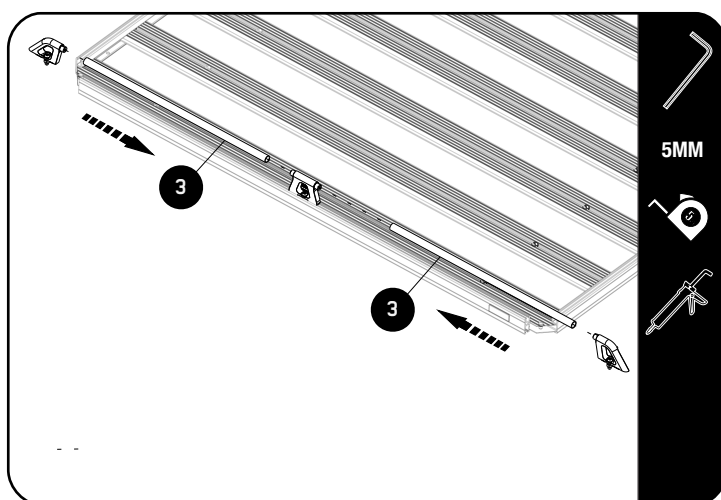3.3



Apply silicone on the inside of the Long Tube (Item 3 593.2mm). Fit the Long Tube to the Center Joiner.

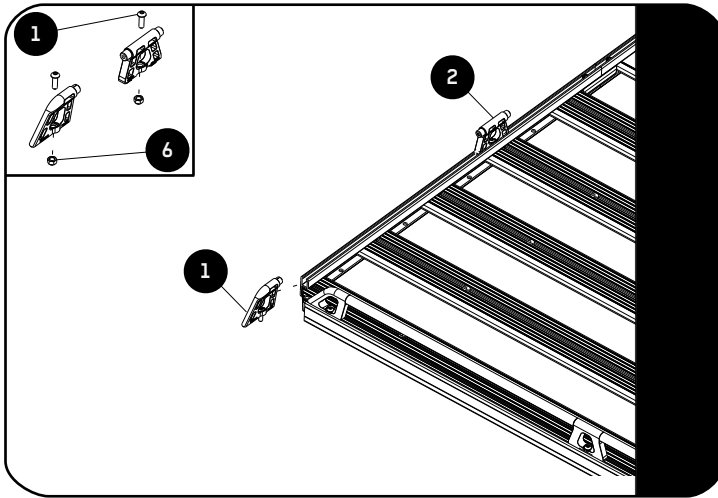
Slide the End Piece Joiners (Item 1) into the same Combined slat.

Push the Corner end Joiner towards the Center Joiner and Fully Tighten.

DO THIS BOTH ON THE FRONT AND BACK OF THE ROOF RACK.

3 ASSEMBLY


3.4



Loosely assemble the M8 x 25 Button Head Screw. (Item 5) and M8 Nyloc Nut (Item 6) to the Joiner.

Slide the Center Joiner (Item 2) down the Side Profile. **DO NOT FULLY TIGHTEN**

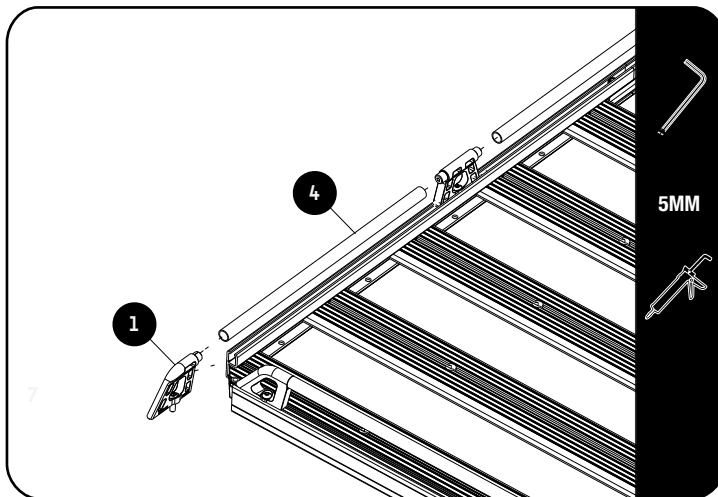3.5



Apply silicone on the inside of the Short Tube (Item 4). Fit the Short Tube to the Center Joiner.

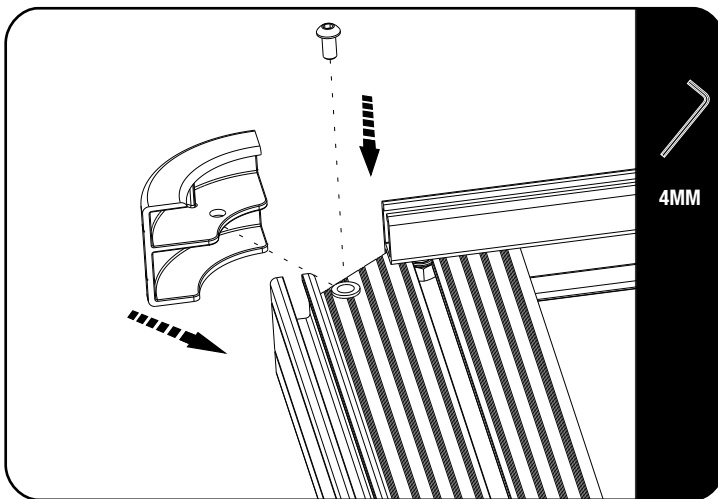
Slide the End Piece Joiners (Item 1) into the same Side Profile.

Push the Corner end Joiner towards the Center Joiner and Fully Tighten.

DO THIS BOTH ON THE FRONT AND BACK OF THE ROOF RACK.

FULLY TIGHTEN ALL BOLTS.

3.6



Refit the Roof Rack Corners that were removed in 3.1.

3

ASSEMBLY

3.7



4

COMPLETION

4.1

Congratulations! You did it. Take a step back and admire your work!



5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    