




FRONT RUNNER
VEHICLE OUTFITTERS

HINGE STEP JEEP WRANGLER JK

ENG

LAJW002

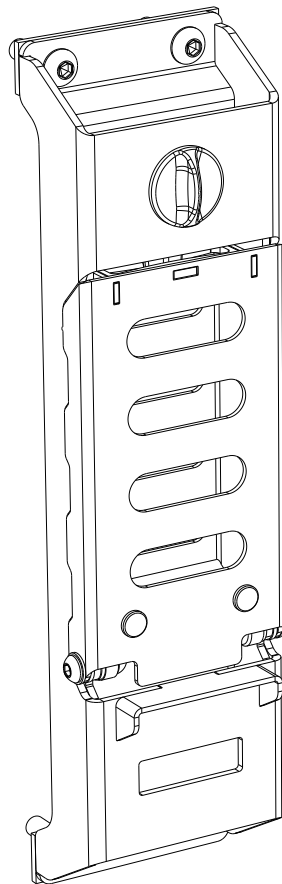

READ ME !

Thank you for purchasing a Front Runner Jeep Wrangler JK Hinge Step.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED**IN THE BOX**

1	1 X	Hinge Step
2	4 X	M8 x 30 Button Head
3	4 X	M8 x 16 x 1.6SS Flat Washer
4	1 X	Rubber Strip PE 3mm x 56mm x 80mm PSA

TOOLS NEEDED

5mm


T50




Loctite



Wooden Wedge

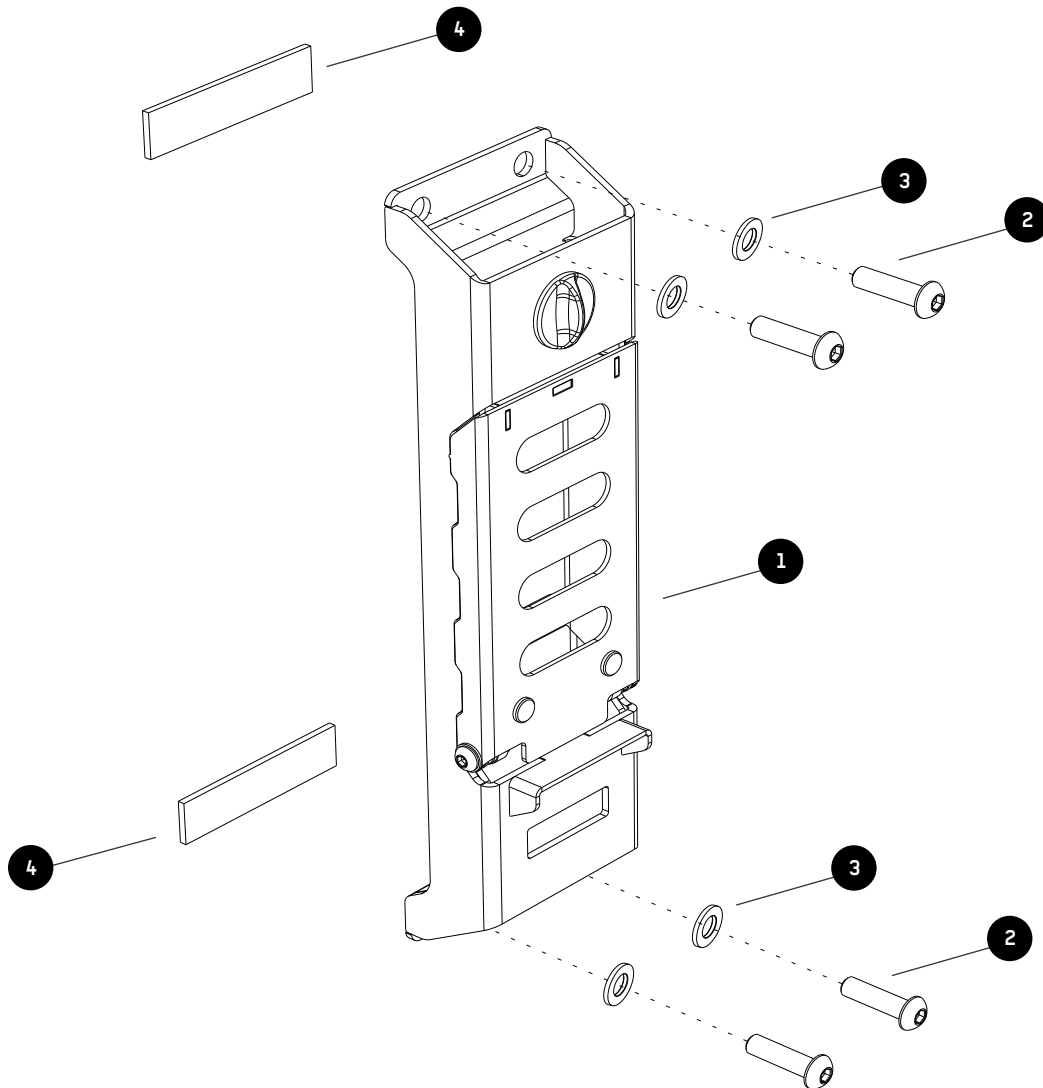
FIGURE 1.1

2.1

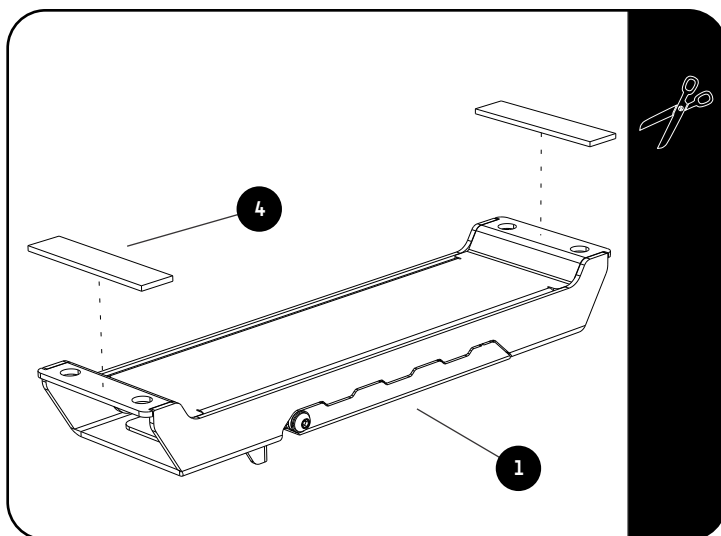

Using scissors, cut the Rubber Strip (Item 4) in half, remove the backing and apply the Rubber Strip on the two mounting sections of the Hinge Step (Item 1) as shown.

2.2

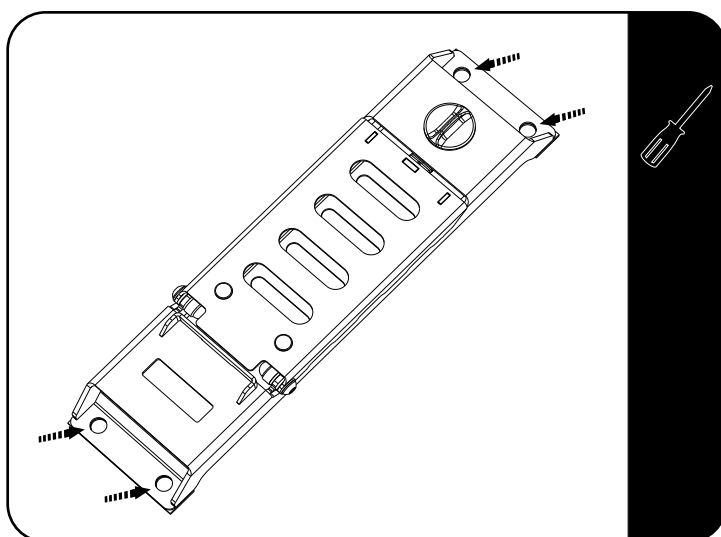

You will need to open the Rubber Strip the four holes shown, using a Phillips Screw Driver.


2.3



Before loosening the hinge bolts on the door, you will need to insert a Wooden Wedge to prop the door up and in place as shown.

⚠ Make sure the door is fully closed before inserting the wedges.


2.4

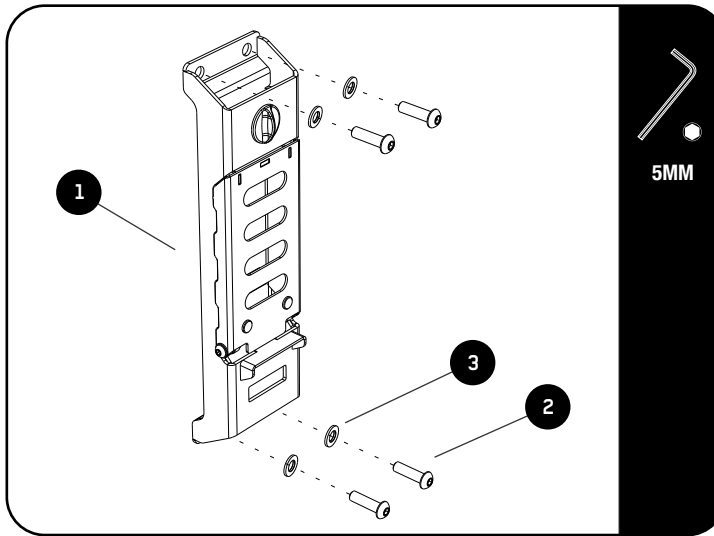

Apply Loctite to all four M8 x 30 Button Head threads (Item 2).


Now secure the Hinge Step to the door hinges using the M8 x 30 Button Heads and M8 x 16 x 1.6SS Flat Washers (Items 2 & 3) as shown.

2.5

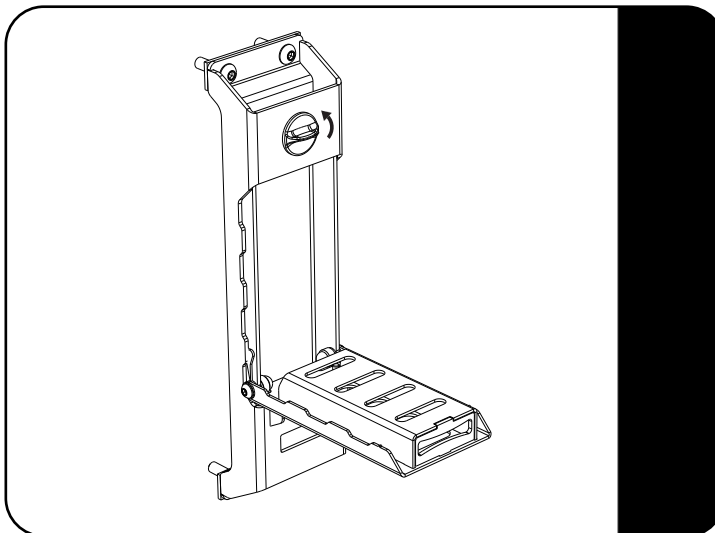

To use the Hinge Step, turn the Latch counterclockwise and lower the step.

2.6

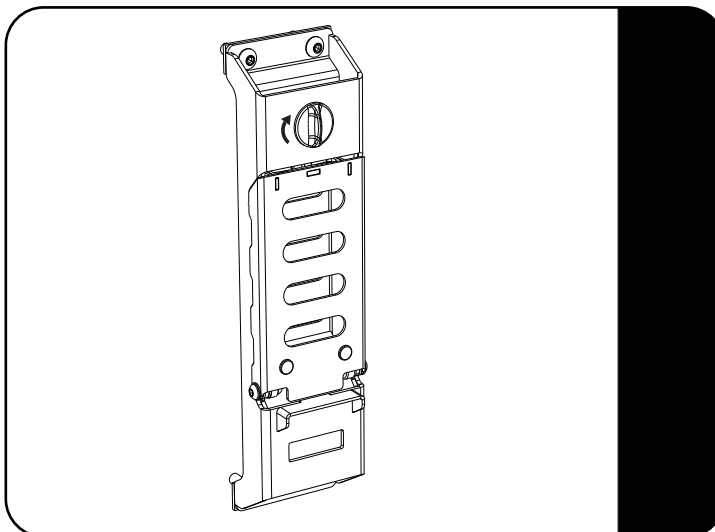

When you are finished using the Hinge Step, make sure to close and lock it in place.

3

COMPLETION

3.1



Congratulations! You did it. Take a step back and admire your work!

4

Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    