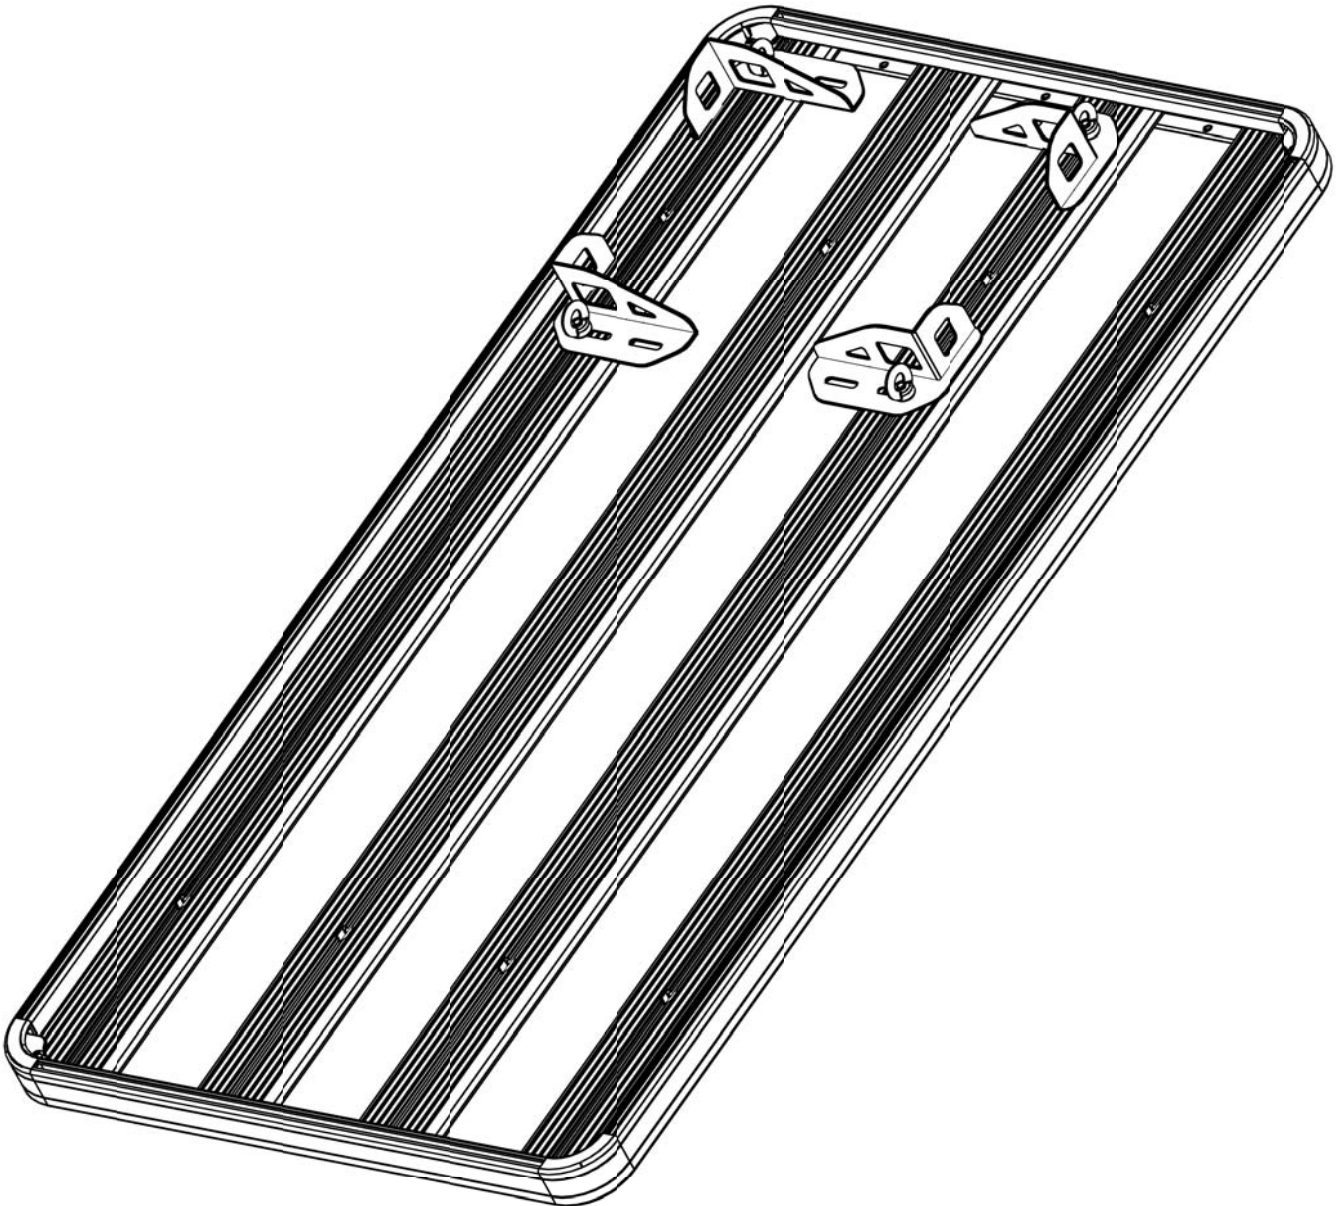


**INSTALL TIME: 15 mins**

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.


1 GET ORGANIZED...

Here is what you are looking at:

You will need:

- ☐ Front Runner Slimline I/Slimline II or similar Rack
- ☐ Ratchet Strap/Stratchet or Shock Strap

Item#	Quantity	Description
1	2	SLAT
2	4	UNIVERSAL SECURING MOUNT BRACKET
3	4	M8 x 20 HEX BOLT
4	4	M8 NYLON WASHER
5	4	M8 EYE NUT

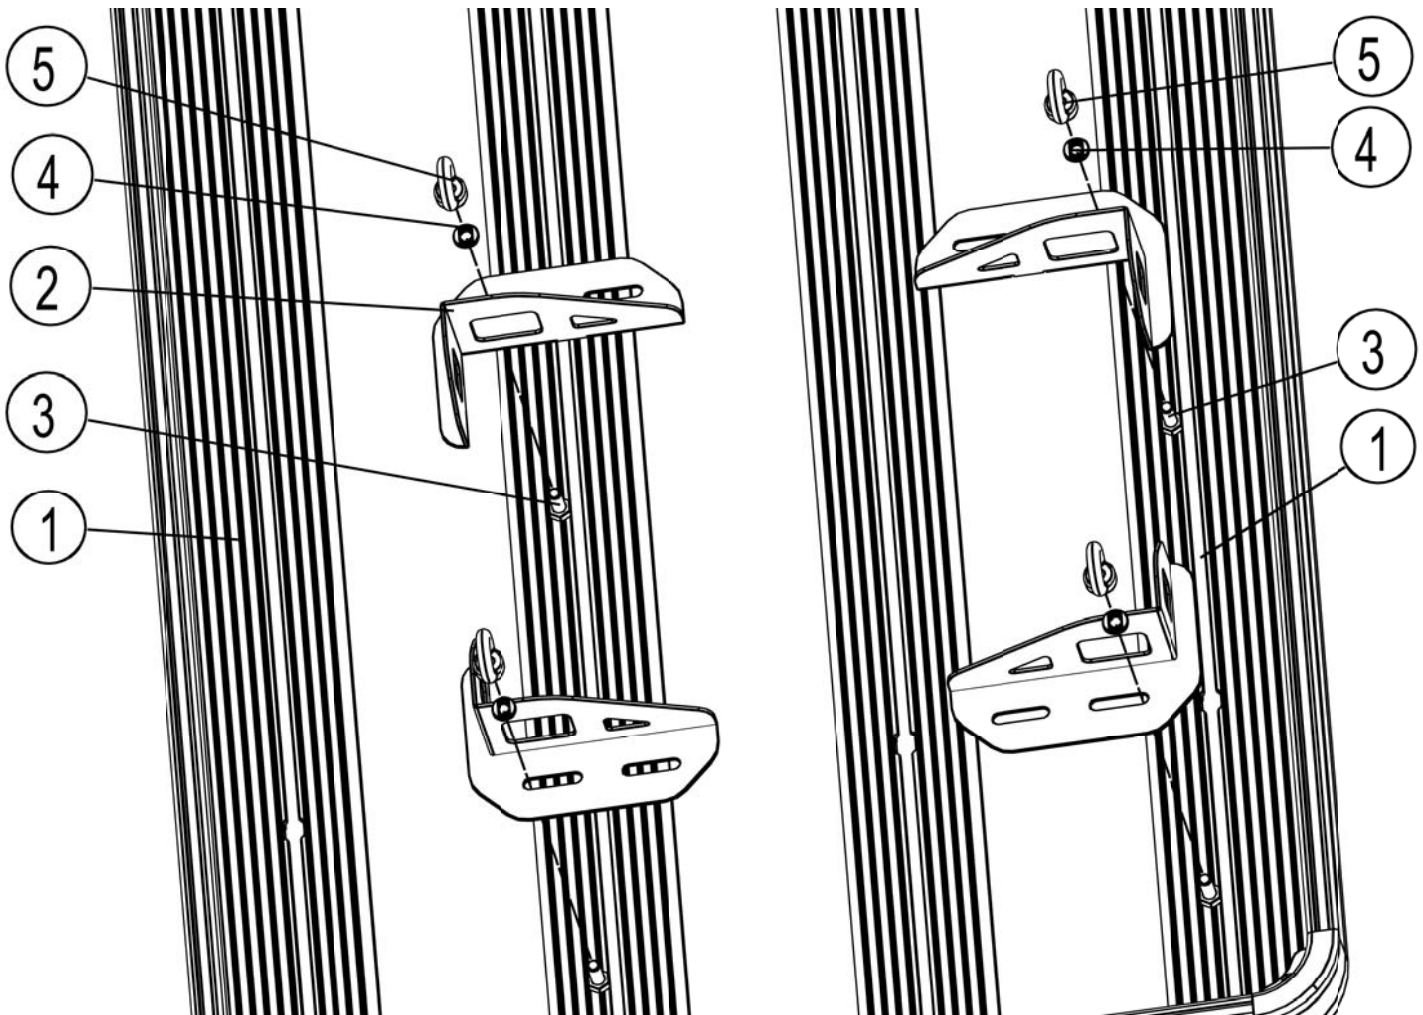

- (A) Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Grab a cup of coffee and take a moment. A little prep now may save you a lot of time later.


2 INSTALL UNIVERSAL SECURING MOUNTS

- (A) Looking at your Slimline I/Slimline II Rack or similar, decide on a suitable place to mount the Universal Securing Mounts.

Depending on the position required, slide two M8 x 20 Hex bolts into the cut out in the slat as indicated by the two arrows. Place one Universal Securing Mount Bracket over each M8 x 20 Hex bolt and move the bracket along the Slat to the position you require. Secure using a M8 Nylon washer and M8 Eye nut, to lock in position. Use a Ratchet strap or Strachet to secure item being stored.

NOTE: The position of the Universal Securing Mounts will all depend on what is needed to be stored, ie Jerry can, Ammo box etc.

Item#	Quantity	Description
1	2	SLAT
2	2	SLAT
3	4	UNIVERSAL SECURING MOUNT BRACKET
4	4	M8 x 20 HEX BOLT
5	4	M8 NYLON WASHER
6	4	M8 EYE NUT

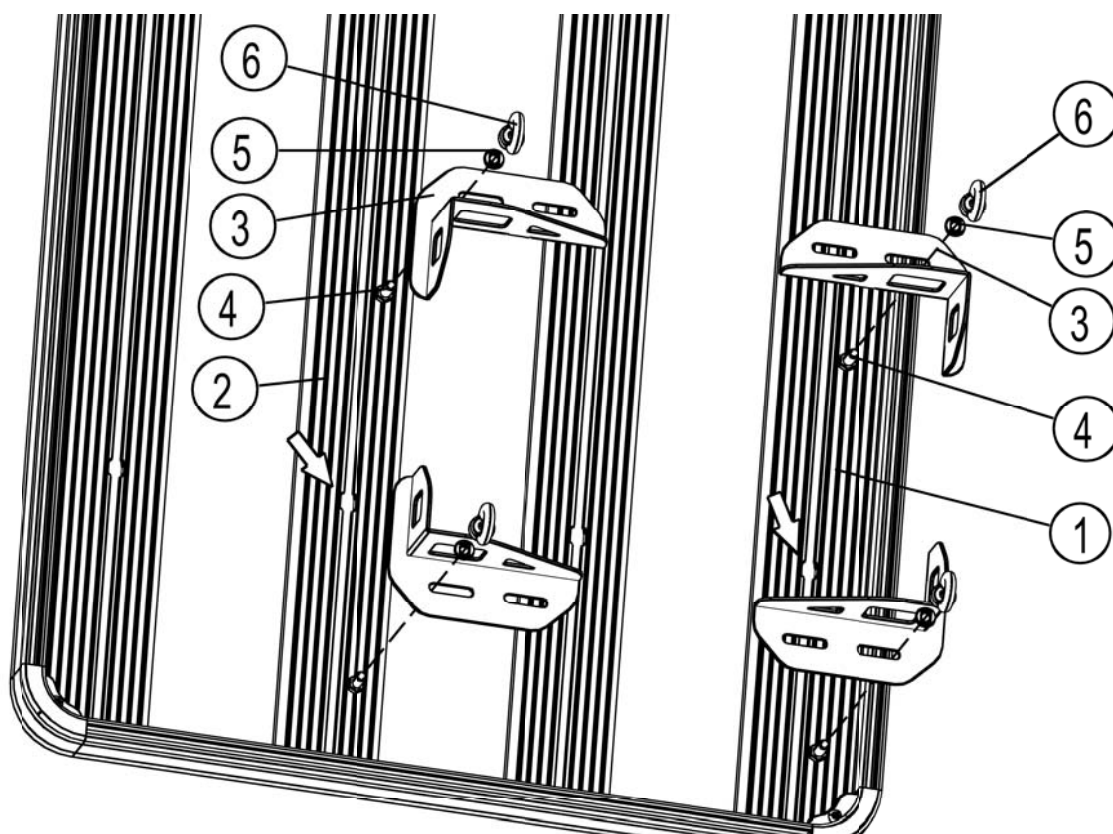

3 MORE VEHICLE ACCESSORIES

STRA002 Double Ratchet Strap, STRA023 Shock Strap and more.
Visit our website on: www.frontrunner.co.za