



FRONT RUNNER


BICYCLE CARRIER

ENG

RRAC027



INSTALL TIME: 15 mins

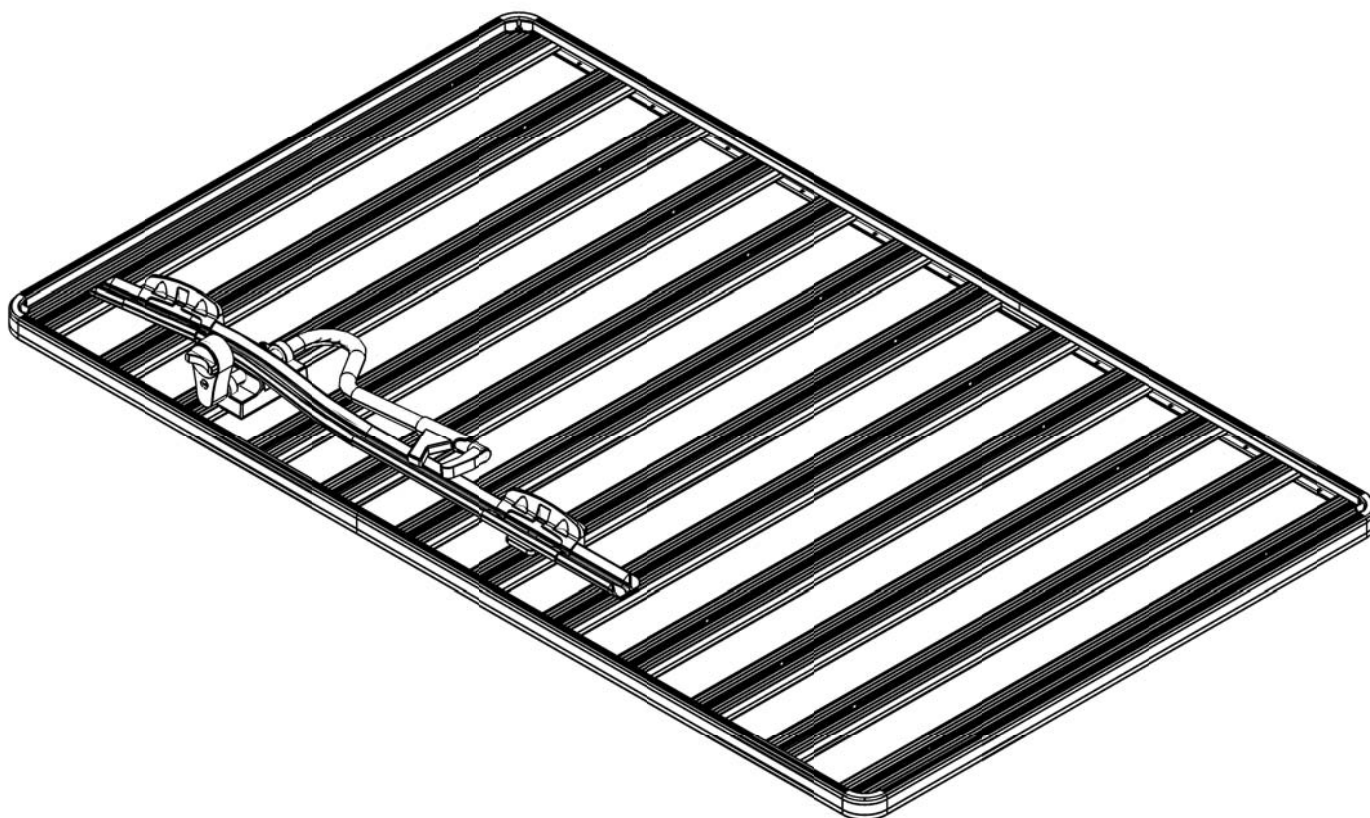

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.


1 GET ORGANIZED...

Here is what you are looking at:


Item #	Quantity	Description
1	3	M8 NUT CAP
2	3	M8 NYLOC NUT
3	3	M8x25x2 FLAT WASHER
4	1	M8x30 HEX BOLT
5	2	M8x50 HEX BOLT
6	2	STRAPS

You will need:

- ☐ a 13mm Wrench

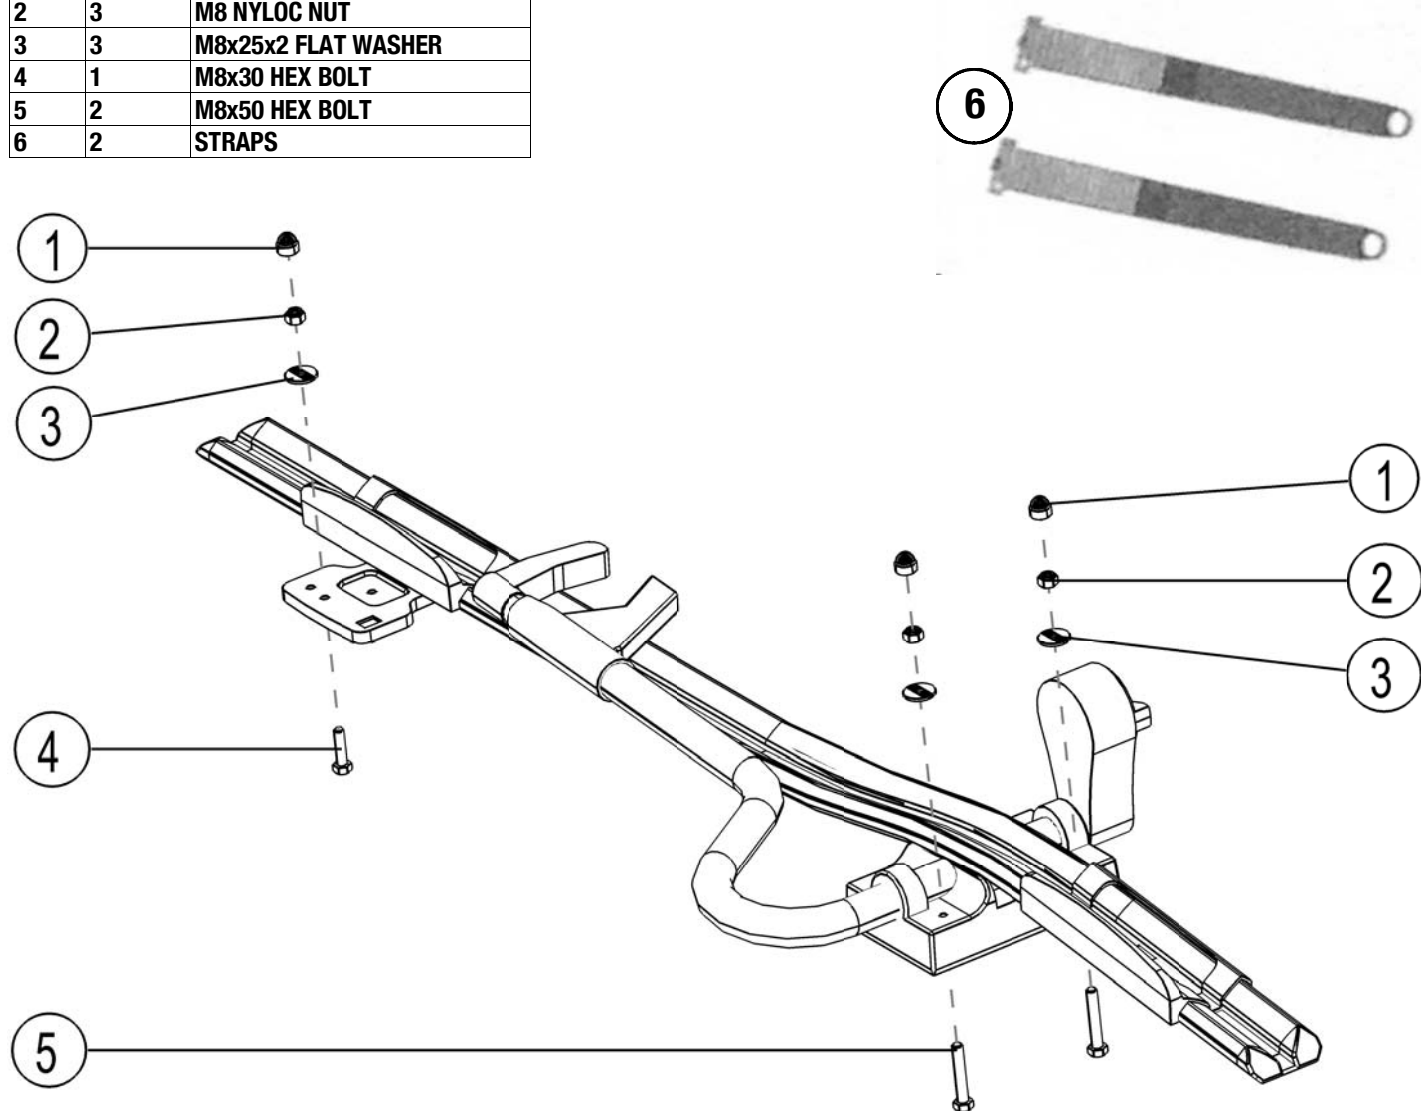


- (A) Fit the two Straps (Item 6) to the Bicycle Carrier by inserting it "Loop" end first through the clip.

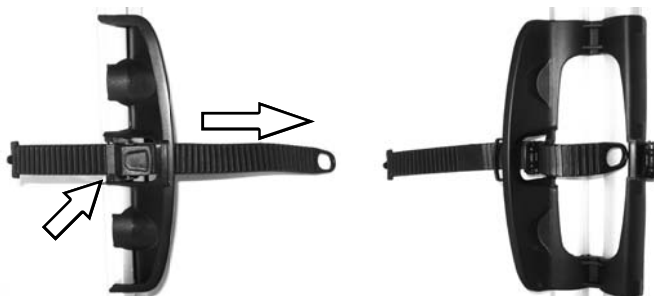


NOTE: Depending on your mounting option (Rack vs. load bar system), not all components supplied will be used. If you are mounting to a load bar system, please turn to Page 4.

2 MOUNT THE BICYCLE CARRIER TO RACK

- (A) Decide where on your rack you would like to mount your Bicycle Carrier. Insert the two M8x50 Hex Bolts supplied into the slat through the machined slot, sliding the bolts to the chosen position for Foot A as indicated. The position of Foot A may be adjusted along the length of the carrier extrusion by loosening the bolts on the underside of the foot with the Hex Key supplied.

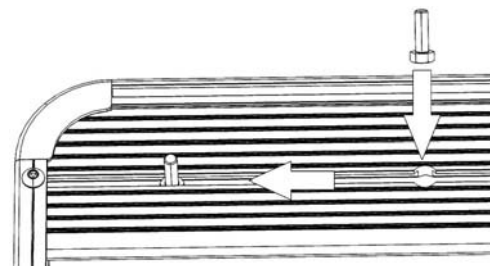

Insert the M8x30 Hex Bolt supplied into the corresponding slat for Foot B. Foot B may also require adjusting to line up with a slat.

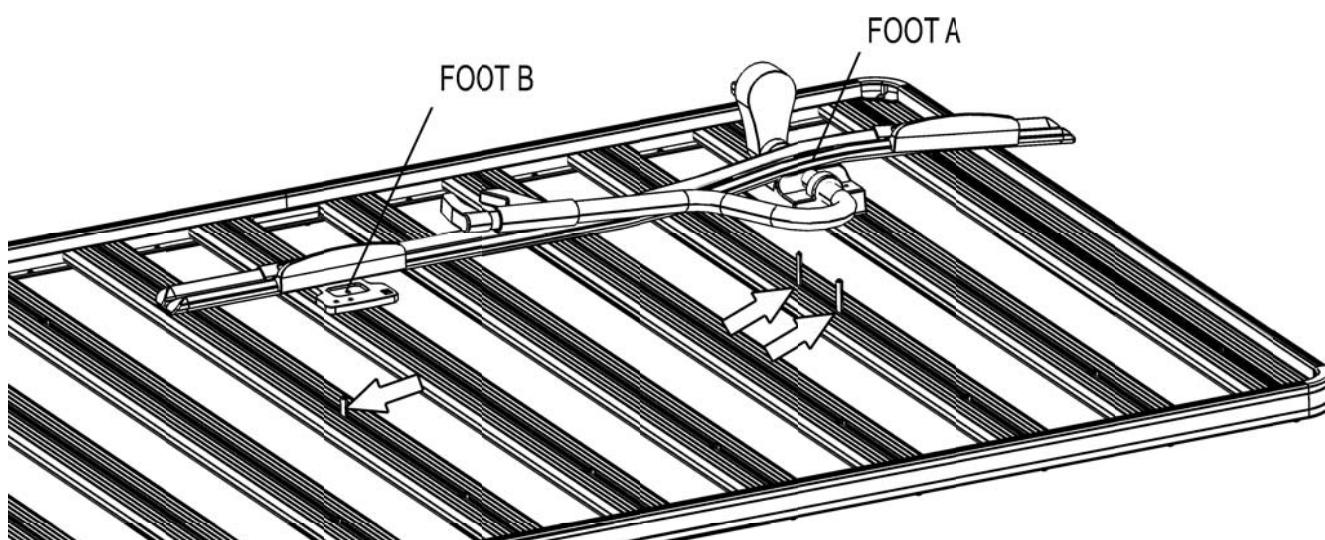


- (B) Position the Bicycle Carrier over the three bolts inserted in Step 2A. Hand tighten the carrier to the rack using the Flat Washers and Nyloc Nuts supplied. Make final adjustments to the position of the carrier if required and fasten all three Nyloc Nuts. Place the Plastic Nut Caps Supplied over the Nyloc Nuts.

Mount your Bicycle to the Carrier as shown below.




3 MOUNTING TO LOAD BAR SYSTEM

(A)

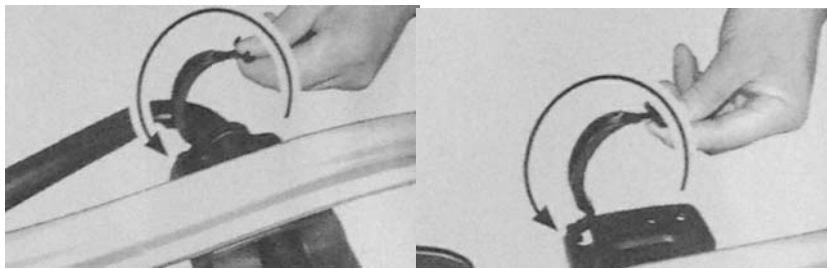

(B)

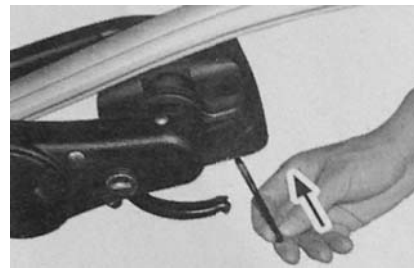


(C)



(D)



(E)

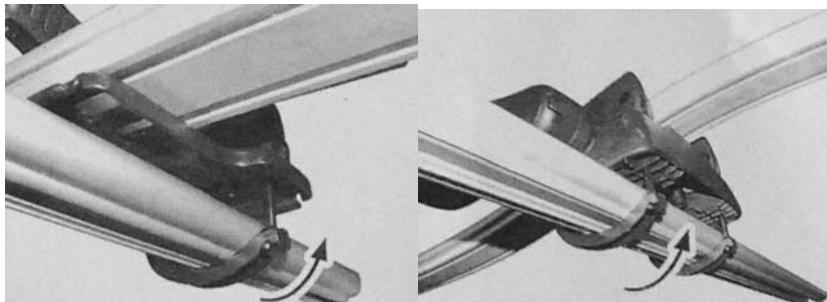

(F)



(G)



(H)

