



FRONT RUNNER


**UNIVERSAL
SECURING MOUNTS**

ENG

RRAC030



INSTALL TIME: 15 mins

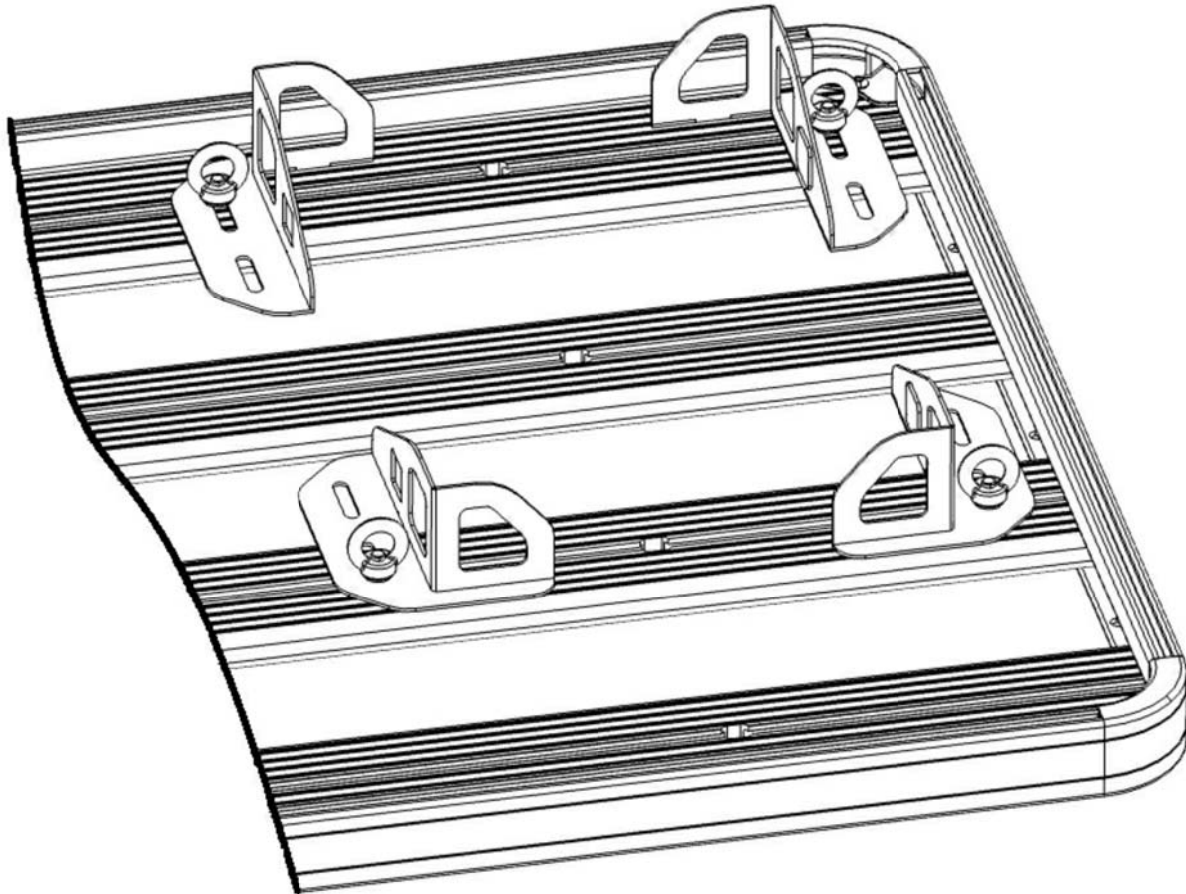

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.


1 INSTALL UNIVERSAL SECURING MOUNTS

Here is what you are looking at:

Item #	Quantity	Description
1	4	M8 EYE NUT
2	4	M8 NYLON WASHER
3	4	UNIVERSAL SECURING MOUNT
4	4	M8x20 HEX BOLT

You will need:

- ☐ Front Runner Slimline I or Slimline II Rack
- ☐ Ratchet Strap, Stratchet or Shock Strap

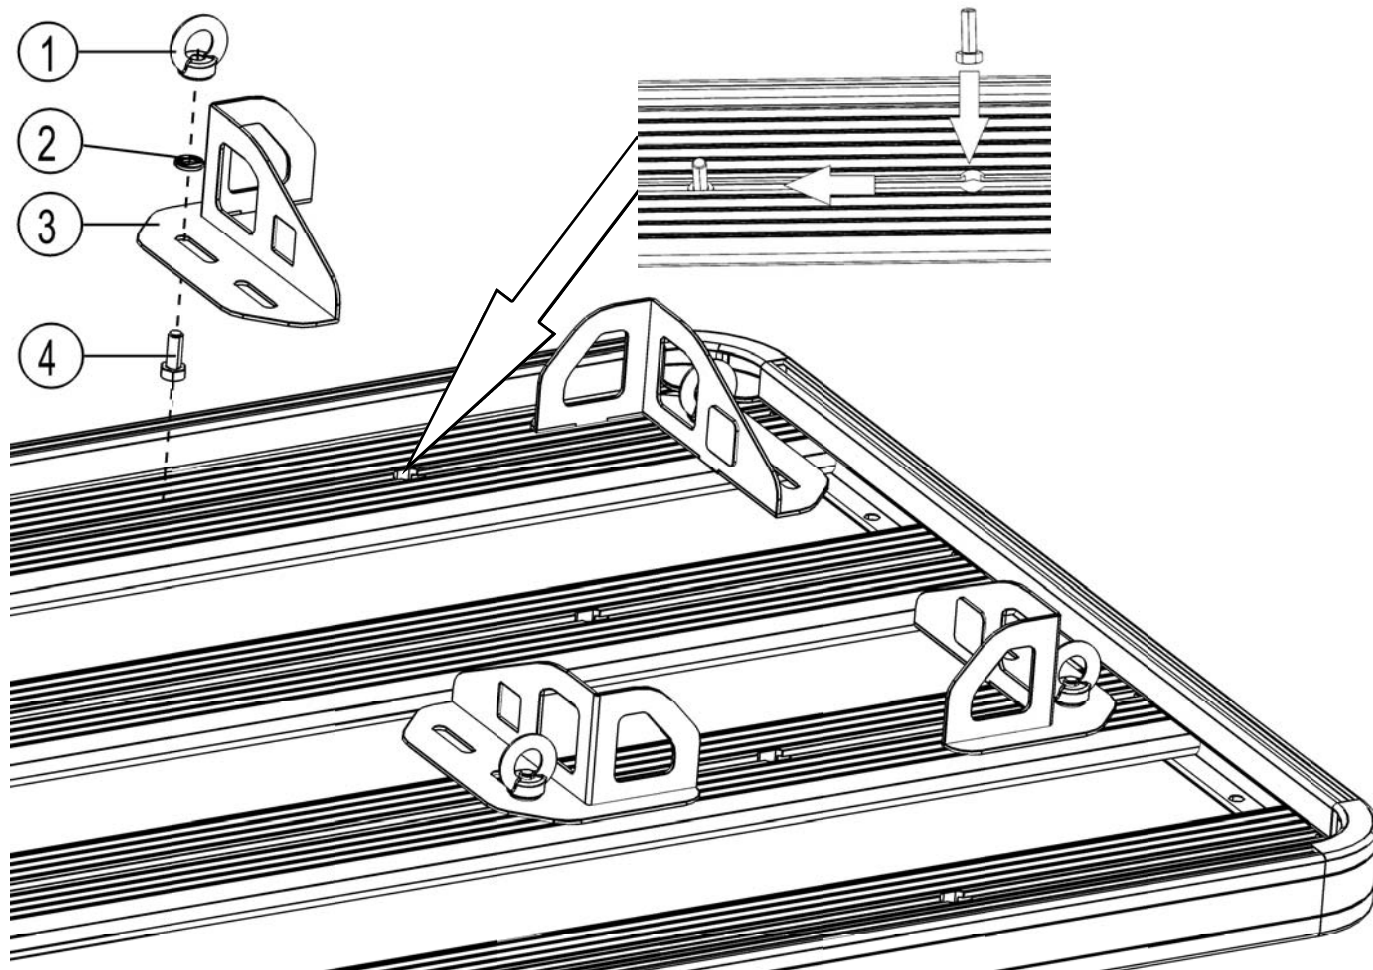

- (A) Decide where on your rack you would like to position the Securing Mounts. Slide the required number of M8x20 Hex Bolts into each corresponding slat using the machined slot as illustrated.

Place a Securing Mount over each Hex Bolt and fasten to the Rack using the M8 Eye Nuts and Nylon Washers to lock the Mounts into position. Use a Ratchet Strap or Stratchet to secure your load.

2 INSTALL OTHER VEHICLE AND RACK ACCESSORIES

- (A) Now's the time to visit your favorite Front Runner dealer in person or online.