



FRONT RUNNER


**PRO SKI, SNOW BOARD
& FISHING ROD HOLDER**

ENG

RRAC096



INSTALL TIME: 15 mins

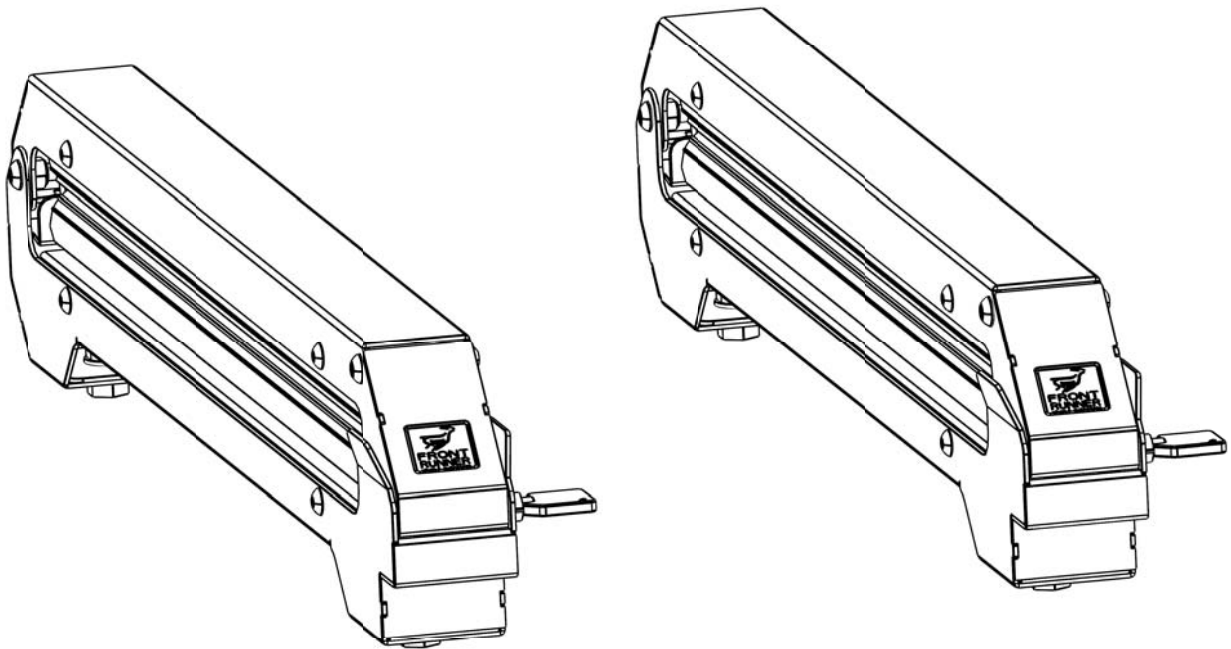

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1 GET ORGANIZED...


Here is what you are looking at:

Item #	Quantity	Description
1	4	M8 NYLOC NUT
2	4	M8 FLAT WASHER
3	2	CARRIER
4	4	M8 x 16 HEX BOLT
5	1	LOCK WRENCH*

You will need:

- ☐ 13 mm Socket Wrench
- ☐ 3 mm Hex Key


*To be used should you need to tighten or remove the lock.

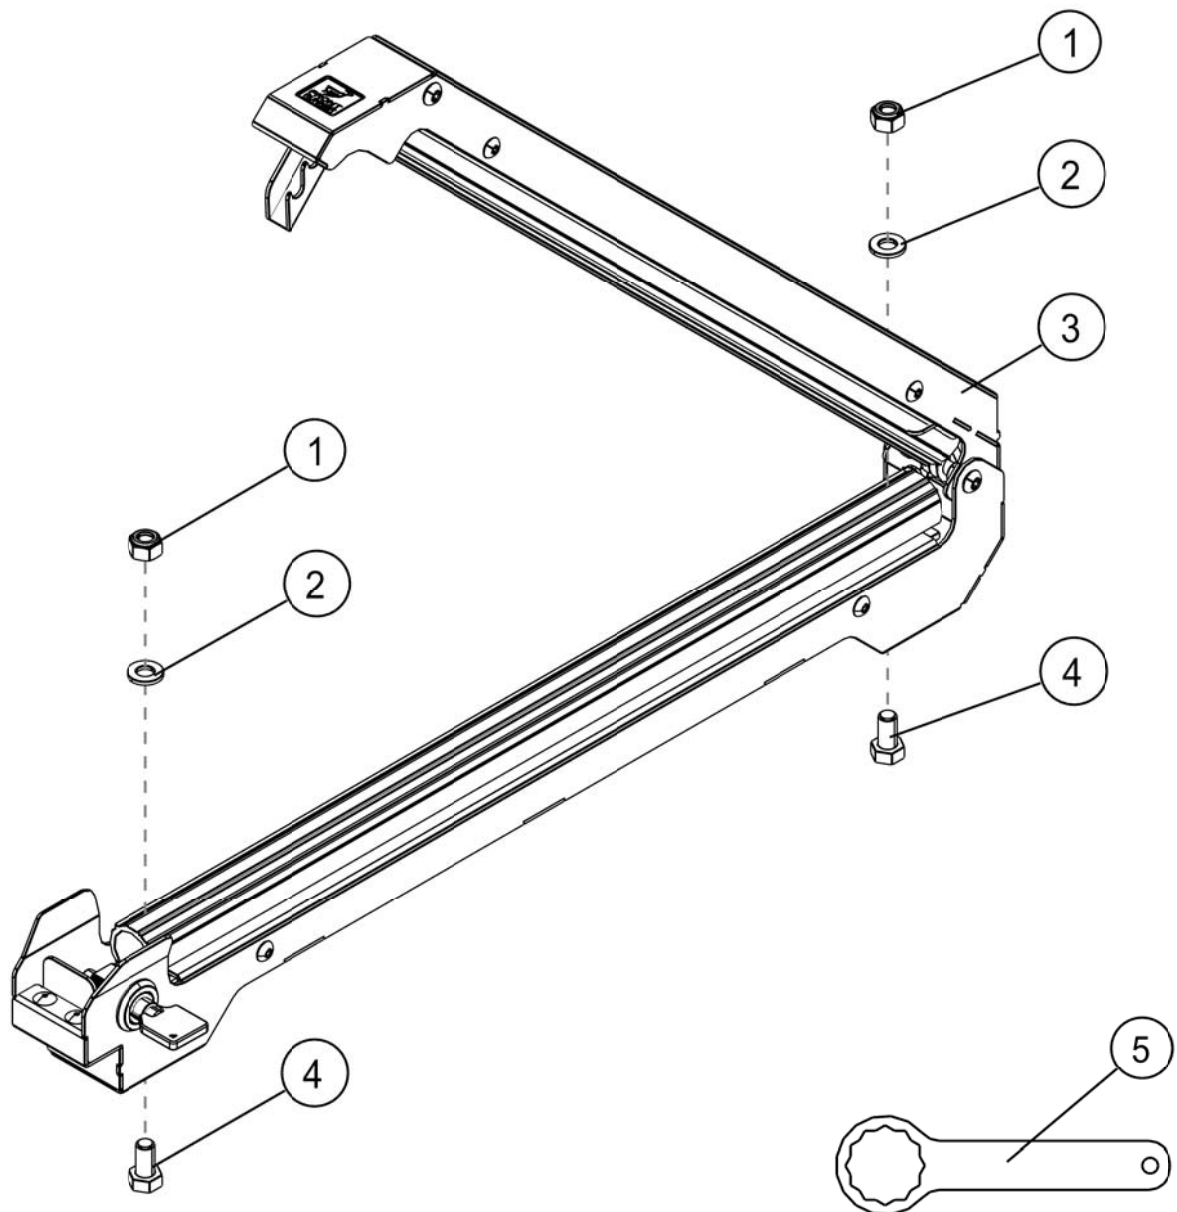


- (A) Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Take a moment as a little prep now may save you a lot of time later.

2 INSTALL CARRIERS

- (**A**) Unlock and open the Carrier (Item 3). Loosen and remove the four M5 Button Head Bolts in the Base of the Carrier as shown below.

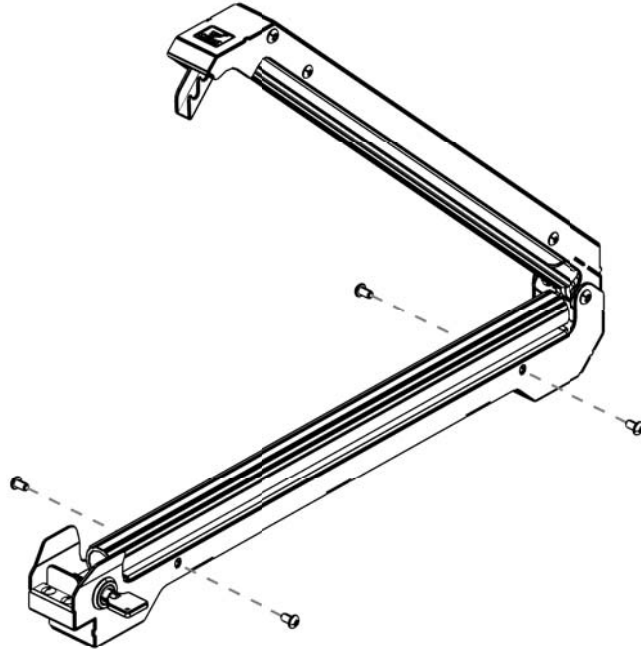


- (**B**) With the Carrier in the open position, carefully remove the Rubber Extrusion and Clamping Plates as shown. Take care to keep the Plates and Extrusion together as one unit when removing.

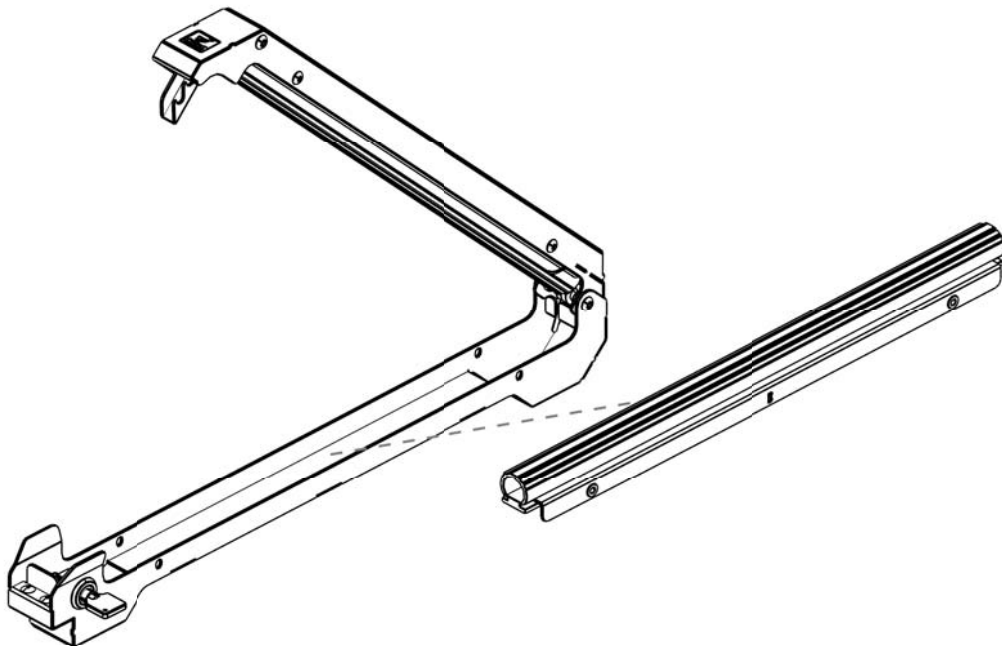


2 INSTALL CARRIERS

- (C) Decide where on your Rack, front to back, you would like to mount the Carriers. Work out the correct spacing for the length of your Ski's, Snow Board or Fishing Rod. Slide two M8 x 16 Hex Bolts (Item 4) into the T-slot of each of the two corresponding Slats through the machined slot as shown. Open the Carriers and place the Carriers onto the Rack, lining up the mounting holes found in the bottom of the Carrier with the Hex Bolts inserted earlier. Loosely fasten the Carriers to the Rack using the M8 Flat Washers and M8 Nyloc Nuts (Items 1 & 2) supplied. Slide the Carriers up against the outer edge of the rack as shown and fasten all the Nyloc Nuts.

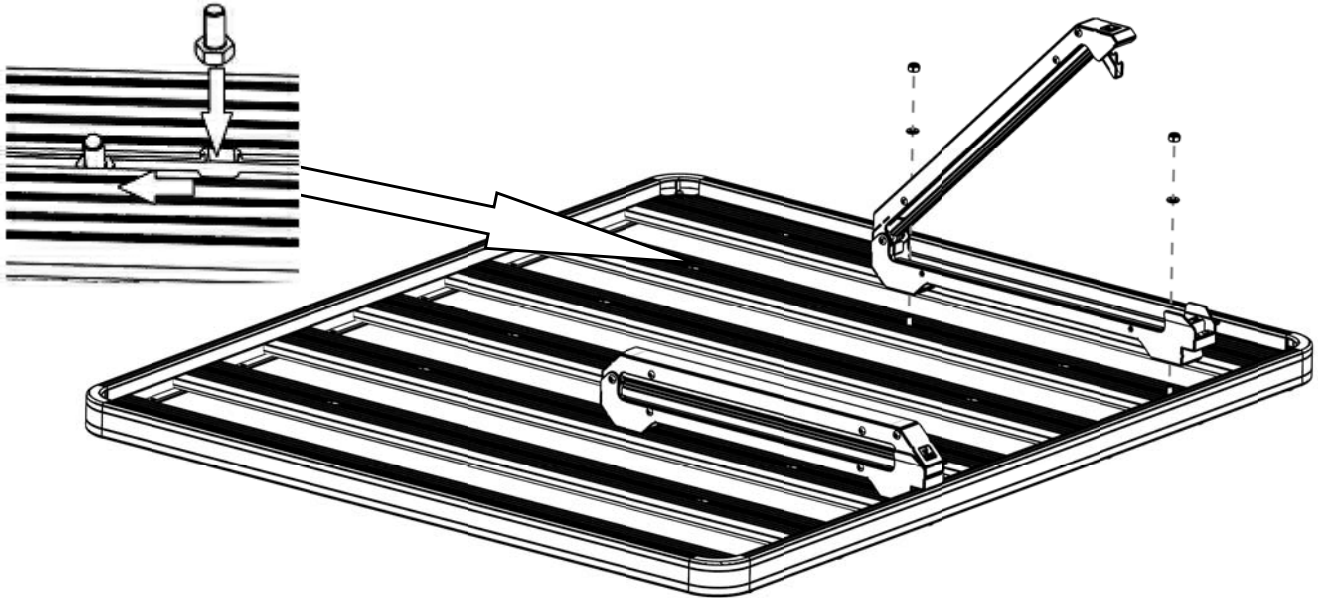

- (D) Reassemble the Rubber Extrusion and Clamping Plates from Step 2B.

- (E) The Lock must be pushed into the closed position when closing the Carrier in order for it to latch.

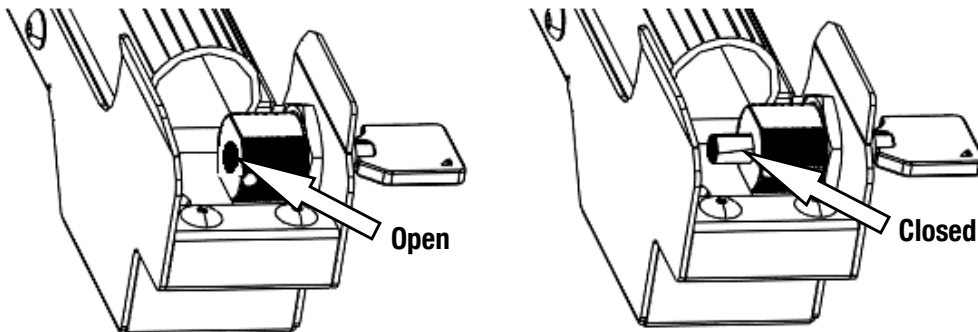

- (F) Congratulations, you have completed your installation. Take a step back and admire your work. Good Job!